



Soup and Sandwich Maker

KBKS036 **User Manual**



**PLEASE READ AND SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using electrical appliances, to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

Read all the instructions carefully, even if you feel you are quite familiar with the appliance.

- To protect against the risk of electric shock, DO NOT IMMERSE this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- This appliance is not a toy and should not be used by children. Children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended when in use.
- Switch it off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and remove it from the power outlet. Never pull the power cord.
- Do not misuse the power cord. Never carry the appliance by the power cord.
- The appliance should always be operated on a dry, level, heat-resistant surface. Do not operate the appliance on sinks, draining boards, uneven or inclined surfaces.
- Warning: This appliance gets very hot during use, do not touch the hot surfaces. Severe burns may result from misuse. Avoid contact with steam that may be emitted from the food while it is cooking.
- **Warning: Potential injury from misuse.**
- The heating element surface is subject to residual heat after use.
- CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use soft cloth and a mild detergent.
- Extreme caution must be used when moving an appliance containing hot food.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- Do not allow the power cord to hang over the edge of a table or counter or touch hot surfaces.
- Do not use it outdoors. Store indoors in a dry location.
- Do not use with double adapter, power board, and extension lead.

- Do not operate any appliance with a damaged power cord or plug. Do not operate if the appliance malfunctions or if it has been dropped or damaged in any way.
- When using this appliance, provide adequate ventilation above and on all sides for air circulation. Do not operate the appliance beneath curtains, or within the vicinity of any flammable materials.
- Do not operate this appliance on or near any hot surface (such as a gas or electric burner).
- Never use harsh, abrasive, caustic or oven cleaners to clean this appliance. Allow the appliance to cool before cleaning or storing.
- Do not reach for an appliance that has fallen into the water. Switch off the power outlet and unplug immediately.
- Do not use this appliance for anything other than its intended use. This appliance is intended for household use only; it is not for commercial use.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.



CAUTION: HOT SURFACES

The surfaces are liable to get hot during use, do not touch.

- For cleaning cooking surface, please refer to “CARE AND CLEANING” section.

Please Note:

To avoid the possibility of plasticizers transferring to the surface of your countertop, table, or other furniture, we recommend using coasters or place mats that are not made of plastic underneath your appliance. Neglecting this precaution could result in darkening on the finish, potential blemishes, or the appearance of stains.

WARNING



If the power cord or this appliance is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.

This appliance has not been designed for any uses other than those specified in this booklet.

IMPORTANT! Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat- resistant mat is strongly recommended.

SAVE THESE INSTRUCTIONS

FEATURES OF YOUR SOUP AND SANDWICH MAKER

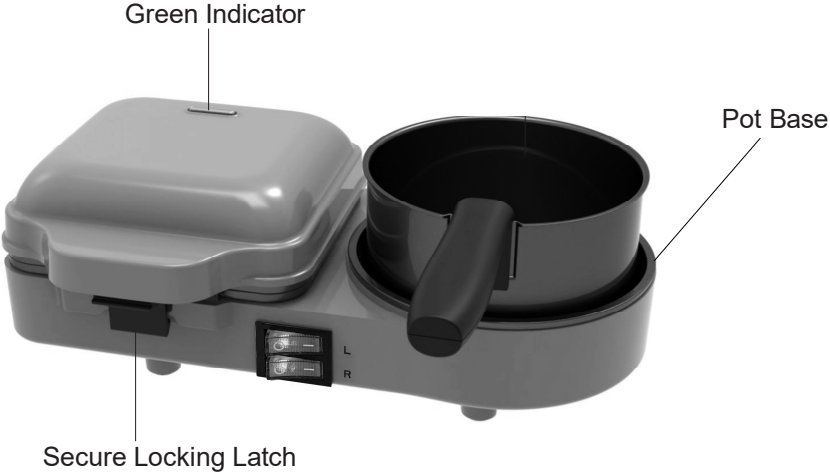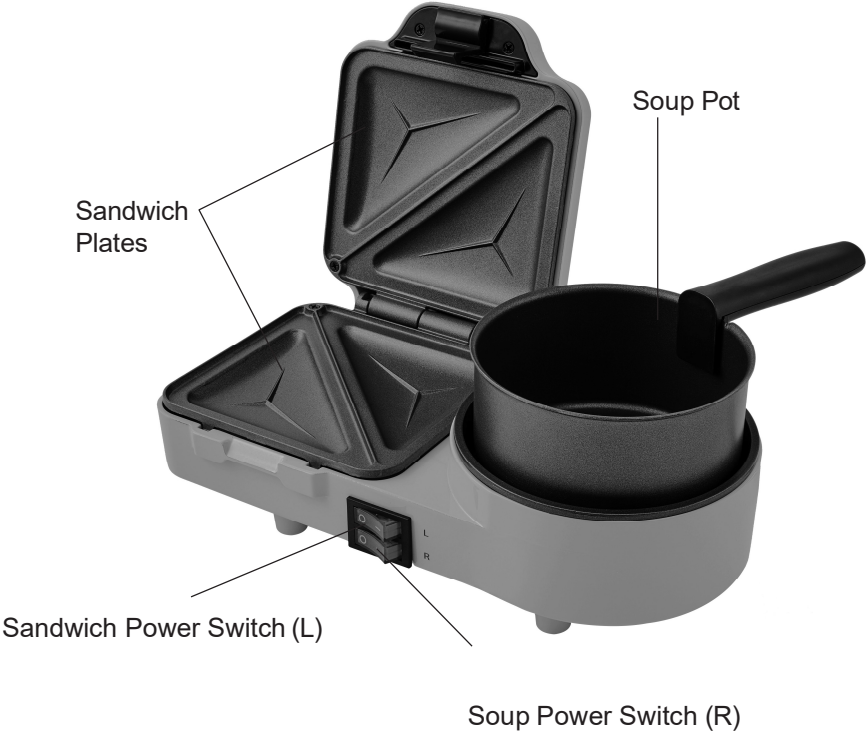

GETTING TO KNOW YOUR SOUP AND SANDWICH MAKER

Congratulations on the purchase of your new Soup and Sandwich Maker.

Before first using your new Soup and Sandwich Maker, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

BEFORE FIRST USE

Carefully unpack the Soup and Sandwich Maker and remove all packaging materials. Wipe the body of the Soup and Sandwich Maker with a soft damp cloth and clean the plates (refer to the Care and Cleaning section for more information).

NOTE: To prolong the life of the nonstick surface and to ensure optimum results, it is very important to “condition” the nonstick surface before the first use. Heat the Soup and Sandwich Maker, pour a thin coating of vegetable oil onto the sandwich plates, then turn off and unplug. While warm, rub the oil in the plates using a thick wad of paper towels. Use extreme care to avoid touching the surface directly.

HOW TO USE

WARNING:

1. **Cooking surface will be hot. Wear oven mitts while using to prevent burns.**
2. **DO NOT lift the sandwich plate cover so that your arm is over the cooking surface as it is hot and may cause injury. Lift from the side handle.**
3. **The pot and its contents will be hot. Be careful when moving.**
4. **Steam may release from appliance during cooking. For your safety, avoid contact with steam as it is very hot and can cause burns.**

Start Cooking

1. Place the appliance on a dry, level surface near an electrical outlet.
2. Plug the power cord into the electrical outlet and switch the power on at the outlet.

NOTE: When using your Soup and Sandwich Maker for the first time, a small amount of light smoke may be emitted. This is due to the initial heating of the elements and is normal. Use extreme care to avoid touching the surface.

Sandwich Plates

1. Turn on the sandwich power switch with the top lid closed. The red power switch indicator light and the green top indicator light will turn on, indicating that the appliance is preheating. Once the plates reach the desired preheat temperature, the green indicator light will turn off, signaling that preheating is complete (the red light remains on), and the appliance is ready for use.

NOTE: The green top indicator light turning on or off reflects the heating element's working status to maintain the correct plate temperature.

2. Unlock the Locking Latch by pressing and hold the handle, lift the top lid to the open position.
3. Apply a thin, even layer of cooking oil to the surface of the plates.

CAUTION: Do not use cooking sprays. They can cause a build-up on the plates and may affect the non-stick performance of the product.

4. Wearing oven mitts, place the sandwich in the center of the bottom plate. Lower the top lid gently until it naturally rests on the sandwich; avoid applying excessive force to ensure proper operation of the appliance.

WARNING: The cooking plates become extremely hot during use. Avoid direct contact to prevent burns and always allow the appliance to cool completely.

5. Allow the sandwich to be baked for 3-5 minutes, check every 30 seconds to avoid burning.
6. After cooking, wearing oven mitts, use a plastic or wooden spatula to remove the food to prevent damage to the non-stick plates. Do not scratch the cooking surface. Do not use metal utensils.
7. To bake more sandwiches, close the top lid and wait until the green top indicator light turns off, then repeat from step 2.

Soup Pot

WARNING: Be cautious of boiling water, hot oil, or hot soup in the pot during or after cooking. Improper handling may cause burns or scalds. Do not use other heat sources to heat the soup pot—it must only be used with this appliance.

1. Always hold the soup pot handle when cooking with it.

NOTE: Before use, if you notice the soup pot handle is loose, do not use it immediately. Simply tighten the two screws underneath the handle carefully.

2. Place the soup pot on the pot base and turn on the Soup Power Switch. Place food into the pot and cook according to your recipe.

NOTE: When adding water, do not exceed the MAX level marking located inside the pot. The MAX capacity is 250mL. Overfilling may cause overflow, while insufficient liquid may result in poor heating performance or damage to the appliance.

3. After cooking, wearing oven mitts, use a plastic or wooden spatula to remove the food to prevent damage to the non-stick surfaces. Do not scratch the cooking surface. Do not use metal utensils.

Pot Base Griddle

1. The pot base can also serve as a griddle for cooking eggs or small portions of food. Simply turn on the Soup Power Switch to start heating the pot base.
2. Apply a thin, even layer of cooking oil to the cooking surface.
3. Place food on the pot base and cook according to your recipe.
4. After cooking, wearing oven mitts, use a plastic or wooden spatula to remove the food to prevent damage to the non-stick surfaces. Do not scratch the cooking surface. Do not use metal utensils.

After Cooking

1. When finish cooking, switch off the appliance and unplug the appliance from the mains power supply.
2. Wait until the appliance cools down completely before cleaning and storing.

CARE AND CLEANING

Do not put the appliance in a dishwasher.

Before cleaning your appliance, turn the power off at the power outlet.

Remove the plug from the power outlet and allow the unit to cool completely.

When cleaning, never immerse the appliance in water or other liquids. Do not use abrasive creams, steel wool or scouring pads.

To clean the plates and pot, wipe them over with a damp cloth. As the plates and pot are coated with a nonstick coating, you can easily remove any excess oils or crumbs.

If there is hardened food on the plates, pour a little oil and let it sit for about 5-7 minutes.

You can then wipe it clean with a paper towel.

NOTE: Always ensure the nonstick plates are completely dry before storing away.

Hints for Care and Use of Non-stick Surface

- To avoid scratching the nonstick surface, do not stack any objects on your Soup and Sandwich Maker.
- Use only nylon, plastic or wooden utensils with care to avoid scratching the nonstick surface. Never cut food on the plates.
- To remove persistent stains, we recommend using a non- abrasive scouring pad along with mild dishwashing liquid. **DO NOT USE STEEL WOOL**, as it may cause damage to the surface.

SPECIFICATION OF PRODUCT

VOLTAGE: 220-240V~ 50Hz

POWER: 900W

RECIPES

Caprese Panini

Ingredients

2 slices of bread of your choice 1 slice
of mozzarella
1 slice of tomato basil
leaves

1. Preheat the appliance as directed.
2. Stack cheese, tomato, and basil leaves between slices of bread.
3. Once preheated, coat upper and lower sandwich plates with a small amount of oil.
4. Place the sandwich on the bottom plate and close the lid.
5. Wait 3-4 minutes or until the cheese is melted and the bread is golden and crispy.

Chocolate & Banana Panini

Ingredients

2 slices of bread of your choice
2 tablespoons of chocolate hazelnut spread
½ banana

1. Preheat the appliance as directed.
2. Layer chocolate hazelnut spread and sliced banana between two slices of bread.
3. Once preheated, coat upper and lower sandwich plates with a small amount of oil or non-stick cooking spray.
4. Place the sandwich on the bottom plate and close the lid.
5. Wait 3-4 minutes or until the sandwich is golden and crispy.

12 Month Warranty

Thank you for your purchase.

Your new product is guaranteed to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

