



Cordless Handheld High Power Vacuum

For Household Use Only



Model No.: EV-H077-W111

Rev 1

Note: The specifications and/or components of this appliance are subject to change without prior notice.

If any Accessories should fail during use, please call 1300 105 888 (Australia) or 09 8870 447 (New Zealand) for an immediate replacement. This will save you from returning the product to the store.

If we can assist you in any other way, please feel free to contact us.

| | | |
|-----------|--|-----------|
| 1 | Warnings..... | 4 |
| 2 | Safety Directions..... | 4 |
| 3 | Components | 9 |
| 4 | Assembly of Dust Canister to Main Vacuum Unit | 10 |
| 5 | Charging | 11 |
| 6 | Tools | 12 |
| | 6.1 Crevice, Brush and Upholstery Tools | 12 |
| | 6.2 Motorised Floor Head | 14 |
| 7 | Tool Holder | 15 |
| 8 | Using the Vacuum Cleaner..... | 15 |
| | 8.1 On / Off | 15 |
| | 8.2 Speed Control | 16 |
| | 8.2.1 Default “Normal” Mode | 16 |
| | 8.2.2 Turbo Mode | 16 |
| 9 | Emptying the Dust Canister | 16 |
| 10 | User Maintenance | 18 |
| | 10.1 Cleaning the Filters | 18 |
| | 10.2 Cleaning the Dust Canister | 19 |
| | 10.3 Cleaning the Vacuum Body and Tools | 21 |
| 11 | Storage..... | 21 |
| 12 | Troubleshooting..... | 22 |
| 14 | Warranty Against Defect | 23 |

1 Warnings

Before using this appliance, read and follow all warnings and instructions in this manual, even if you are familiar with this product.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance and/or the USB Cable.

Ensure children and babies do not play with plastic bags or packaging materials.

DO NOT LEAVE THE APPLIANCE SWITCHED ON OR CHARGING UNATTENDED.

2 Safety Directions



Please read this instruction manual carefully before first use. It is advisable to keep this instruction manual for future reference.

DO NOT vacuum water, wet objects, liquids, ashes, hot coals, cigarette butts, matches or any hot, smoking or burning objects, etc.

DO NOT pick up flammable or combustible materials (i.e., lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapour.

DO NOT pick up toxic material (i.e., chlorine bleach, ammonia, drain cleaner, etc.)

DO NOT vacuum Toner (for laser printers, copy machines etc.) as there is a risk of fire and explosion.

DO NOT vacuum plaster dust, cement dust etc. as the filter will block very quickly.

DO NOT use the vacuum without the filter fitted.

DO NOT store or use the appliance near high-temperature areas.

DO NOT use the vacuum cleaner if it is blocked. Turn off and clear all blockages before continuing.

DO NOT use the vacuum cleaner with a blocked filter. Clean the filter before continuing. (refer to User Maintenance section).

DO NOT use the vacuum cleaner if the appliance malfunctions, abnormal noise, smells, or smoke, is dropped or damaged in any manner or if any breakage is found during the operation.

For electrical safety, any repairs to the product must be performed by a qualified electrical person only, or the product must be disposed of.

DO NOT misuse the USB Charger Cable. Never pull the appliance by the USB cable or pull to disconnect it from the charger. Instead, grasp the USB Plug body and pull to disconnect.

DO NOT use the vacuum cleaner to pick up large objects, hard or sharp objects such as glass, nails, screws, coins, etc. that are likely to cause damage.

DO NOT use with damaged USB Charger Cable.

DO NOT use the Appliance if it has been dropped or any part of the Appliance and/or the USB cable has been damaged.

DO NOT handle your USB Charger (not supplied), the USB cable or the vacuum cleaner with wet hands.

DO NOT put any objects into openings.

DO NOT use with any openings blocked and do not restrict airflow.

DO Keep all openings free of dust, lint, hair, and anything that may reduce airflow.

DO NOT use without the filter in place.

DO NOT attempt to modify this product in any way.

DO NOT use on people or pets etc.

DO NOT disassemble the Appliance and/or USB cable. There are no user serviceable parts inside.

DO NOT immerse the Appliance and/or the USB cable in water or other liquids.

The Appliance and/or USB cable must not be used outdoors if raining, placed near a hot gas or electrical burner or placed in a heated oven.

DO NOT place or leave near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

DO NOT operate or charge the Appliance underneath or near flammable or combustible materials (e.g., curtains).

DO NOT cover the Appliance or charger when charging or when in use.

DO NOT misuse the USB cable. Never carry the Appliance by the USB cable or pull to disconnect it from the socket. Instead, grasp the plug and pull to disconnect.

DO NOT insert or allow foreign objects to enter the charging port as this may cause damage to the Appliance and/or injury to the user.

DO always switch off and unplug your charger (not supplied) when finished charging the Appliance, or during lightning storms or when unused for lengthy periods of time.

DO turn off and unplug before cleaning or storing.

DO Only Charge the Appliance with the USB cable that was supplied with the Appliance.

DO Only Charge the Appliance from an SELV: (safety extra-low voltage) Battery Charger (not supplied) with an output rating the same as indicated on the Appliance's rating label.

DO Position the USB cable properly so that it will not be walked on or pinched by items placed on or against it.

DO inspect the USB cable and Appliance for damage prior to every use. If the USB cable is damaged, call our customer service for a replacement.

DO empty the Dust Canister regularly for optimal operation of the vacuum.

Do Only use the Appliance and USB cable only for its intended use. The Appliance and USB cable are intended for household use only and not for commercial or industrial use.

DO keep hair, loose clothing, fingers, feet, and body parts away from openings or moving parts.

DO disconnect your USB Charger (not supplied) from the power supply when not in use.

DO use only on dry, indoor surfaces.

DO use only as described in this manual. Use only the manufacturer's recommended attachments.

DO Keep the USB Charger Cable away from heated surfaces.

DO use extra care when vacuuming on stairs.

DO keep your work area well-lit.

DO store your appliance indoors in a cool dry area.

Cleaning and user maintenance shall not be made by children without supervision.

If a third party uses this Appliance and USB cable, please supply the instruction manual with it.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the Appliance and/or USB cable.

This product has not been designed for any uses other than those specified in this manual.



WARNING

Only use the USB Cable that was supplied with this Appliance.

Battery Pack Specification:

Type: Li-ion, 11.1Vd.c., 2200mAh (Non-Removable or Replaceable).

The Appliance must only be supplied at Safety Extra Low Voltage “SELV”.

Input: Requires a 5Vd.c. / 2A Power Adaptor (not supplied).

Only charge the battery between an ambient room temperature of 10°C – 40°C.

Consumers are cautioned against trying to replace the battery. Using and/or purchasing counterfeit and/or inferior quality batteries have the potential to cause fire, personal injury, and/or damage to property. These batteries are typically found on online-auction websites or from other retailers and are known to pose a potential safety risk.

- Batteries may explode if disposed of in fire.
- The battery is not replaceable. Do Not open the Appliance.
- Do not use or store in temperatures above 40°C.
- Do not expose the appliance or battery to excessive temperatures.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects

This appliance contains batteries that are non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of.



Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.

Do Not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

IMPORTANT: Should you find any abnormal fluid or residue seeping out of the appliance body around or below the charging port, this could be an indication that the battery is leaking. This signifies a damaged battery which must be immediately disposed of.

As the Battery Pack is not removable, the whole unit will need to be handed in for the battery to be recycled.

Take care not to touch the leaking fluid or residue and if possible, place it into a large plastic bag and then place it outside in a dry area.

Contact your local council or regional authority for more information on collection and safe disposal.

WARNING: With any battery type, should a metal object come into contact with battery terminals either while charging or not charging, this will short out the battery and could cause the battery and surrounding items to catch fire.

Do Not Open the Appliance to access the Battery Pack. There are no serviceable parts inside.

Read and Save These Instructions

3 Components

 


| | | | |
|---|---------------------------|---|-----------------------------------|
| 1 | USB Charging Socket | 5 | Brush / Crevice / Upholstery Tool |
| 2 | On / Off and Speed Button | 6 | Dust Canister |
| 3 | Motorised Floor Head | 7 | Stand Base |
| 4 | USB-C Cable | 8 | Tool Holders |

Note: The specifications and/or components of this appliance are subject to change without prior notice

4 Assembly of Dust Canister to Main Vacuum Unit

Take the dust canister, ensuring the filters are fitted, and align the recess in the dust canister with the hook on the vacuum cleaner as shown below then swing the dust canister up to lock in place.

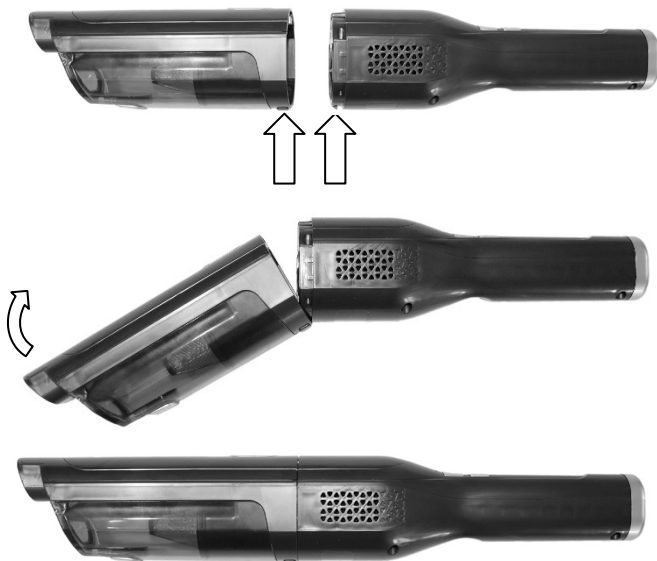

The assembled vacuum cleaner can now be placed in the Base Stand.



5 Charging

Read the Safety Instruction first.

IMPORTANT: This Appliance contains a built-in lithium-ion battery pack which must only be charged using the supplied USB cable.

The Appliance must only be supplied at Safety Extra Low Voltage “SELV”.

Only charge the battery between an ambient room temperature of 10°C – 40°C.

Always switch off and unplug the USB cable when charging is completed or when not in use.

NEVER LEAVE THE APPLIANCE UNATTENDED WHEN CHARGING.

If any abnormality occurs during charging, (such as a burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable, then contact our service department for assistance.

 
NOTE: The Appliance must be fully charged prior to first use.

Normal charging time will take up to 4 hours using a 5Vd.c. 2A charger.

The appliance cannot be used during charging. The USB cable must be removed from the appliance before turning on.

Take the USB Cable and fully unravel it before using to charge the Appliance.

Plug the small end of the USB cable directly into the Charging Port on the end of the vacuum cleaner handle.

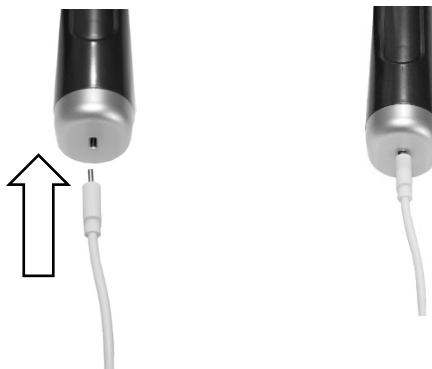

Plug the large end of the USB cable into your 5Vd.c. charger, then switch on the charger.

The indicator lights on the handle will illuminate from Right to Left, turn off and then repeat continuously until the battery is fully charged.



When fully charged, all three lights will remain on together for approximately 30 mins before the lights turn off or unless unplugged beforehand.

 
When all three lights are on at the same time, remove the USB charging cable and turn off & unplug the charger.

DO NOT leave the unit charging when the battery is full.


6 Tools

6.1 Crevice, Brush and Upholstery Tools

The Crevis tool is inside the brush tool outer attachment. If not already exposed, press the release button down on top of the brush tool and slide it backwards.

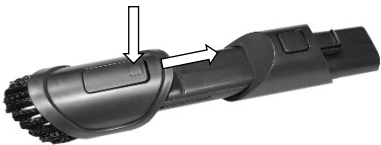

 To use the Brush tool, if not already in the forward position, press the release button down on top of the brush tool and slide it forward.

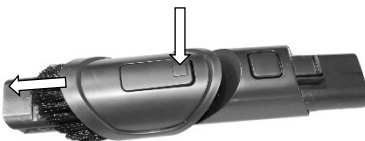


To use the Upholstery tool, the Brush tool needs to be removed and rotated 180°, then slid back on over the Crevis tool.

Press the release button down on top of the brush tool and slide it all the way forward and off the end.


Rotate the Brush tool 180° then while press down the release button, slide back on as shown until it locks in place.



 To use any of the tools, once you have selected the tool you wish to use, insert the back end into the front of the dust canister as shown.



 To remove the tool, grasp it firmly, press the release button down and at the same time pull it straight out.

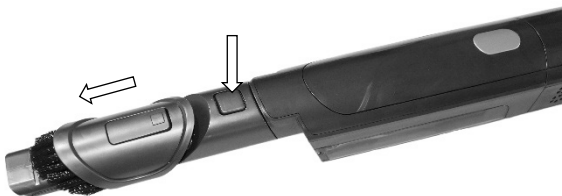


6.2 Motorised Floor Head


The motorised floor head is for help to pick up stubborn pet hair and the like.

Note: The use of the motorised floor head will consume the battery power quicker.

 To use the motorised floor head, insert the back end into the front of the dust canister as shown.

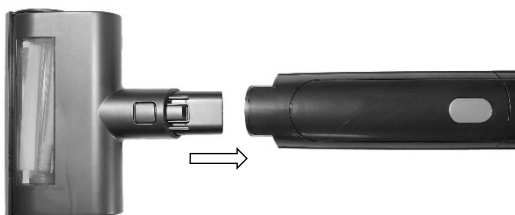

 To remove the motorised floor head, grasp it firmly, press the release button down and at the same time pull it straight out.

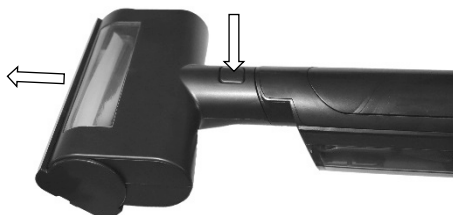

Note: If during use, the rotary brush should get jammed for more than 2 seconds, the rotary brush motor will stop, however, the vacuum motor will continue to run.

At the same time, the two outer indicator lights on the handle will blink indicating the jammed floor head.

 


If this happens, turn the vacuum cleaner off with the On/Off switch, clear away the cause of the jam and then turn the vacuum cleaner on again.

7 Tool Holder

The Tool Holder is located on the back of the Base Stand.

Place the rear end of the Brush/Crevis/Upholstery Tool and the Motorised Floor Head into the recesses at the rear of the Base Stand and push down as shown.

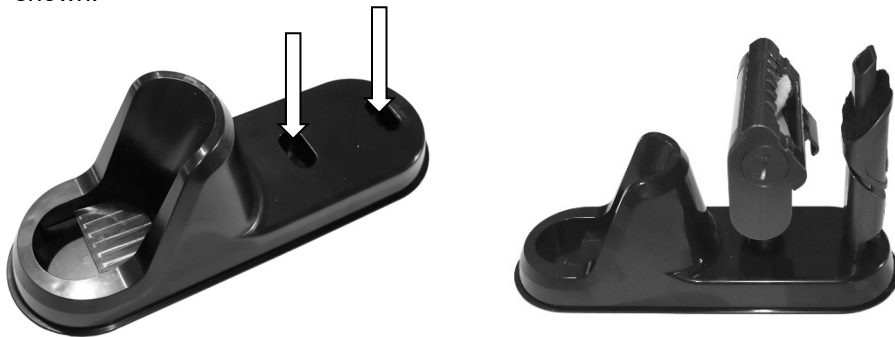

8 Using the Vacuum Cleaner

8.1 On / Off

To use the Vacuum Cleaner, assemble the unit as previously instructed and ensure the battery is fully charged.

To switch it on, grasp the handle then press and release the On / Off button on the handle.

The vacuum cleaner will start in the default Normal power mode.



Press and release the button on the handle again and the vacuum will turn Off.

Note: The vacuum cleaner cannot be started when charging.

8.2 Speed Control

8.2.1 Default “Normal” Mode

When the vacuum cleaner is first switched on for use, it will default to the “Normal” suction mode.

8.2.2 Turbo Mode

Whilst the vacuum cleaner is running, in the default “Normal” speed setting, press and release the Speed button on the handle and the vacuum cleaner will change to “Turbo” suction mode.

Press and release the button again the vacuum cleaner will change back to “Normal” suction mode.



Note: Using the “Turbo” Mode will use the battery power quicker than in the Default “Normal” Mode setting.

9 Emptying the Dust Canister

 
To empty the dust canister, you can either take the vacuum cleaner to the bin and open the Dust Canister Trap Door to empty it, or you can remove the Dust Canister from the vacuum cleaner first.

To open the Dust Canister Trap Door at the front of the dust canister, first take the vacuum cleaner to the bin, and then whilst holding the end over the bin, press the latch release button and swing the trap door down.

Tip the contents of the dust canister into the bin then swing closed the trap door ensuring it is firmly pushed into the dust canister and latched in place.



To remove the dust canister, whilst holding the vacuum cleaner body with one hand, press the release button and swing the dust canister down and lift off.

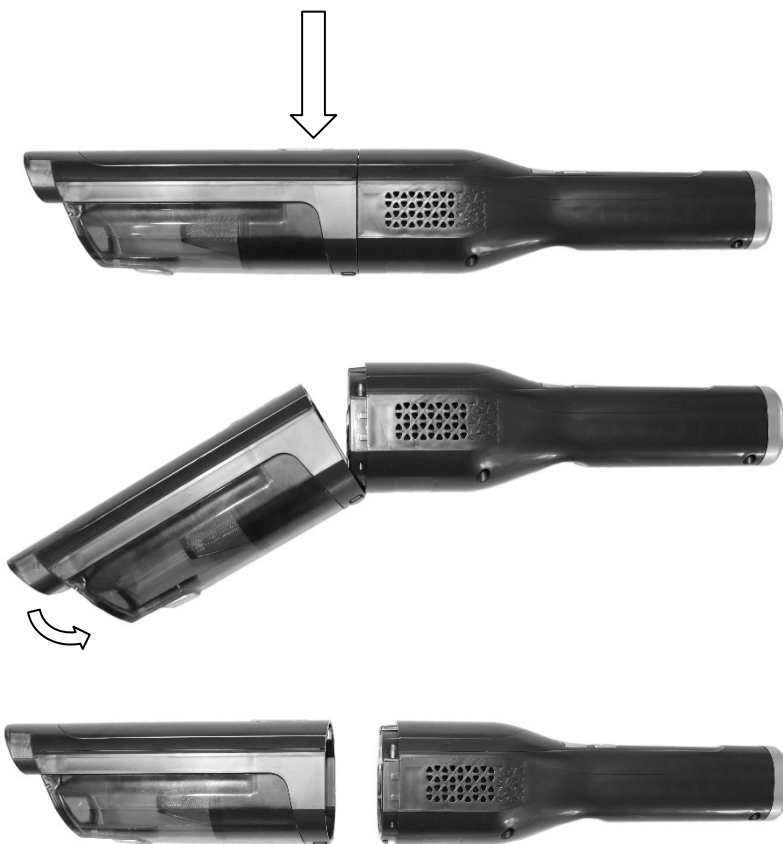

Take the dust canister to a dustbin and empty the contents.

Refit the dust canister ensuring the filters are fitted and then align the recess in the dust canister with the hook on the vacuum cleaner, as shown below then swing the dust canister up to lock in place.



10 User Maintenance

NOTE: To maximise the performance of your vacuum cleaner, you should clean the filters regularly.

If the filters are broken or worn, replace them before continuing to use the vacuum.

New filters can be purchased from our Customer Service.

10.1 Cleaning the Filters

Important Note – The Filters must be cleaned regularly for the best suction performance and to prevent overheating and damage to your vacuum cleaner.

Cleaning is best done at the same time when emptying the dust Canister after you have finished vacuuming for the day.

DO NOT clean the vacuum cleaner components using petrol or any other flammable liquid or solvents, etc.

DO NOT wash the white pleated filter.

Never use the vacuum cleaner with a wet or damp filters or without the filters fitted.

Using a wet or damp filter may damage and may cause severe damage to the vacuum cleaner and will void your warranty.

To access the filters, first remove the dust canister from the vacuum cleaner body as described in the section “Emptying the Dust Canister”.

Grasp the small White Pleated Filter and pull it straight out.



Next, grasp the inner filter housing and pull it straight out.



Only wash the metal filter in warm mild soapy water, rinse in clean fresh cold water and let completely dry.

DO NOT place it in a dishwasher.

DO NOT use a hair dryer to dry the filter.

DO NOT wash the white pleated filter. Just tap the edge of the filter on a firm surface to dislodge any dust and debris.

Replace the White Pleated Filter every 3 months or sooner if needed.

10.2 Cleaning the Dust Canister

IMPORTANT: DO NOT PLACE THE WHOLE DUST CANISTER IN LIQUID OR GET IT WET.

 
The dust canister needs to be disassembled for washing so that the electrical circuit and electrical contacts do not get wet.

Remove the Dust Canister and Filters as described previously.

With both filters removed from the dust canister, the transparent canister can be removed.



This is the only component that you can wash.

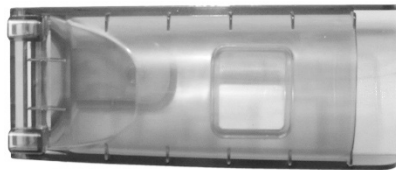


Wash the Dust Canister in warm mild soapy water, rinse in clean fresh cold water and let completely dry.

DO NOT scrub or place it in a dishwasher.

DO NOT use a hair dryer to dry the dust canister.

 When the Dust Canister and Filters are clean and dry, refit the Dust Canister Transparent part to its mating part by first aligning the front of the transparent part with the location tabs in the mating part as shown, then swing up.

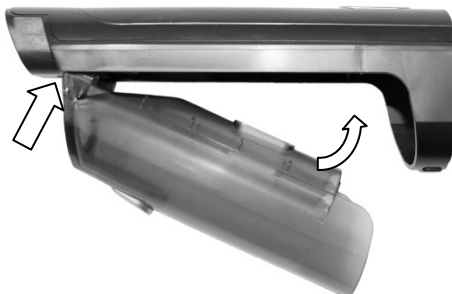

Whilst holding the two parts together, insert the metal filter.



Then refit the White Pleated Filter (or replace it with a new one)



Then refit the Dust Canister to the vacuum cleaner body as described previously.

10.3 Cleaning the Vacuum Body and Tools

Clean only the outside of the vacuum cleaner.

Use only a lightly moist cloth and mild detergent for cleaning the vacuum cleaner, stand, components, and accessories.

After cleaning, wipe off any excess moisture with a dry cloth.

DO NOT get water or any cleaning liquid in the USB charging socket.

DO NOT place accessories / components in a dishwasher.

DO NOT use a hair dryer to dry the vacuum cleaner, components, or accessories.

11 Storage

When finished using the vacuum cleaner, empty the dust canister and clean the filters.

Place the vacuum cleaner in its Base Stand and recharge the battery in a dry cool place.

Switch off and unplug the battery charger when not in use, or when fully charged.

12 Troubleshooting

| Problem | Cause | Remedy |
|---|--|--|
| Will Not Switch On | Battery is Flat | Fully Charge the Battery. |
| | The vacuum cleaner will not turn on when being charged | When the battery is fully charged, remove the USB charging plug from the vacuum cleaner. |
| The vacuum will not charge. | The battery is too hot to charge. | Allow the battery to cool down for 30 minutes and then try charging again. |
| | Faulty Charger or Cable | Use a different charger or cable |
| Noisy operation | Filters are blocked | Clean the Filters and empty the Dust Canister |
| | Air Passage is blocked | Check for partial blockages and unblock. |
| Suction Not Strong | Filters are blocked | Clean the Filters and empty the Dust Canister. Please call 1300 105 888 to order a new White Filter. |
| | Battery is running low | Fully Charge the Battery. |
| | Air Passage is blocked | Check for blockages and unblock. |
| | Vacuum speed set to "Normal" speed. | Press the Speed Button on the handle to select the Highest power mode. |
| | Filters have not been installed. | Ensure both filters have been installed and installed correctly. |
| | Dust Canister has not been attached correctly | Ensure the dust canister has been fitted correctly and locked in place. |
| Two outer indicator lights are flashing | Floor Head Rotary Brush is Jammed. | Turn the vacuum cleaner off with the On/Off switch, clear away the cause of the jam and then turn the vacuum cleaner on again. |
| Static Shock | In some rare instances, one or two users may feel an electric discharge when touching or using the vacuum cleaner during or after use. This is a well know phenomenon of Static Electricity discharge that happens mostly when the user vacuums a synthetic fibre carpet or other synthetic surfaces. It can also be more prevalent in dry and cool environments. Although the feeling of Static Electricity can be unpleasant for the user, it is not dangerous and is not a fault of the vacuum cleaner. If this static discharge is a problem for the user, the user could try wearing insulating footwear during vacuuming (i.e., rubber or leather soles) or increase the humidity / heat level in the surrounding environment or both. | |

14 Warranty Against Defect

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases | Contact for Target purchases |
|---|---|
| Kmart Australia Ltd. C/- Customer Service Centre, 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au | Target Australia Pty Ltd. C/- Customer Service Centre, 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us |

IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).

