

Assembly Instructions









43538171 LINEAR HALLWAY TABLE









CARE INSTRUCTION: Wipe clean with a soft dry or damp cloth. Keep away from water and direct sunlight. For indoor and domestic use. Check and tighten all parts regularly.

 
WARNINGS: Do not stand or sit on the unit. Do not lean on the product. Do not drag the product. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.

MAXIMUM TOTAL LOADING WEIGHT: 8KGS FOR TOP PANEL AND SHELF, 3KGS FOR EACH DRAWER, 22KGS IN TOTAL.















Hardware list

	a		36PCS
	b		36PCS
	c	6X30mm	23PCS
	d	4X35mm	8PCS
	e	4X30mm	8PCS
	f	3X12mm	16PCS
	g		2PCS
	h	4X18mm	4PCS



	i		2PCS
	j		2PCS
	k		2PCS
	l		2PCS
	m	4X12mm	2PCS
	n	4X30mm	2PCS
	o		2PCS
	p		2PCS

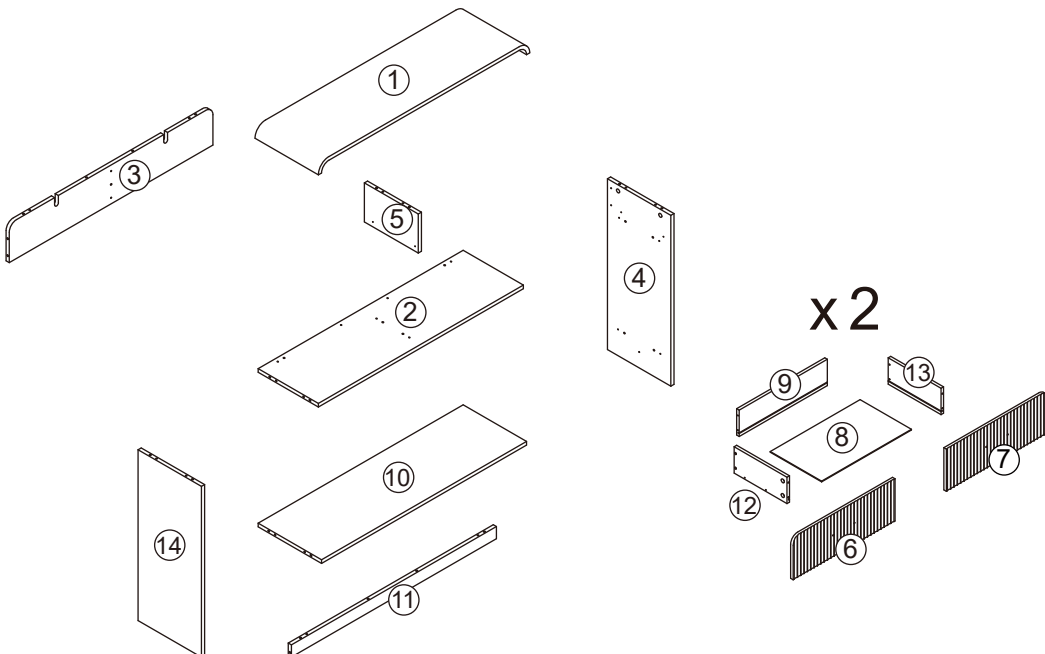

              
DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.

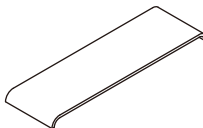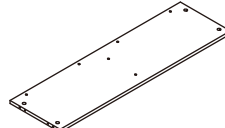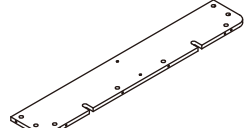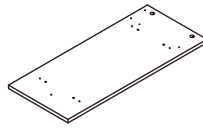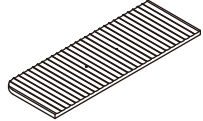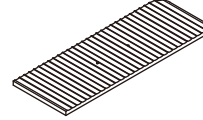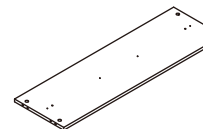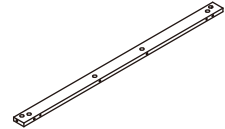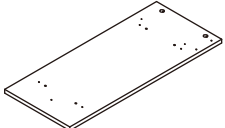		
① 1 PC	② 1 PC	③ 1 PC
		
④ 1 PC	⑤ 1 PC	⑥ 1 PC
		
⑦ 1 PC	⑧ 2 PCS	⑨ 2 PCS
		
⑩ 1 PC	⑪ 1 PC	⑫ 2 PCS
		
⑬ 2 PCS	⑭ 1 PC	

  
STEP 1

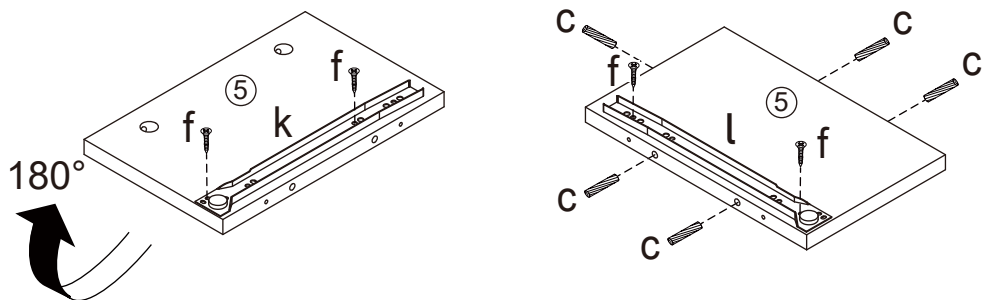

 
STEP 2

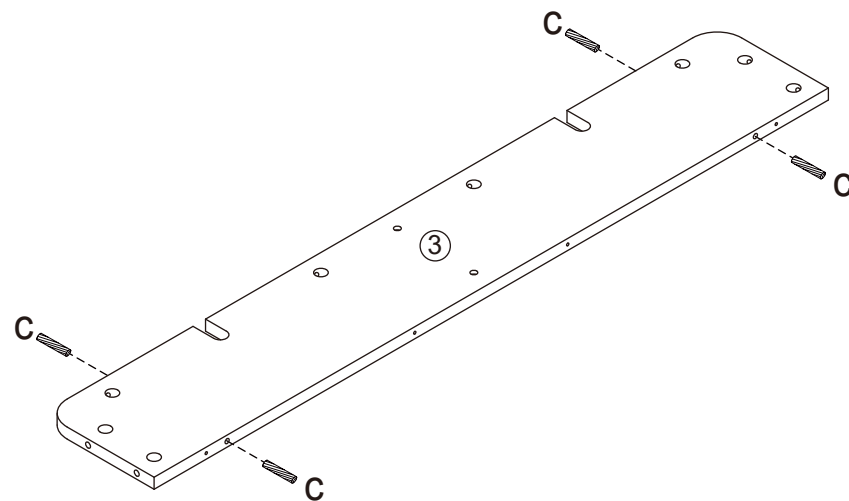

 STEP 3

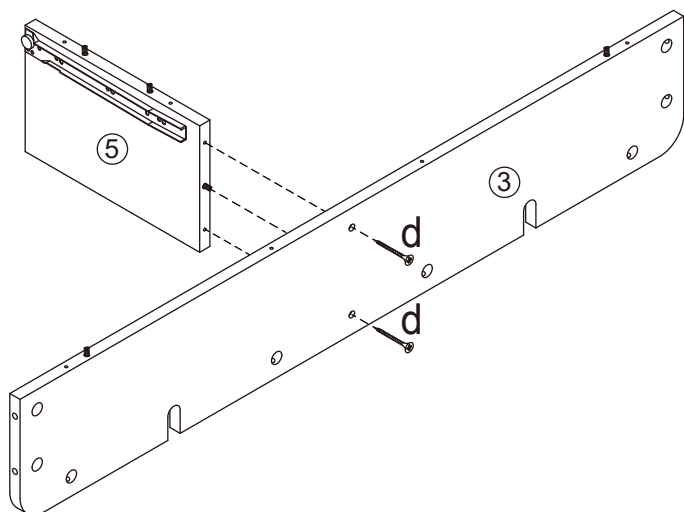


 STEP 4

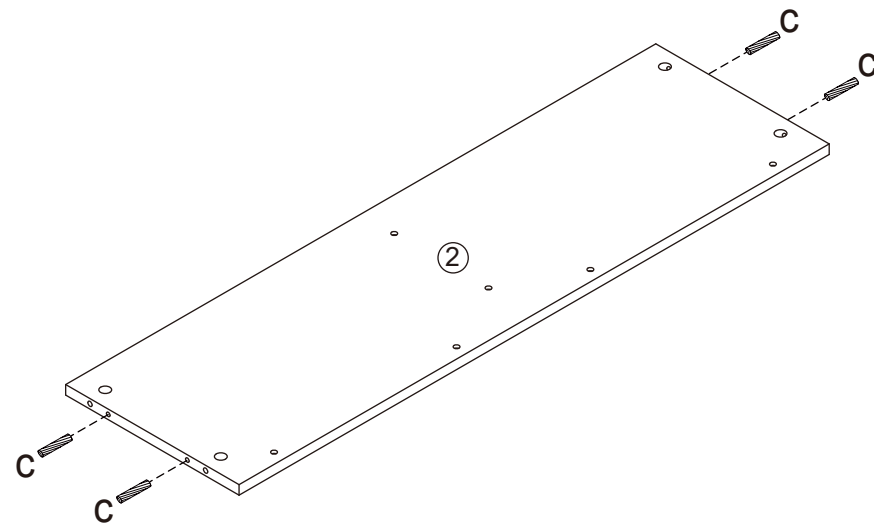



STEP 5

  X6

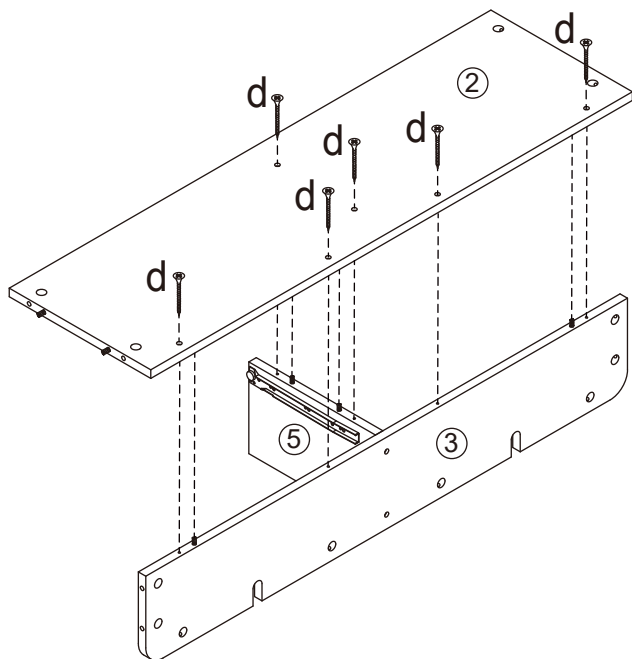


STEP 6

   X4  X4

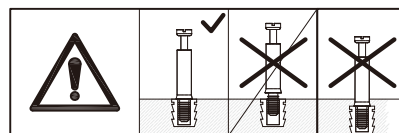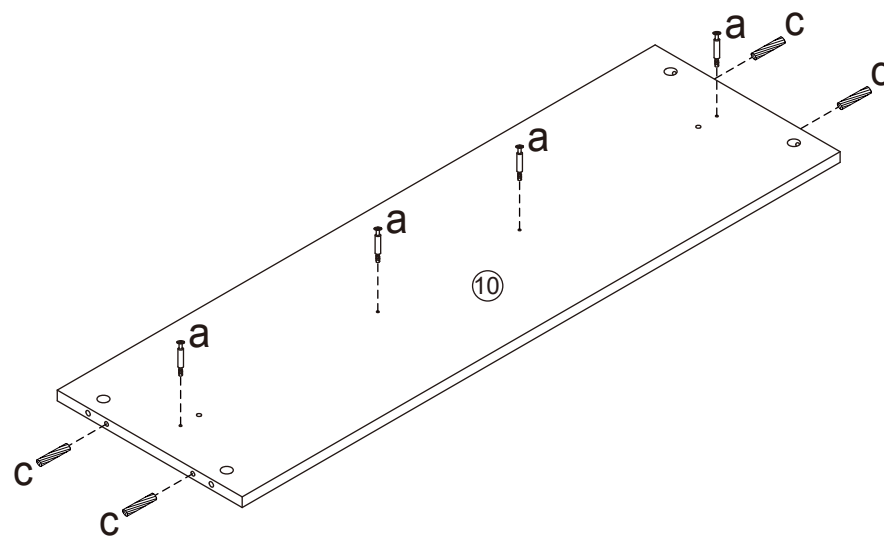


STEP 7

  X2



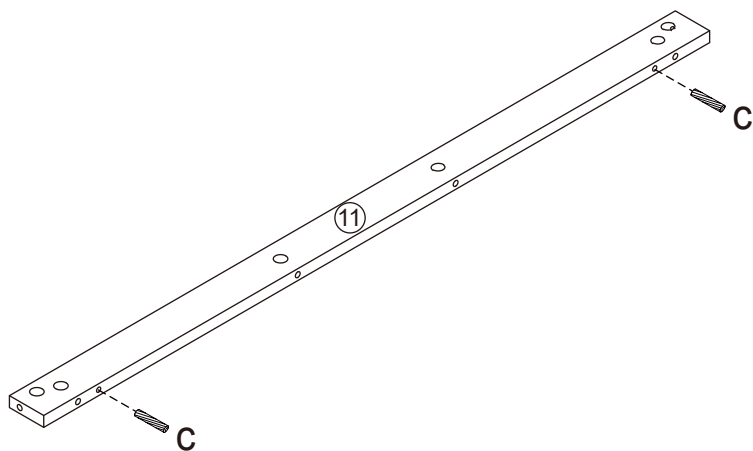


STEP 8

 
 X4

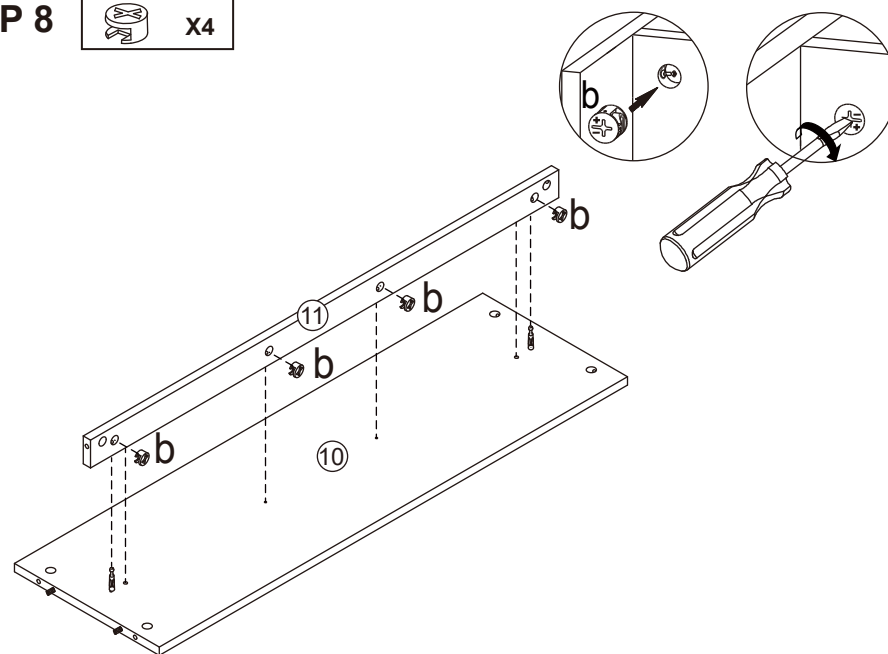

   
STEP 9

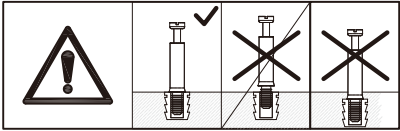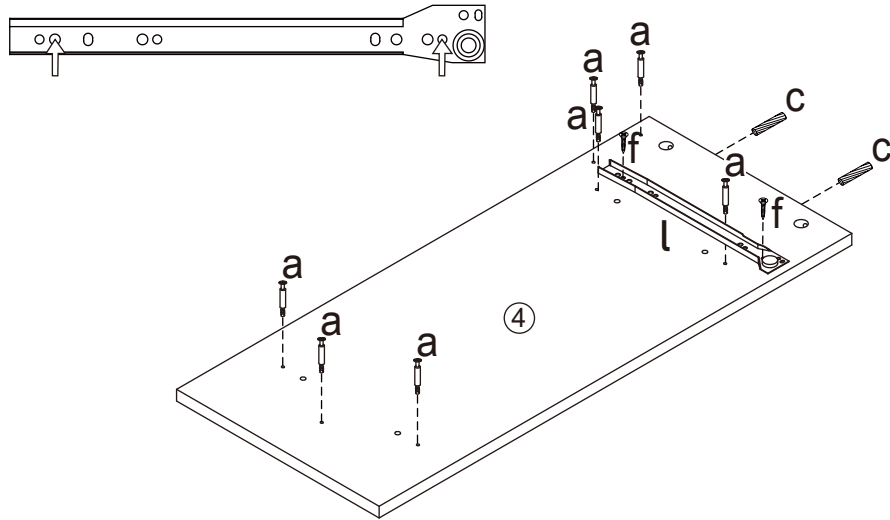



 
STEP 10

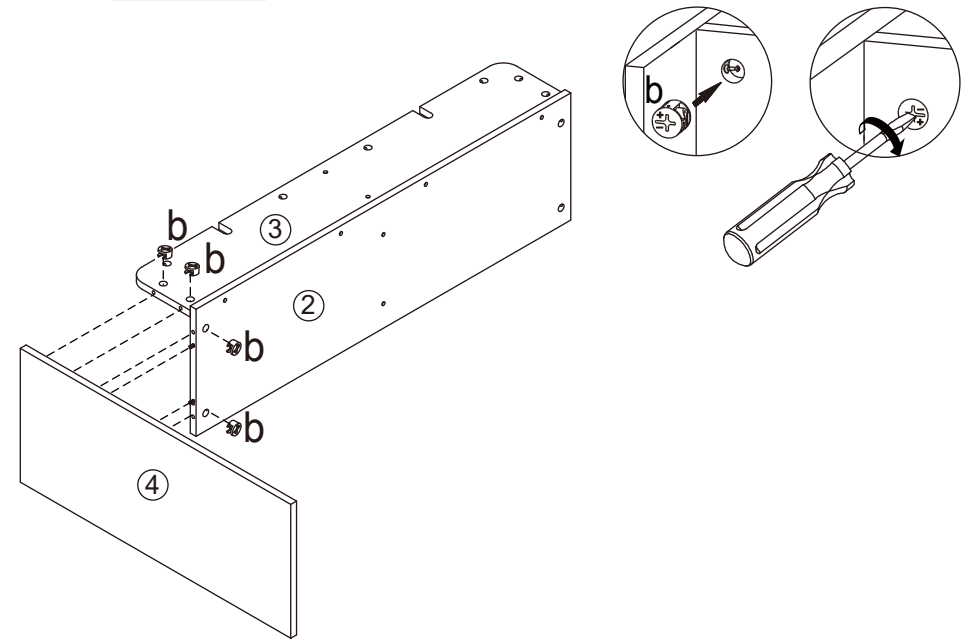

 
STEP 11

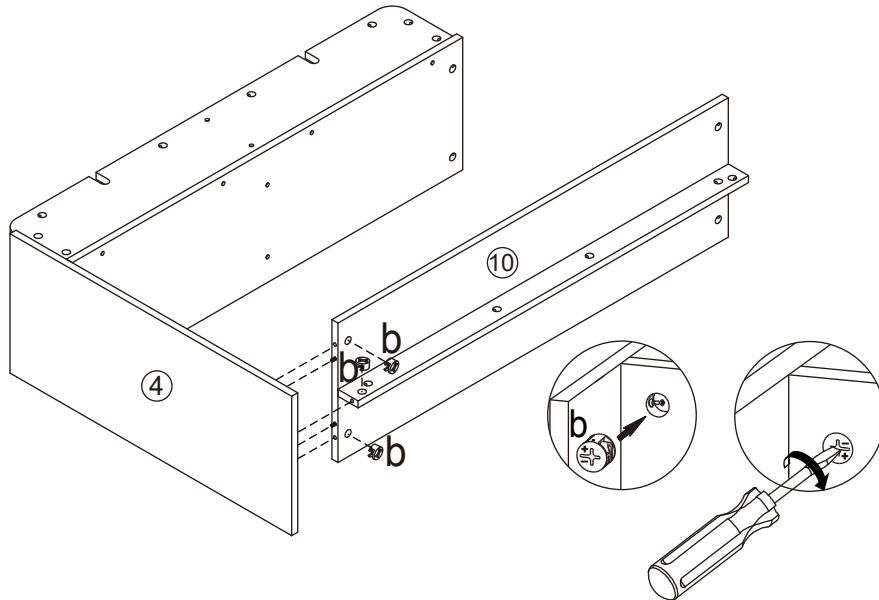


 
 
 
STEP 12

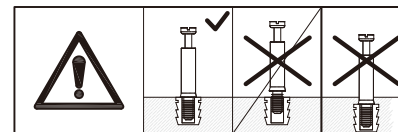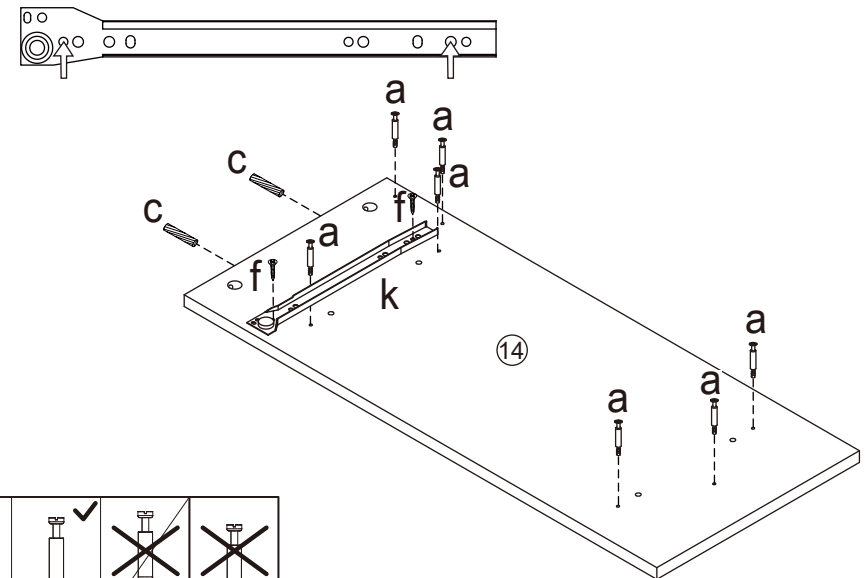


 
STEP 13

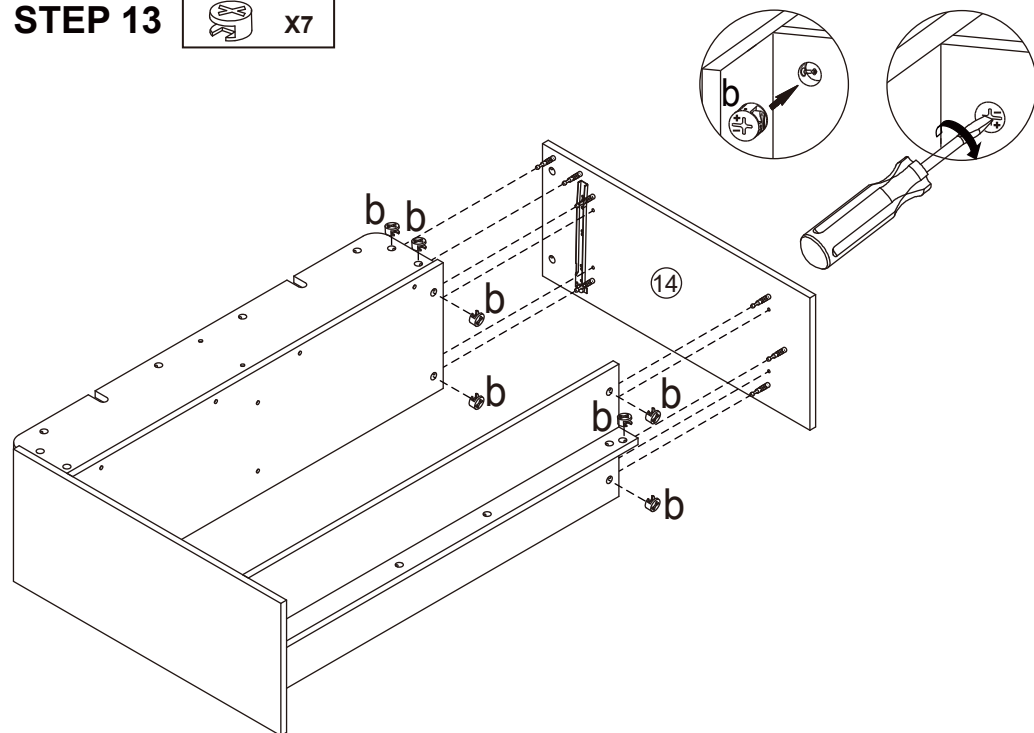

   
 
STEP 14

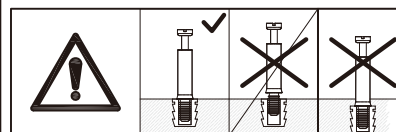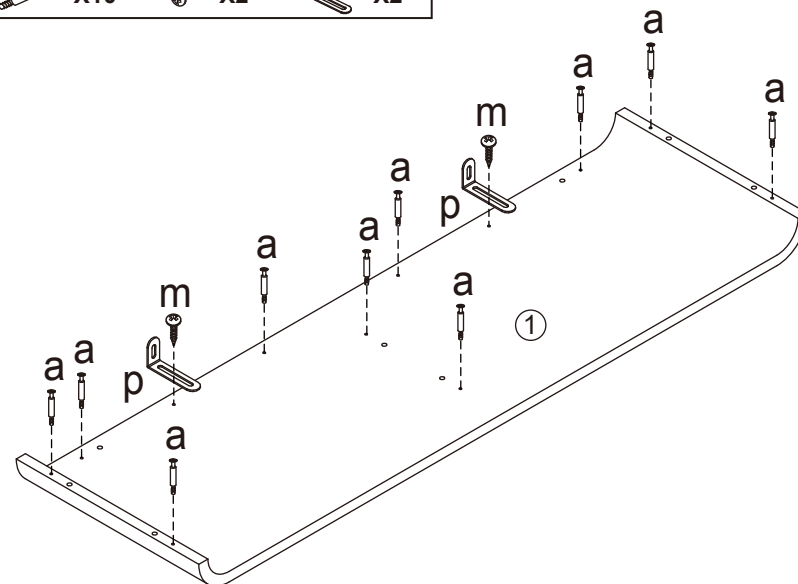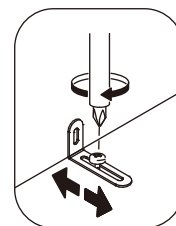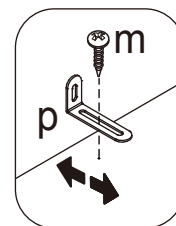

  
STEP 15

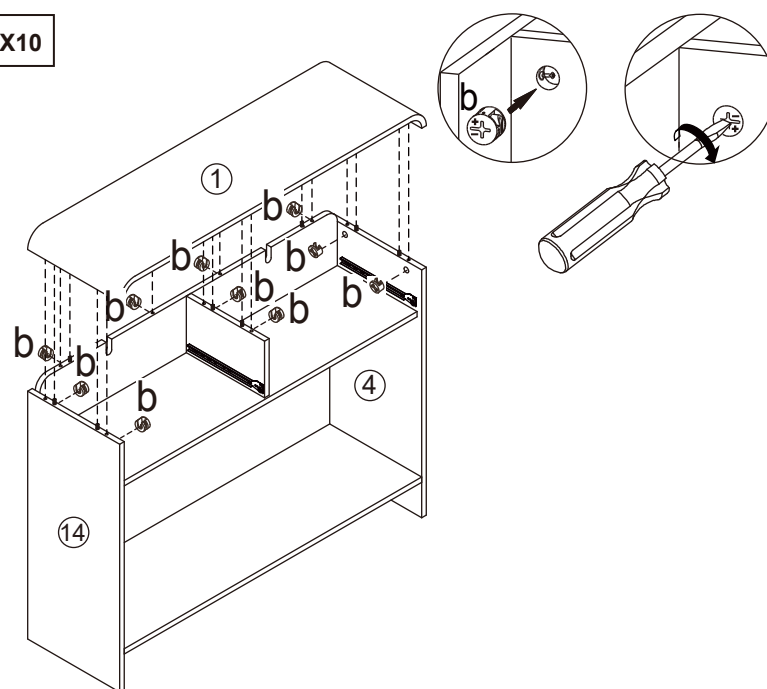

  STEP 16


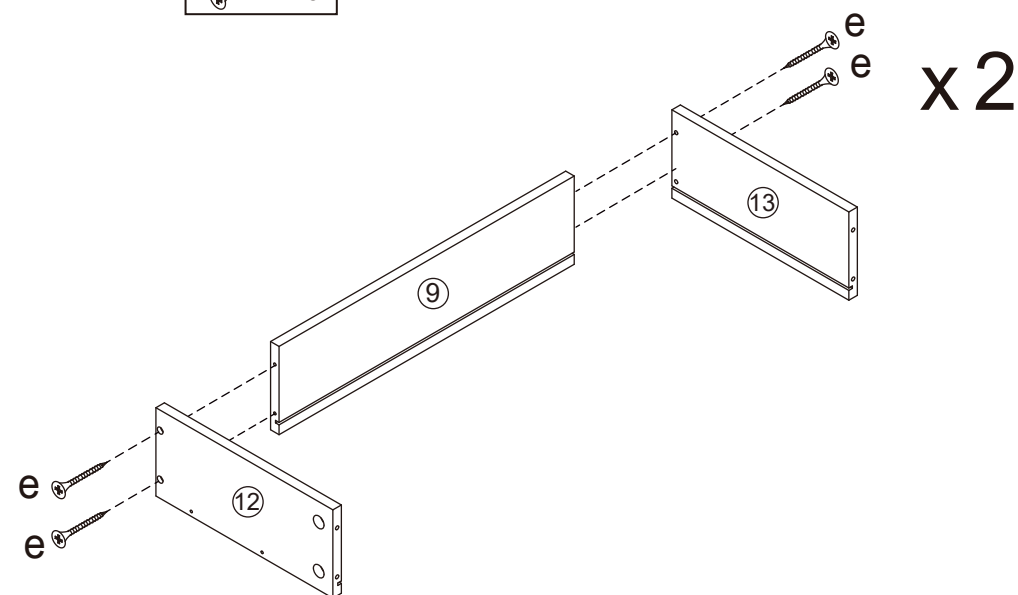



 STEP 17

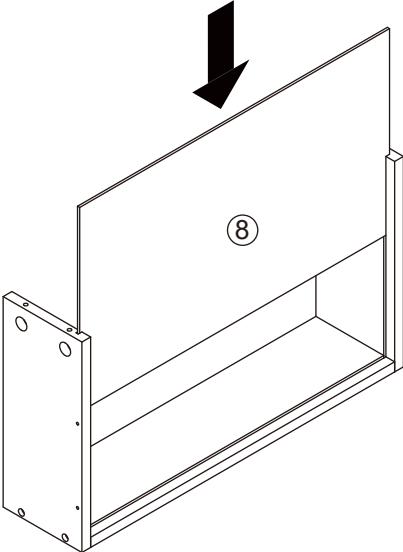


x2

  
 
STEP 18

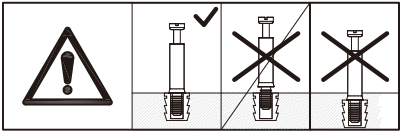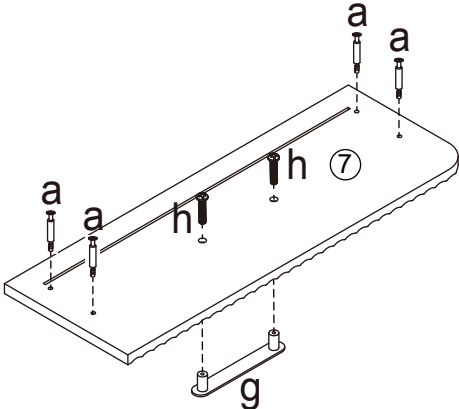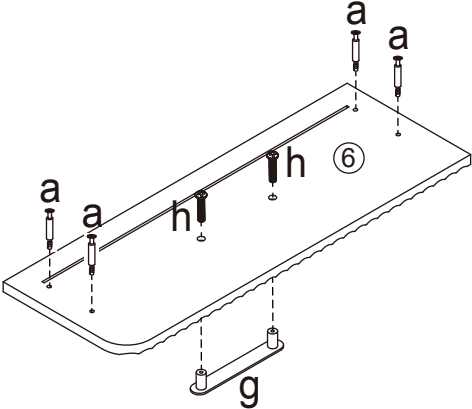

 STEP 19

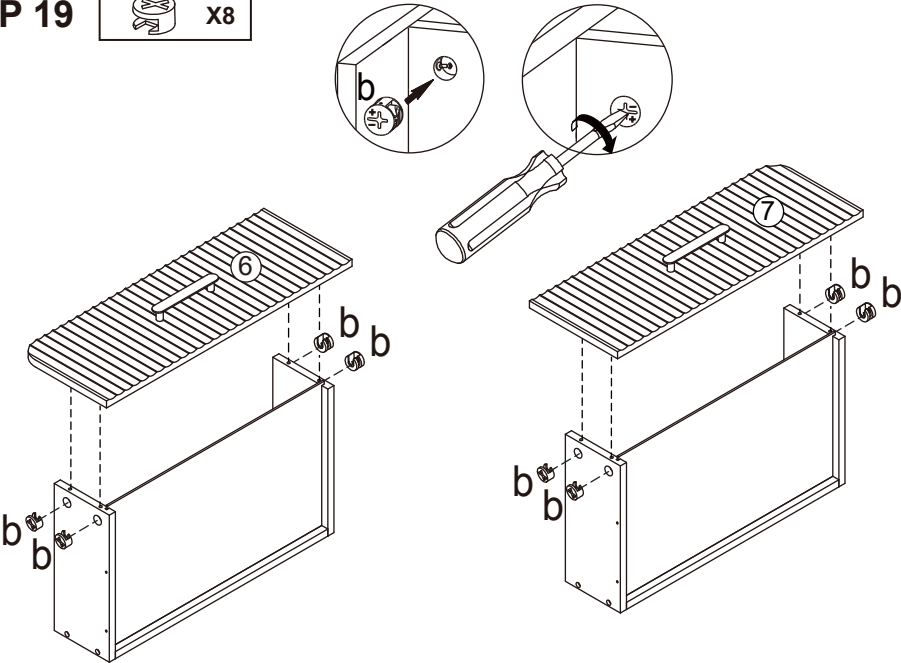

  STEP 20

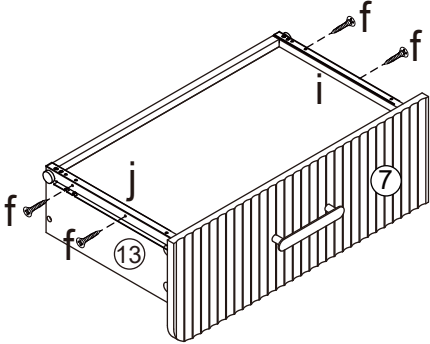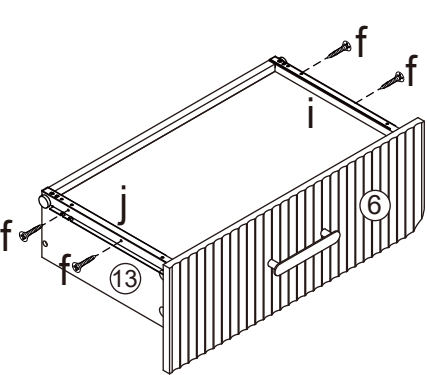

STEP 21



X2



X2

Warning:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)

 


TOPPLING HAZARD

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



WARNING

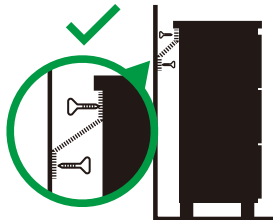


Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.


NEVER put a TV on this furniture



 This is a permanent label. Do not remove!

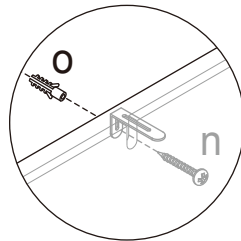

Wall

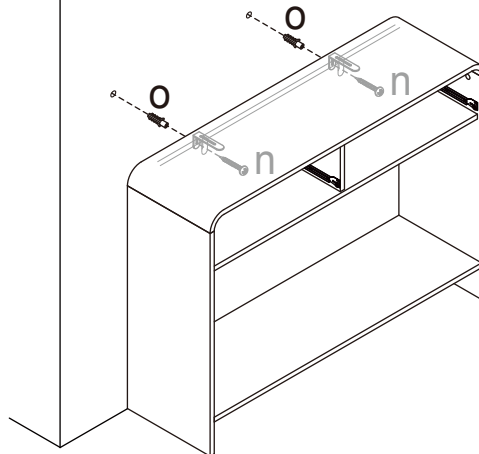 

STEP 22

