

Assembly Instructions

43538232 ISLA ENTRYWAY

CARE INSTRUCTIONS:





 













WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE ONLY.

 WARNING:

 
 
 
 
 

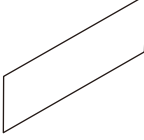 
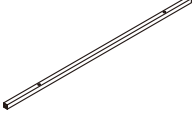 
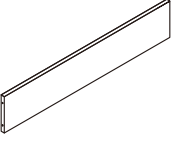 

 
 


DO NOT STAND, OR LEAN ON THE UNIT. DO NOT USE THIS UNIT AS A STEP LADDER. ENSURE THIS UNIT IS USED ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT PLACE HOT OBJECTS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE OF THIS FURNITURE ITEM. THIS ITEM IS FOR STORAGE PURPOSES ONLY. CONTAINS SMALL PARTS. IT IS TO BE ASSEMBLED BY AN ADULT. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.


MAXIMUM SAFE LOAD: TOP:100KG ;SHELF:10KG;HOOK:1.5KG.

1 Hardware List

	A		6pcs		B		6pcs		C	Ø6x30mm	12pcs
	D	M 4x12mm	37pcs		E	M4x35mm	8pcs		F	M4x12mm	4pcs
	G	M6x28mm	8 pcs		H	M6mm	1pc		I	M6x20mm	4pcs
	J	M5x40mm	6pcs		K		4pcs		L		2pcs
	M		2pcs		N		2pcs		O		4pcs
	P	M6x10mm	6pcs		Q	M4mm	1pc		R	M3mm	1pc

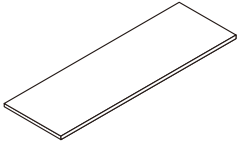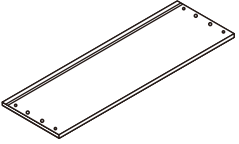

2 Parts List

							
①	1pc	②	1pc	③	1pc	④	1pc
							
⑤	1pc	⑥	2pcs	⑦	1pc	⑧	2pcs
							
⑨	1pc	⑩	2pcs	⑪	2pcs	⑫	1pc
							
⑬	1pc	⑭	5 pcs				

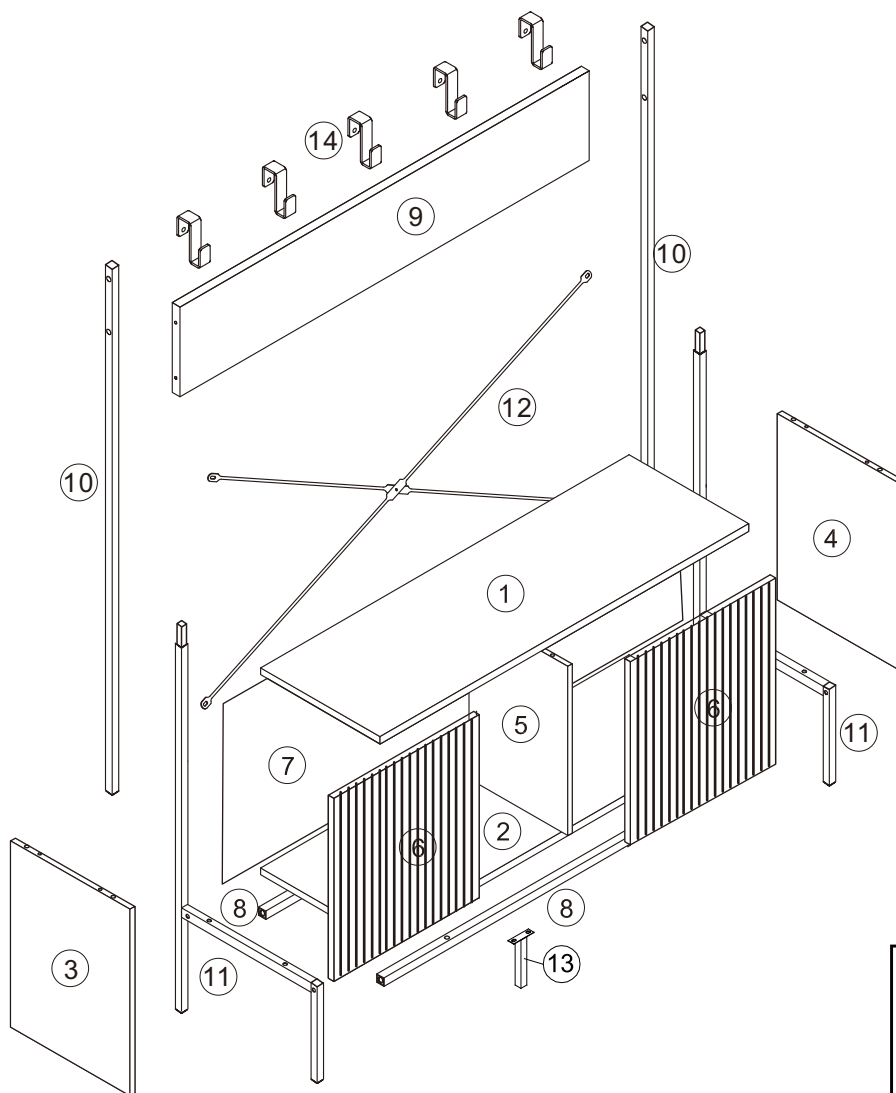 


ATTENTION:
DO NOT TIGHTEN THE SCREWS FULLY
DURING ASSEMBLY. FULLY TIGHTEN
SCREWS AFTER THE FINAL ASSEMBLY
STEP.

  STEP 1 A - x6 B - x6 C - x6

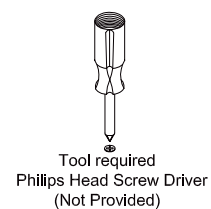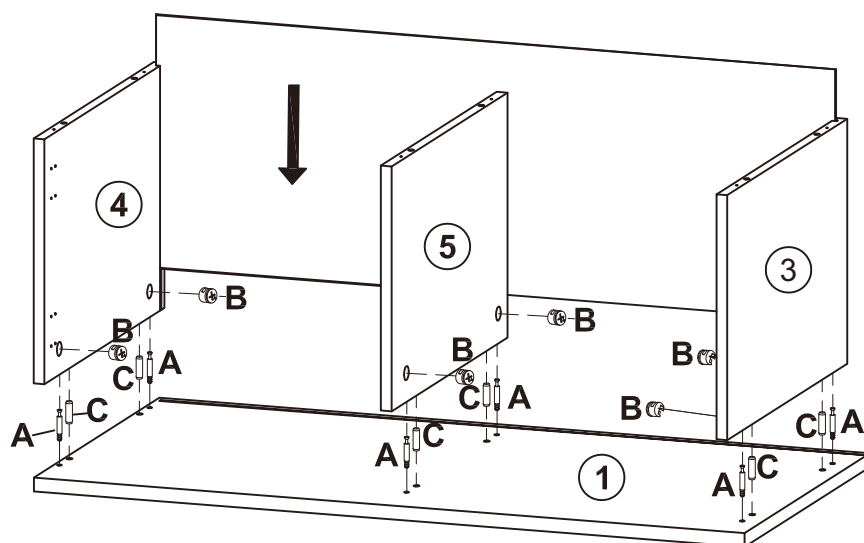


 STEP 2 C -  x 6 E -  x 6 P -  x 2 H -  x 1

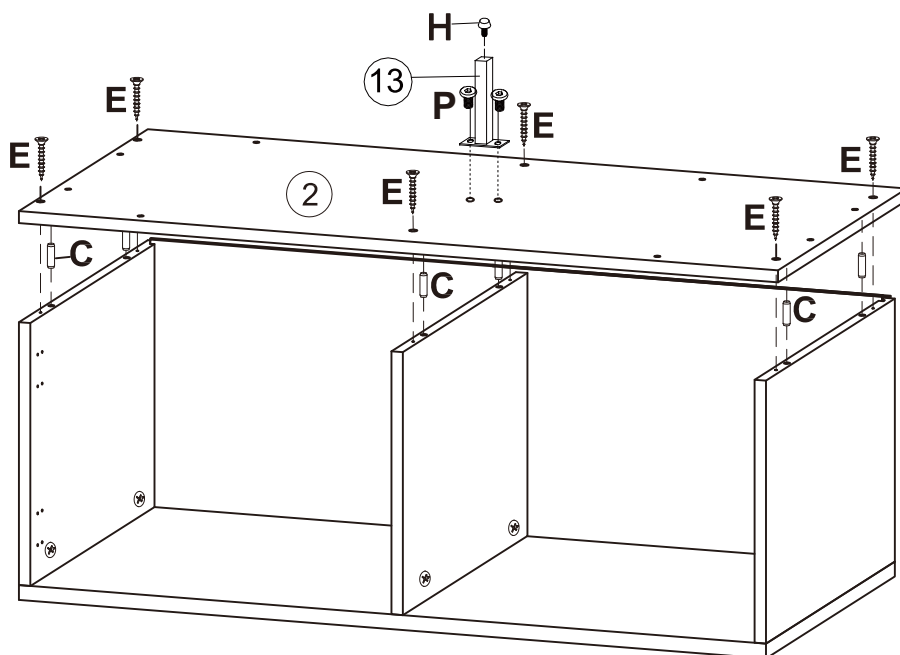


Tool required
Philips Head Screw Drive
(Not Provided)

 STEP 3 D -  x 5 P -  x 4

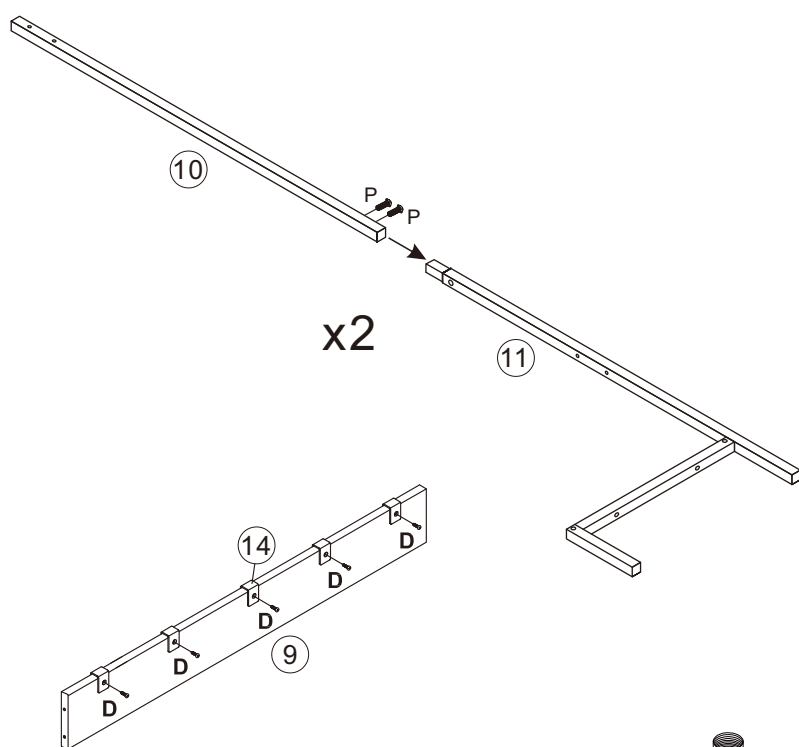



 
Tool required
Philips Head Screw Drive
(Not Provided)

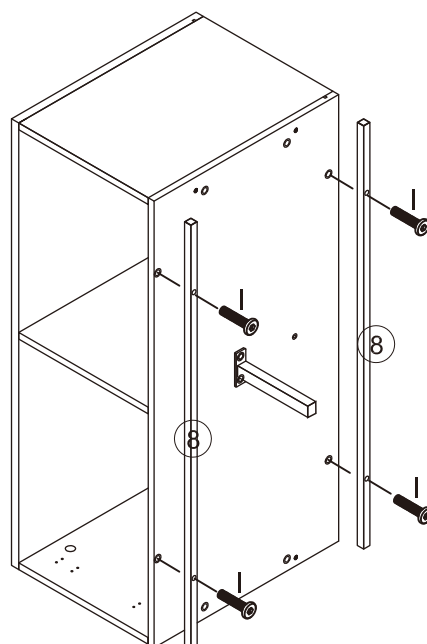STEP 4 I -  x 4




STEP 5

 G -  x 4 J -  x 2

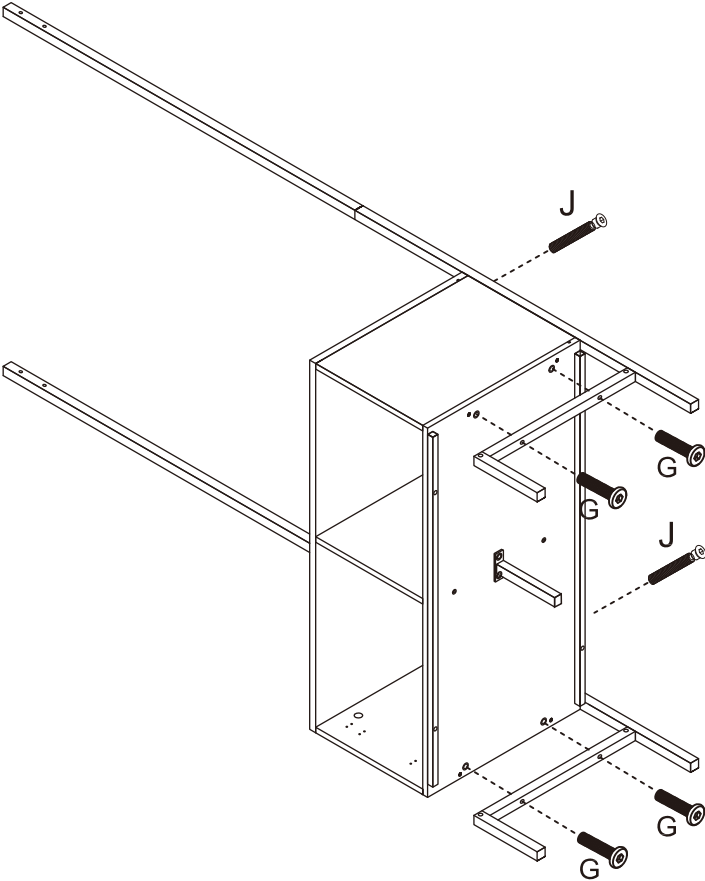


STEP 6

 
J -  x 4 G -  x 4

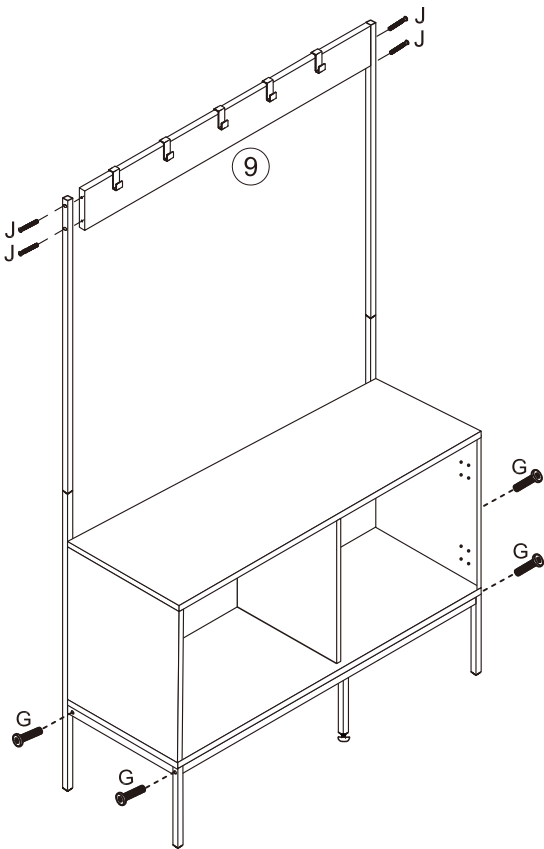


STEP 7

 
F -  x 4

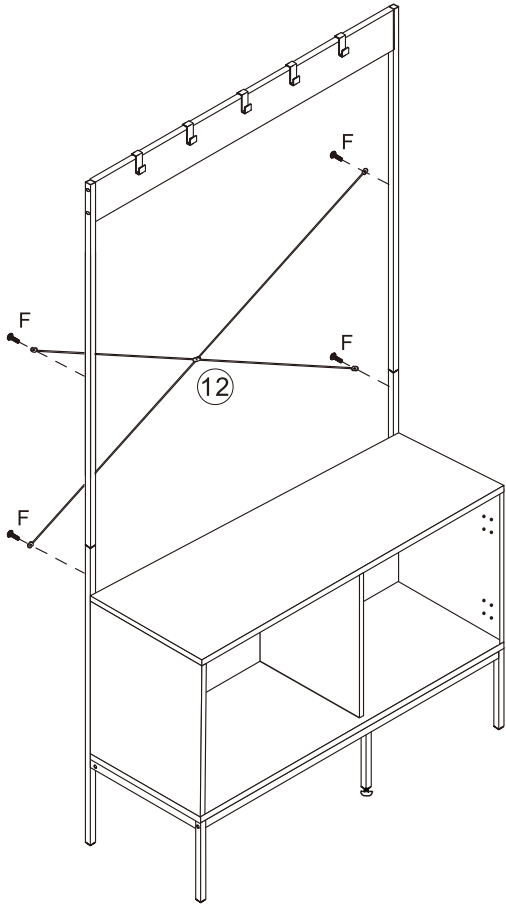



Tool required
Phillips Head Screw Drive
(Not Provided)

 
STEP 8 **D** -  x 28 **N** -  x 2 **O** -  x 4

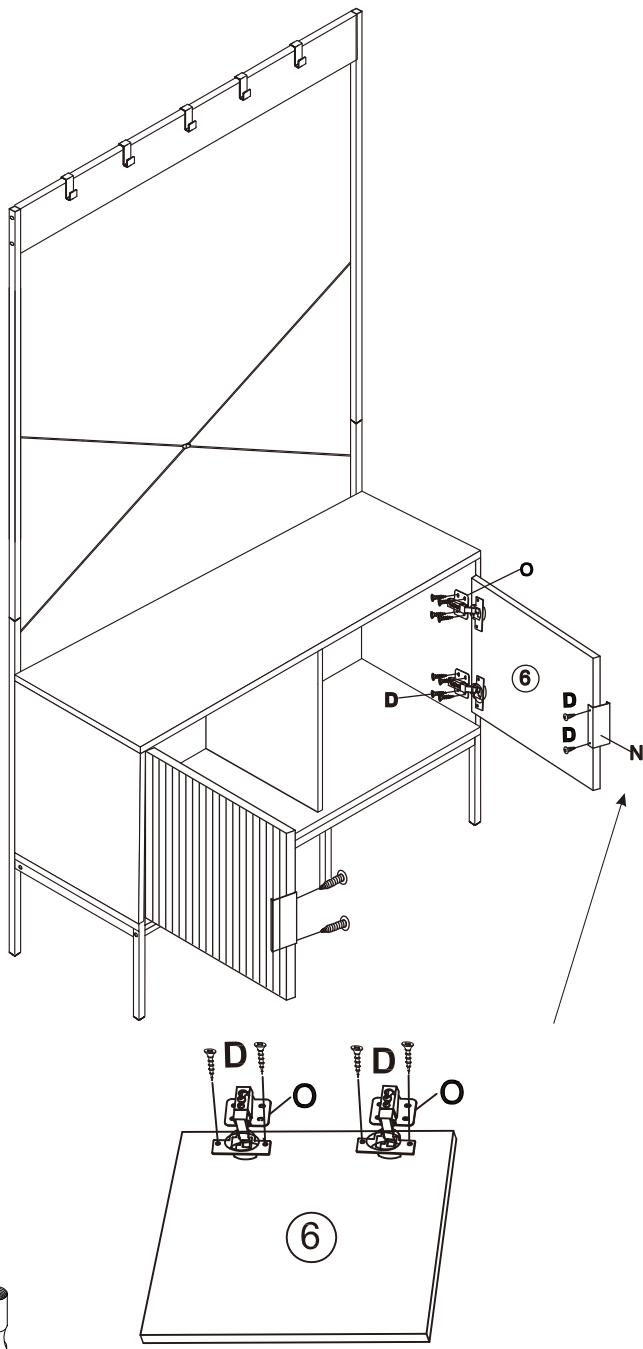




Tool required
Phillips Head Screw Drive
(Not Provided)

 STEP 9 **D** -  x 4 **K** -  x 4

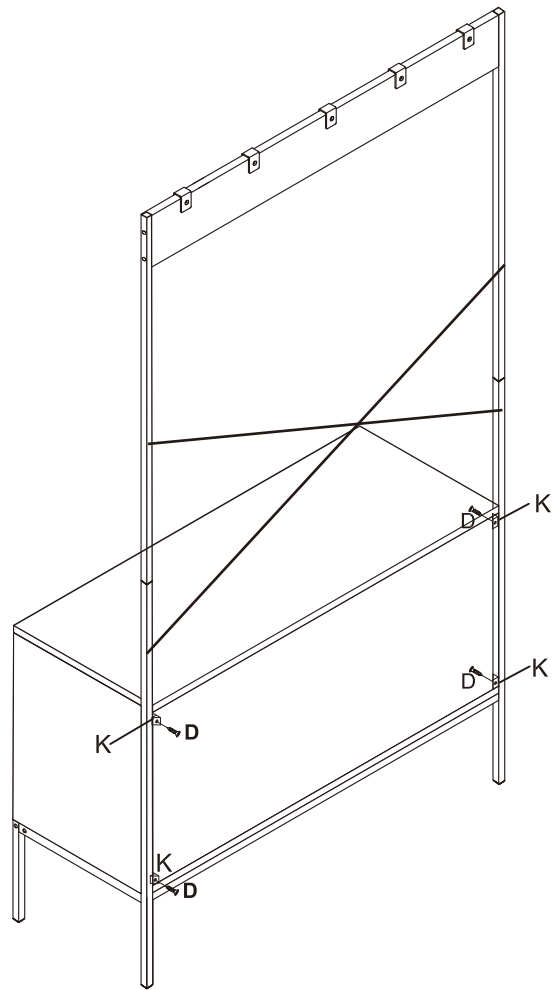



Tool required
Phillips Head Screw Drive
(Not Provided)

  STEP 10 **E - x 2 L - x 2 M - x 2**

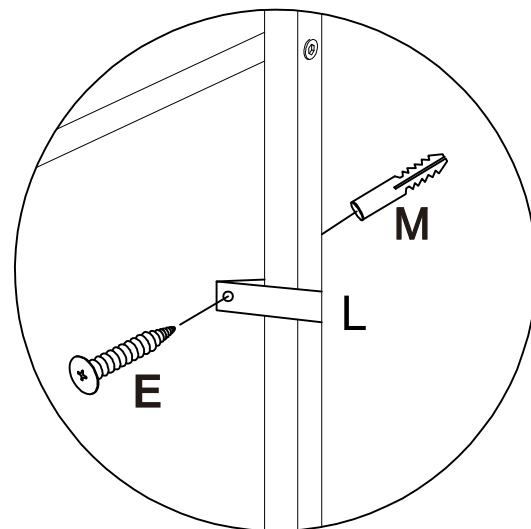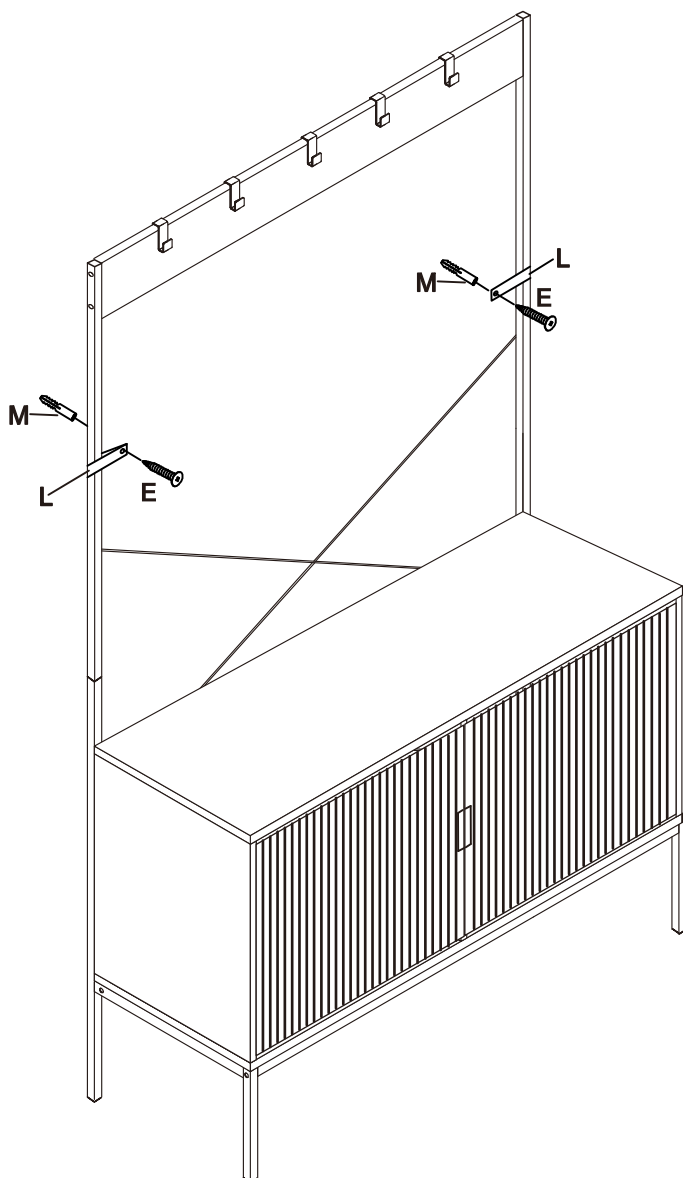

⚠ WARNING

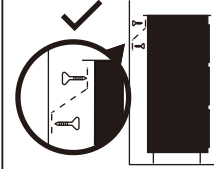 

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!



Tool required
Phillips Head Screw Drive
(Not Provided)



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



TOPPLING FURNITURE WARNING:

- **ALWAYS secure it with an anchor device.**
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- **Use safety drawer locks to prevent children climbing.**
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

 
CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**


Hinger Adjustment Tips

Noted: The door might be scraping, bumping, misaligned when first assembly.


Please follow the below tips:

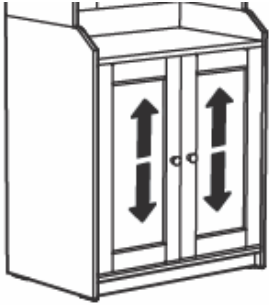


Adjust the door up and down

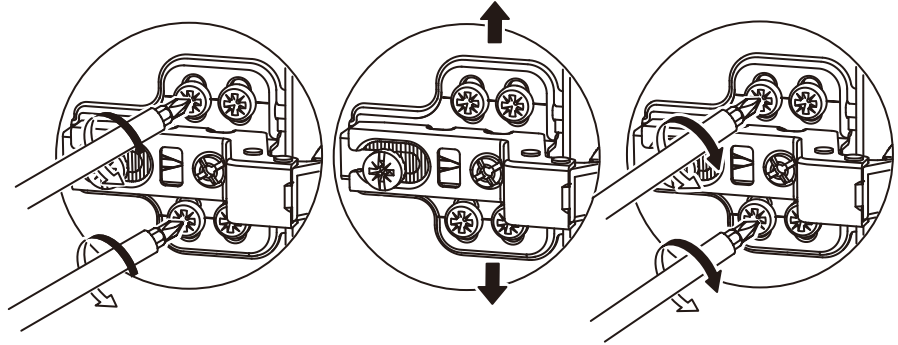 

 
1. Loosen the two mounting screws on both hinges, but only slightly. ...
2. Gently close the cabinet door.
3. With the door still closed, adjust the cabinet door to the desired height.
4. Open the cabinet door again, being careful not to jostle the door out of position.
5. Retighten the screws by hand.

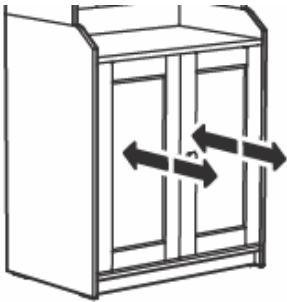


Move the door in and out

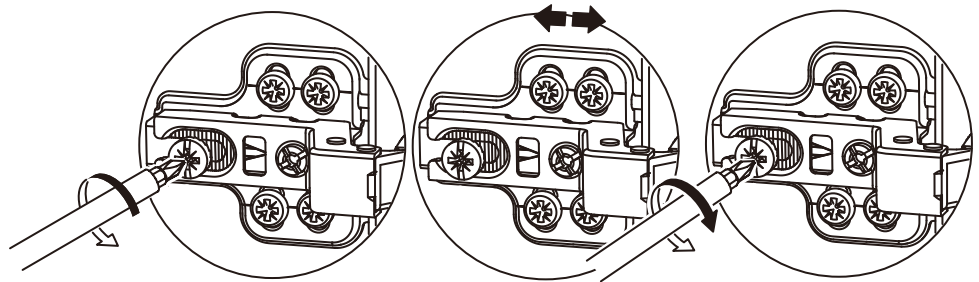 

 If the door doesn't meet the box at the top, adjust the top hinge toward the cabinet and/or adjust the bottom hinge away from the cabinet. If the door is gapped at the bottom, do the reverse.

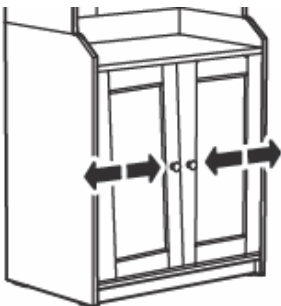

Move the door right or left

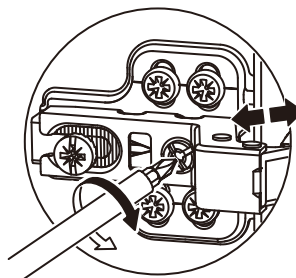 

You can adjust one or both hinges on each door, depending on how much correction it needs. If the door seems to be tilting down to the right, turn the side-to-side screw on the top hinge so the hinge pulls closer to the side of the cabinet box, moving the top of the door to the left.