



Garment Steamer & Iron
SL-009BD
User Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFE INSTRUCTIONS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

Read this user manual carefully before first use and save it for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer is not responsible, and the guarantee will not apply.
- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance and that the power outlet has an earth connection. If unsure check with an electrician.
- Before each use, ensure that the electric cord or any other parts on the iron is not damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Keep the iron and its cord out of reach of children when it is connected to mains power or cooling down.
- Never direct the steam towards people or animals. Never direct steam towards any other electrical or/and electronic appliances.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- If the appliance shows evidence of damage, malfunction, water leaks or other abnormality, DO NOT use.
- Always make sure the appliance is switched off, unplugged and cooled down before cleaning.
- **IMPORTANT! The iron must not be left unattended while it is connected to mains power and before it has cooled down.**
- Do not unplug the appliance by pulling on the cord or on the appliance.
- Never immerse the appliance, the Sole plate, the cable or cord plug in water. Never wash them under a water tap.
- The Sole plate and steam panel of the iron can become extremely hot and may cause burns if touched. Do not allow the supply cord to come in contact with the Sole plate and the steam panel.
- **CAUTION! For electrical safety, if the supply cord is damaged, it must be replaced by qualified electrical person only to avoid a hazard, or the product must be disposed.**
- The appliance must be used and rested on a flat, stable surface.
- When placing the appliance on its stand, ensure that the surface on which the stand is placed is stable.
- The iron must not be stored until it has cooled.

- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- Care should be taken when using the appliance due to the emission of steam.
- Unplug the appliance during filling and cleaning.
- **IMPORTANT!** To avoid damage or blockage of the steam iron, do not use any scented water or additives.
- Remove the plug from the mains power outlet socket and allow the appliance to cool down completely before cleaning.
- **WARNING!** Do not use alcohol, acetone, benzene, scouring cleaning agents etc. to clean the appliance.
- Never use a hard brush or metallic pad to clean the Sole plate and never place the iron on a rough surface.
- For cleaning, please refer to “CLEANING AND MAINTENANCE” section.

Descaling


The self-cleaning function should be used on a regular basis, depending on usage and the hardness of water used.

WARNING: Never pour white vinegar or liquid cleaners into the water tank!

- Ensure the appliance is completely cooled down before descaling.
- Fill the water tank. Refer to OPERATION: Filling the water tank.
- (For descaling iron) Attach the Sole plate to the main unit until hear a click. To ensure Sole plate is fitted correctly to the main unit, you should first insert the tip of main unit into the locking slot at the tip of Sole plate, then push the Sole plate onto the main unit until a click sound is heard.
- Position the appliance vertically on its stand on a suitable surface.
- Connect the plug to a suitable power outlet.
- Hold the appliance over a sink (away from your body), press and hold On/Off/function button for 8 seconds until  and  flashes. Steam will emit from the holes on the appliance for about 30 seconds, then stop emitting steam while the water pump will work continuously for about 30 seconds to store water inside the steam panel. Then water and steam start to emit for another 30 seconds, carefully shake the iron forwards and backwards to allow any scale and other deposits to be expelled with the boiling water and the steam. The whole cleaning process will be finished in 2 minutes.
- Empty the water tank, set the big steam volume and leave in operation for at least two minutes to dry the Sole plate.
- Unplug the steamer and let the iron cool down completely.
- For additional protection, this appliance should be connected to a household residual current device (RCD/safety switch) with a rating of no more than 30mA. If unsure consult your electrician for advice.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR IRON AND STEAMER

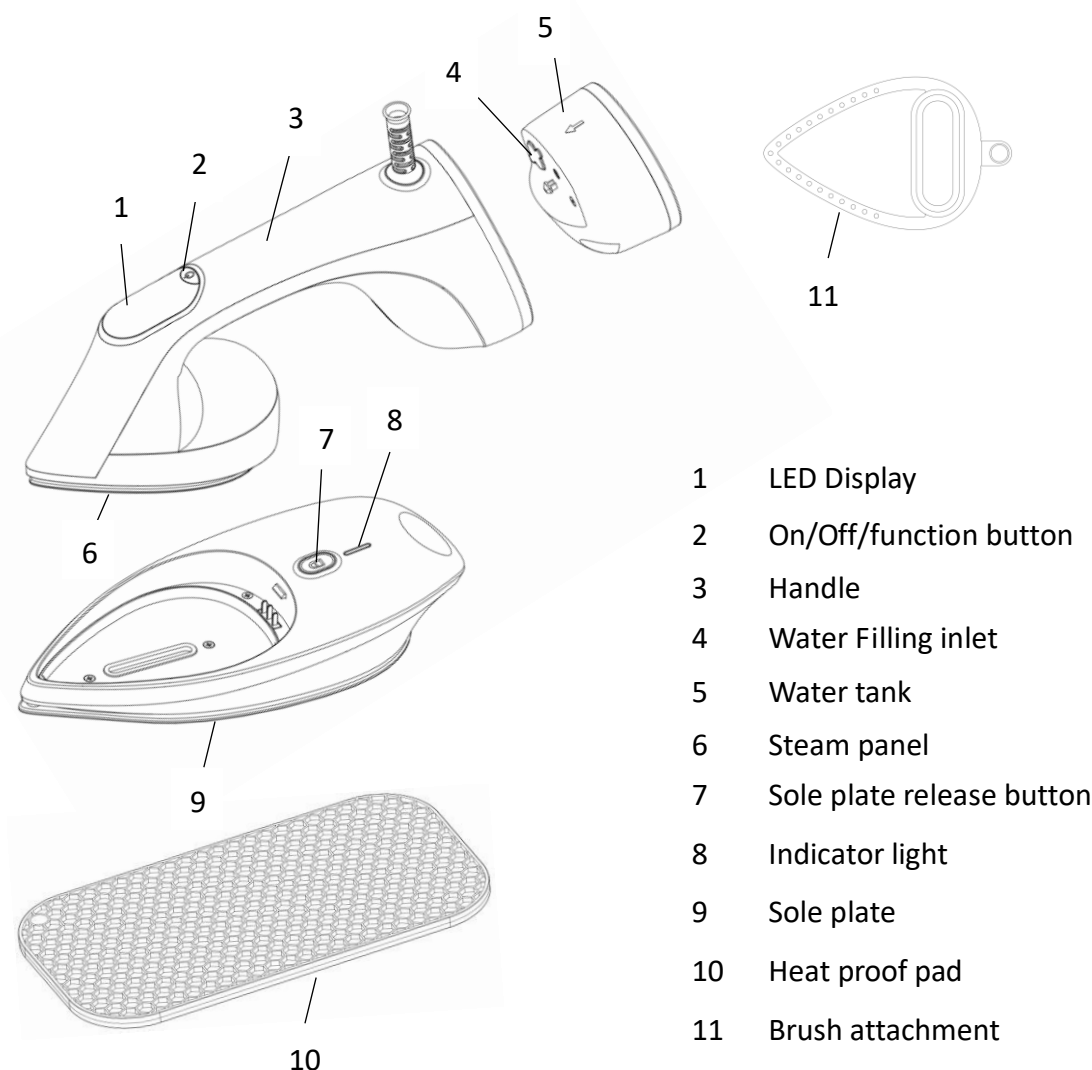

BEFORE FIRST USE

- Unpack the appliance and check if all parts are there and undamaged. If any parts are missing or damaged, do not use. Return the product to respective customer service center for replacement.
- Clean all parts before first use. See “CLEANING AND MAINTENANCE” section.
- Heat up the iron and iron over a piece of damp cloth for several minutes. This will burn-off any manufacturing residue from the iron. Smoke and odour may occur for a short period during this process, which is normal.

FEATURES

Auto-Off function:

Automatically switches off the steam iron if steam has not been used for 8 minutes.

OPERATION

Filling the water tank

- Ensure that the iron is cold and not connected to the power supply.
- Push the water tank to separate it from the main unit.
- Open the lid of the water filling inlet, fill the water tank with plain water.
- Close the water filling inlet by pressing down the lid. Attach the water tank into the appliance until you hear a click. If the tank does not fit, rotate the water tank and try again.

NOTES: To avoid calcium deposits, distilled water is recommended to be used for the appliance.

IMPORTANT! To avoid damage or blockage of the steam iron, do not use any scented water or additives.

Use the iron

- Attach the Sole plate to the main unit until hear a click. To ensure Sole plate is fitted correctly to the main unit, you should first insert the tip of main unit into the locking slot at the tip of Sole plate, then push the Sole plate onto the main unit until a click sound is heard.
- Position the iron vertically on its stand on a suitable flat stable surface.
- Connect the plug to mains power outlet, the green ring displays.
- Press On/Off/function button,  and the blue indicator flash, the appliance starts to heat up.
- Steam is ready when  lights up steady and the Sole plate is ready when the blue indicator lights up steady.

NOTE: Always follow the recommended ironing instructions found on the garment.

- Press On/Off/function button to set your desired steam volume if needed, the corresponding icon  or  displays.
- To turn Off steam function, press On/Off/function button until  lights up.

Use the steamer

WARNING! The Sole plate is extremely hot when used. Disconnect the iron from the mains power outlet and let the iron to cool down before detaching the Sole plate.

- Press the Sole plate release button to detach the Sole plate.
- Position the iron vertically on its stand on a suitable flat stable surface.
- Connect the plug to mains power outlet, the green ring displays.
- Press On/Off/function button,  lashes, the appliance starts to heat up.
- Steam is ready when  lights up steady.
- Press On/Off/function button to start steaming. To set your desired steam volume, the corresponding icon  or  displays.
- Hold the garment or fabric material with one hand, and the steamer with the other hand to steam.
- Attach the brush attachment if needed.

ATTENTION: To protect against burns or injury to people, do not iron or steam fabrics while being worn on the body. Do not direct steam towards the body when ironing.

NOTES:

The high temperature steam can reach 100°C Ensure that the material is high-temperature resistant before steaming. Do not leave the steam panel on the same spot for too long to avoid damaging the garment.

The appliance will automatically shut off with  flashes if steam function  is steady and has not been working for 8 minutes. Press On/Off/function button to restart the appliance if you need to continue using the appliance.

During steam emitting modes  / , when water is not sufficient in water tank, the icon  flashes for 8 minutes to indicate need to refill. If product is left idle in this state, then  will light up flashing afterwards to indicate auto-off.

After ironing

- After use, press and hold On/Off/function button to turn off the appliance, the green ring displays.
- Disconnect the iron from the mains power outlet.
- Let the iron cool down and empty the water tank to prevent built up of any residue in the water tank.

CLEANING AND MAINTENANCE

- Remove the plug from the mains power outlet socket and allow the appliance to cool down completely before cleaning.

WARNING! Do not use alcohol, acetone, benzene, scouring cleaning agents etc. to clean the appliance.

- Do not use hard brushes or metallic objects.
- Clean the plastic parts of the iron with a damp cloth. Use a mild detergent if necessary.
- Remove any deposits on the Sole plate with a damp cloth. To avoid scratching the finishing, never use a metallic pad to clean the Sole plate and never place the iron on a rough surface.
- To remove synthetic residue from the Sole plate, iron over an old cotton rag.
- Clean the water tank, heat proof pad and brush with water.
- Make sure all parts are clean and dry before storing or using them again.
- Store the emptied iron horizontally on a stable surface with a cloth protecting the Sole plate.
- **WARNING:** do not immerse any part of the appliance, or Sole plate into water or other liquids.

Descaling

The self-cleaning function should be used on a regular basis, depending on usage and the hardness of water used.

WARNING: Never pour white vinegar or liquid cleaners into the water tank!

- Ensure the appliance is completely cooled down before descaling.
- Fill the water tank. Refer to OPERATION: Filling the water tank.
- (For descaling iron) Attach the Sole plate to the main unit until hear a click. To ensure Sole plate is fitted correctly to the main unit, you should first insert the tip of main unit into the locking slot at the tip of Sole plate, then push the Sole plate onto the main unit until a click sound is heard.
- Position the appliance vertically on its stand on a suitable surface.
- Connect the plug to a suitable power outlet.
- Hold the appliance over a sink (away from your body), press and hold On/Off/function button for 8 seconds until  and  flashes. Steam will emit from the holes on the heating plate for about 30 seconds, then stop emitting steam while the water pump will work continuously for about 30 seconds to store water inside the steam panel. Then water and steam start to emit for another 30 seconds, carefully shake the iron forwards and backwards to allow any scale

and other deposits to be expelled with the boiling water and the steam. The whole cleaning process will be finished in 2 minutes.

- Empty the water tank, set the big steam volume and leave in operation for at least two minutes to dry the Sole plate.
- Unplug the steamer and let the iron cool down completely.

IRONING TIPS

IMPORTANT! Always check whether a label with ironing instructions is attached to the garment. Always follow the ironing instructions attached to the garment.

- Silk and other fabrics that are likely to become shiny should always be ironed on the inner side.
- Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied. Always keep the iron moving at all times.
- Pure wool fabrics (100% wool) may be ironed with the iron set to steam position. Preferably set the steam button to the maximum position and use a dry cloth between the garment and the iron for protection.
- Do not touch plastic buttons on the garment with a hot iron because they may melt.
- Be careful around zippers and similar items to prevent the Sole plate from scratching.

TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 1800W

12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us