



**Popcorn Maker
PS-1200
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS


When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- Use only accessories provided by manufacturer. The use of accessories not intended for use with this appliance may cause injuries to the user or damage the appliance.
- The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when the appliance is used by or near children or infirm persons.
- Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
- Do not operate the appliance if damaged or malfunctions.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Do not dismantle and repair the appliance by yourself. DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power. Keep away from young children.**
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is only intended to make popcorn, DO NOT use for other purpose.
-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**


ADDITIONAL IMPORTANT SAFEGUARDS

Operation safety precautions:

- For cleaning cooking surface, please refer to section “Cleaning and Maintenance”.
- DO NOT leave unit running once popping has ceased.
- Check Popping Chamber for presence of foreign objects prior to use.
- DO NOT place oil, butter, seasonings, or anything other than popcorn kernels into the Popping Chamber. Use of these substances will cause hazards and will damage the unit.
- **IMPORTANT:** Occasionally a hot un-popped kernel may be thrown from the popping chute. To avoid contact with hot kernels, keep children and your body a safe distance from the appliance during the popping process.
- If you see or smell smoke or odour, or if this appliance begins to malfunction during use, immediately unplug the cord. Do not attempt to repair a malfunctioning appliance.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR POPCORN MAKER

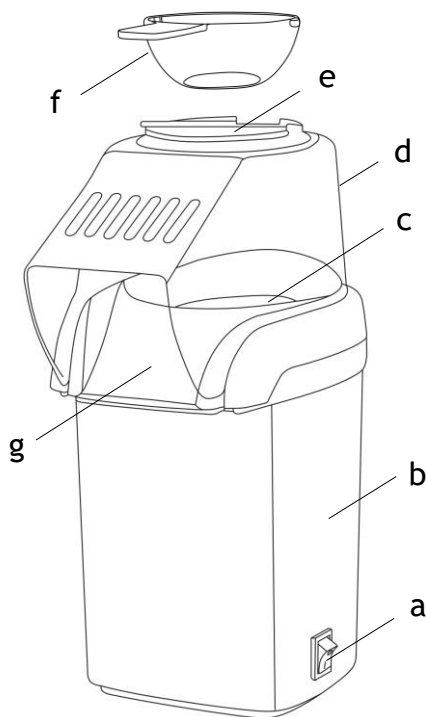

- a. On/Off switch
- b. Main unit
- c. Popping chamber
- d. Top cover
- e. Feed inlet
- f. Measuring cup
- g. Popcorn chute

HOW TO USE YOUR POPCORN MAKER

1. Clean the inside and outside of the appliance with a damp cloth or soft sponge. Wipe dry with a towel.

WARNING! Do not immerse the appliance in water or any other liquid to clean.

2. Place the appliance on a flat, solid, clean and stable surface and ensure a minimum of 10cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.
3. Plug the appliance into an electrical power outlet.

Note: Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. Rated voltage: 220-240V~ 50Hz.

4. Place a bowl under the popcorn chute to collect popcorn.
5. Turn on the appliance. Allow the appliance to heat up for 2 minutes.
6. Turn off the appliance and pour a measuring cup of popping kernels (60g) into the popping chamber through the feed inlet and replace the measuring cup on top of the cover.

IMPORTANT!

- Use only dry popping kernels. Damp kernels will cause smoke or burning.

- When filling the kernels, make sure there is no overfilling or underfilling. More kernels will crowd the popping chamber and may result in more un-popped kernels or cause kernels to smoke or burn. Less kernels may cause more un-popped kernels to come out of the appliance.
 - DO NOT place oil, butter, seasonings, or anything other than popcorn kernels into the Popping Chamber. Use of these substances will cause hazards and will damage the unit.
7. Turn on the appliance again and popcorn starts to burst out of the Popcorn Chute in approx. 50 seconds and the popping will be finished in approx. 90 seconds.

CAUTION!

- Occasionally a hot un-popped kernel may be thrown from the popping chute. To avoid contact with hot kernels, keep children and your body a safe distance from unit in the popping process.
8. Turn off the appliance when popping finished.

IMPORTANT!

- If you see or smell smoke or odour, or if this appliance begins to malfunction during use, immediately unplug the cord. Do not attempt to repair a malfunctioning appliance.
 - **Allow unit to cool down for 10 minutes between popping sessions so the appliance does not overheat.**
 - Clear up the residue in the popping chamber before next cooking as it will get scorching and burning in next cooking session.
9. Unplug the appliance from the power outlet socket when not in use.

Tips:

- Seal the bag to prevent the popping kernels from getting damp after each use.
- Always use fresh popcorn kernels. Dried out, stale, or old kernels pops poorly as it has lost its moisture content. We recommend storing kernels in an airtight container in a cool place.
- When adding seasonings, a spritz of olive oil, water or butter will allow the seasonings to better stick to the popcorn.

CLEANING AND MAINTENANCE

This appliance should be cleaned after each use.

CAUTION: Do not immerse the appliance in water or in a dishwasher!

Unplug the appliance from the mains power supply before cleaning or during maintenance.

- Ensure that the appliance has completely cooled down before cleaning.
- Clean the popping chamber and outside of the main unit with a damp cloth or soft sponge. Do not use anything abrasive that can scratch or damage the appliance.
- Clean the top cover and measuring cup with hot, soapy water.
- Dry all parts of the appliance with towel and reassemble the appliance.

- Store the appliance in a clean dry location and out of the reach of children.

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50Hz

Power: 1200W

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us