

# Assembly Instructions

43538867 BAILEY HALLTABLE

 

 










**WARNING:** DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.





**CARE INSTRUCTIONS:** TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

**MAXIMUM SAFE LOAD:15KG FOR TOP PANEL, 5KG FOR EACH DRAWER , 10KG FOR SHELF.**

 
1

## Hardware List


	A	M6x35mm	26pcs
	B	Ø15x9mm	26pcs
	C	Ø6x30mm	30pcs
	D	M4x35mm	18pcs
	E	M4x55mm	2pcs
	F	M7x50mm	4pcs
	G	M3x12mm	28pcs
	H	M7x70mm	8pcs
	I		1pcs
	J		2pcs
	K		2pcs
	L		4pcs
	M		12pcs

	CL		2pcs
	CR		2pcs
	DL		2pcs
	DR		2pcs


2

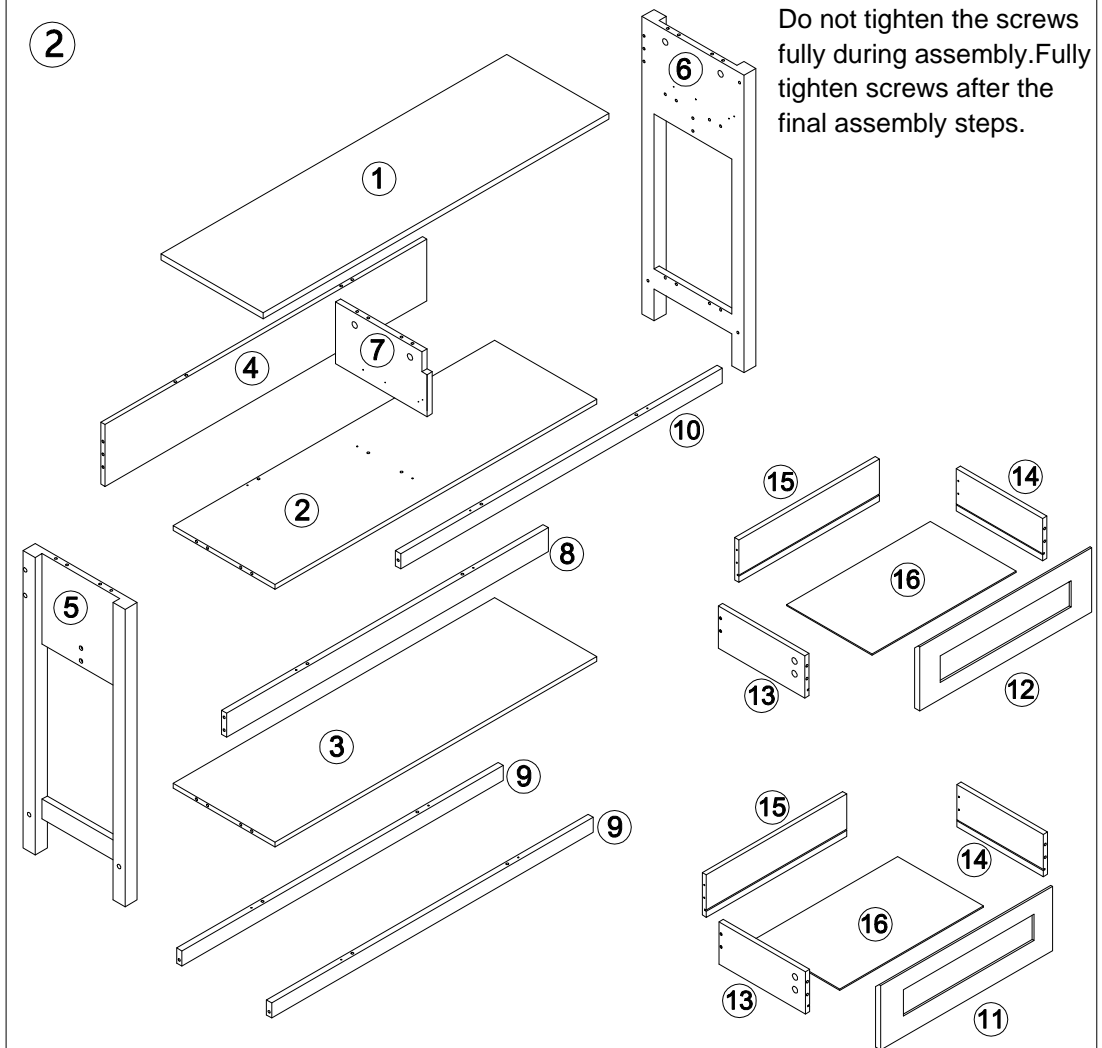


3

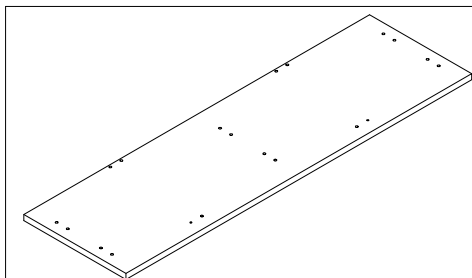 


① 1PC

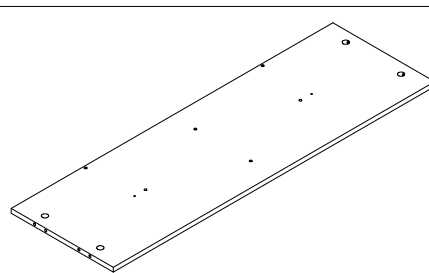 


② 1PC

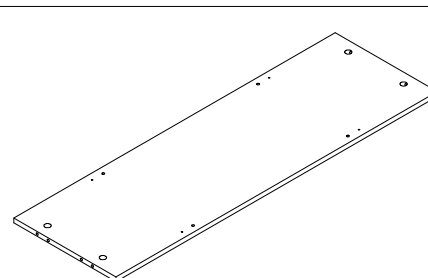 


③ 1PC

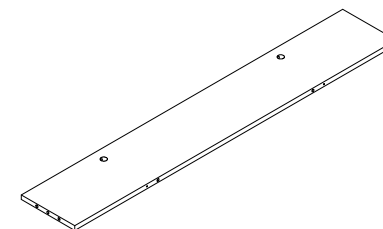 


④ 1PC

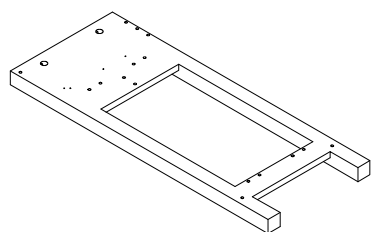 


⑤ 1PC

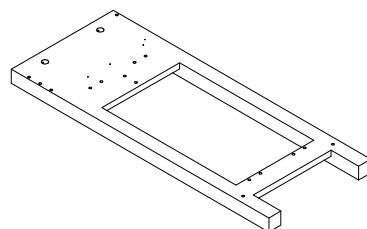 


⑥ 1PC

 


⑦ 1PC

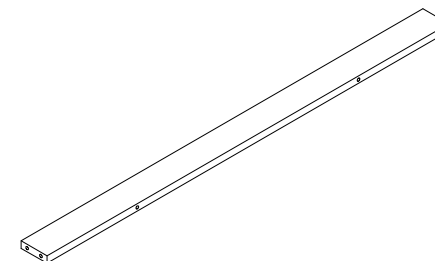 


⑧ 1PC

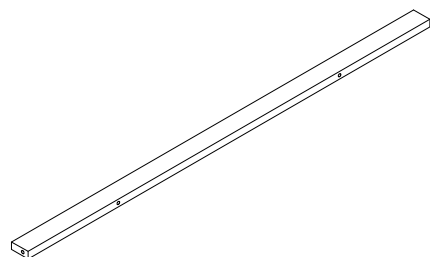 


⑨ 2PCS

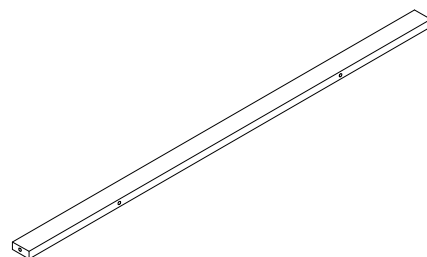 


⑩ 1PC

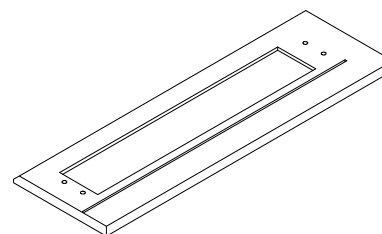 


⑪ 1PC

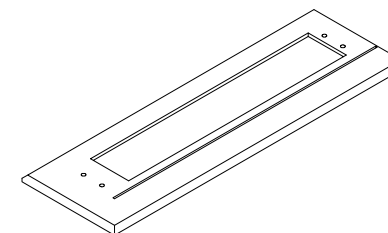 


⑫ 1PC

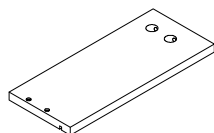 


⑬ 2PCS

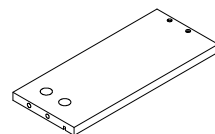 

⑭ 2PCS


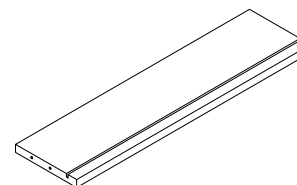 


⑮ 2PCS


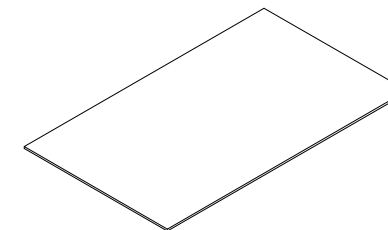 


⑯ 2PCS


## STEP 1:

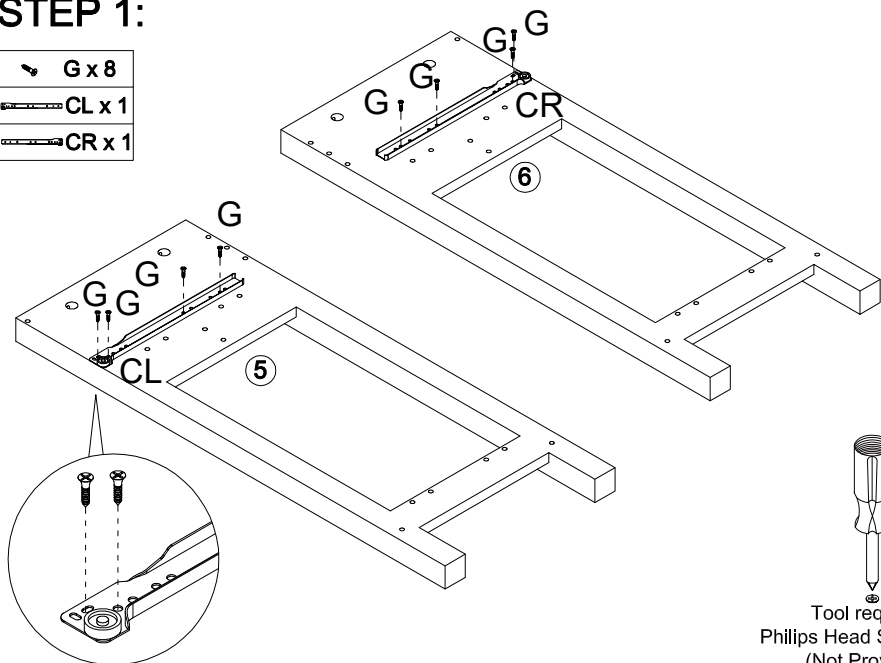  



## STEP 2:

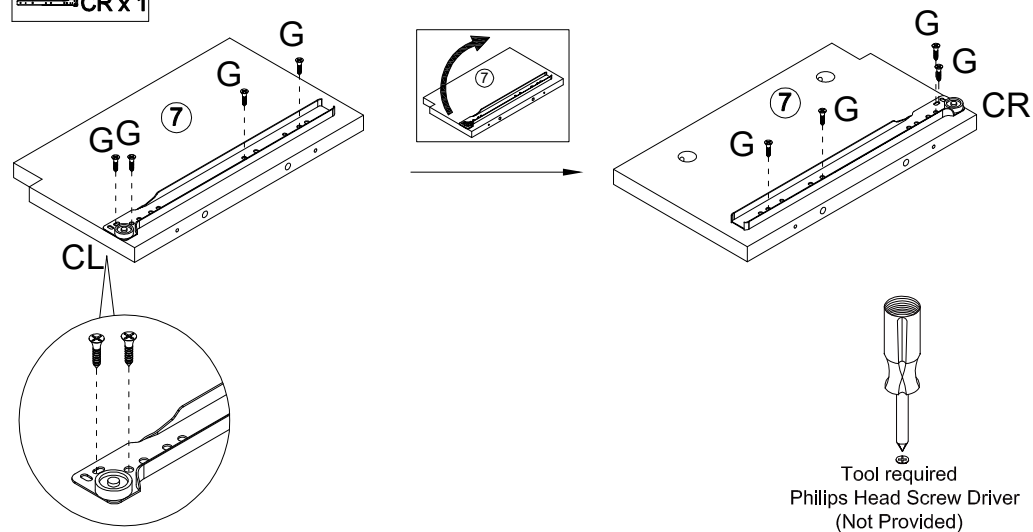  



## STEP 3:

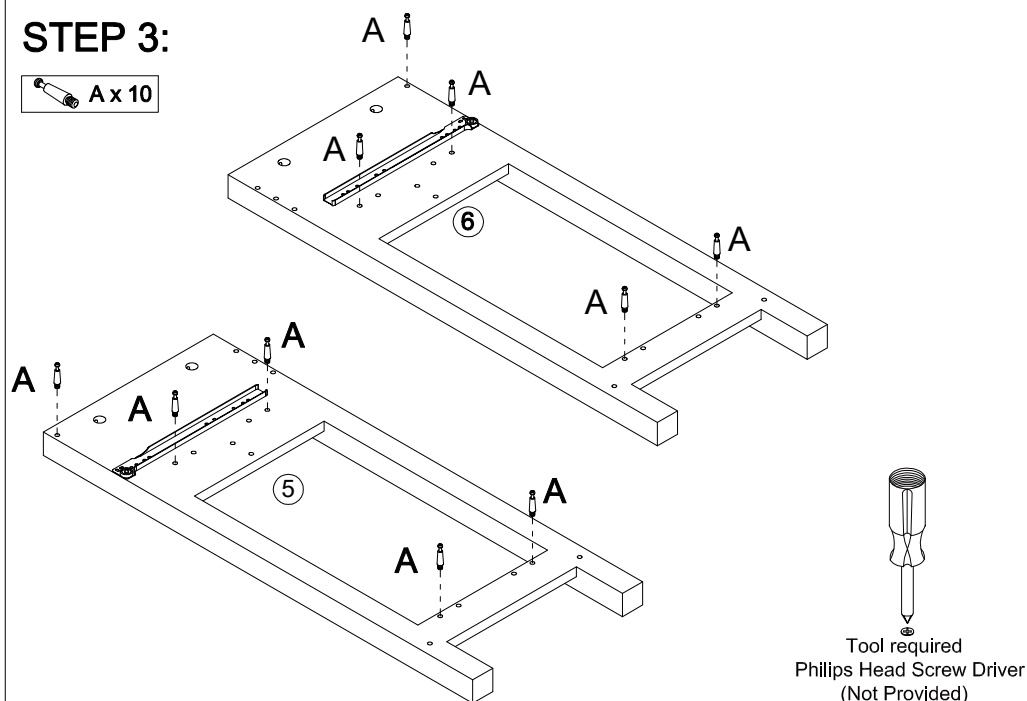 

## STEP 4:

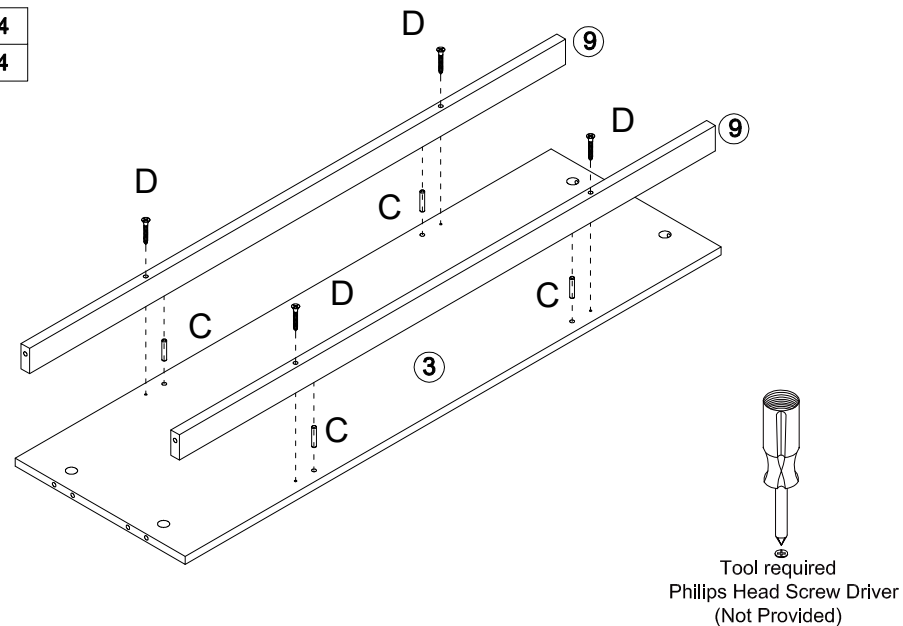 
 


## STEP 5:

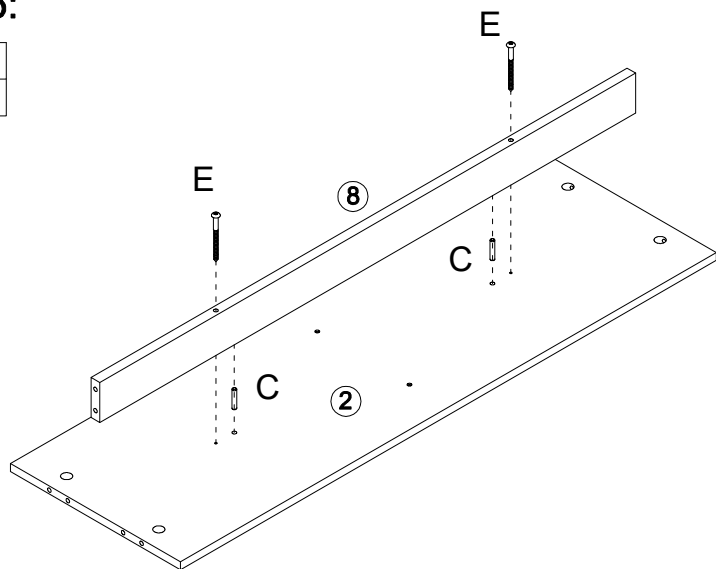  


Tool required  
Phillips Head Screw Driver  
(Not Provided)

## STEP 6:

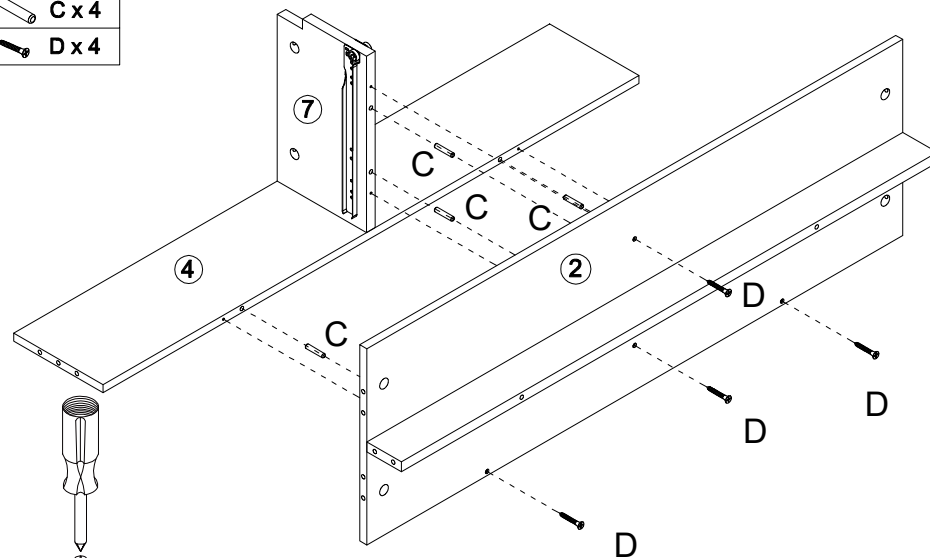 
 


Tool required  
Phillips Head Screw Driver  
(Not Provided)


## STEP 7:

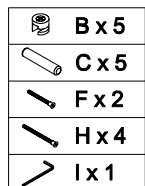 

 
 
Tool required  
Phillips Head Screw Driver  
(Not Provided)

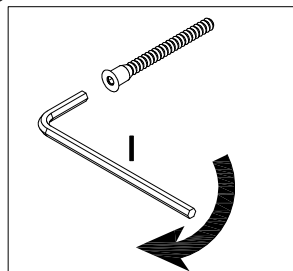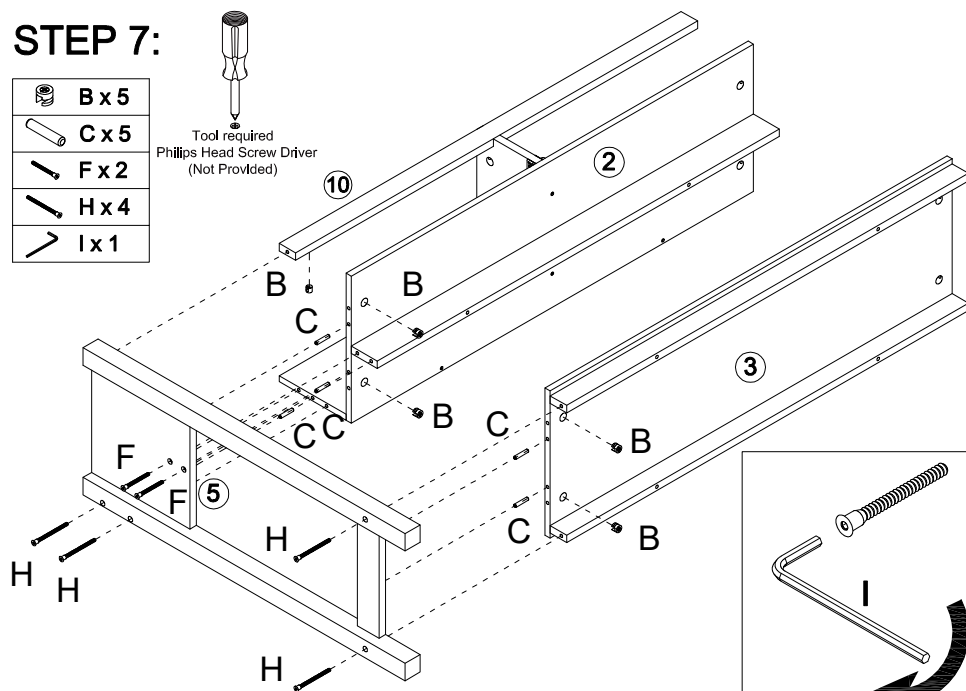

## STEP 8:

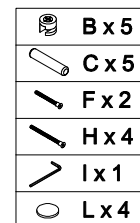 


  
Tool required  
Phillips Head Screw Driver  
(Not Provided)

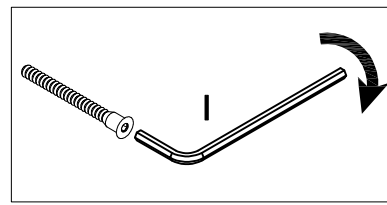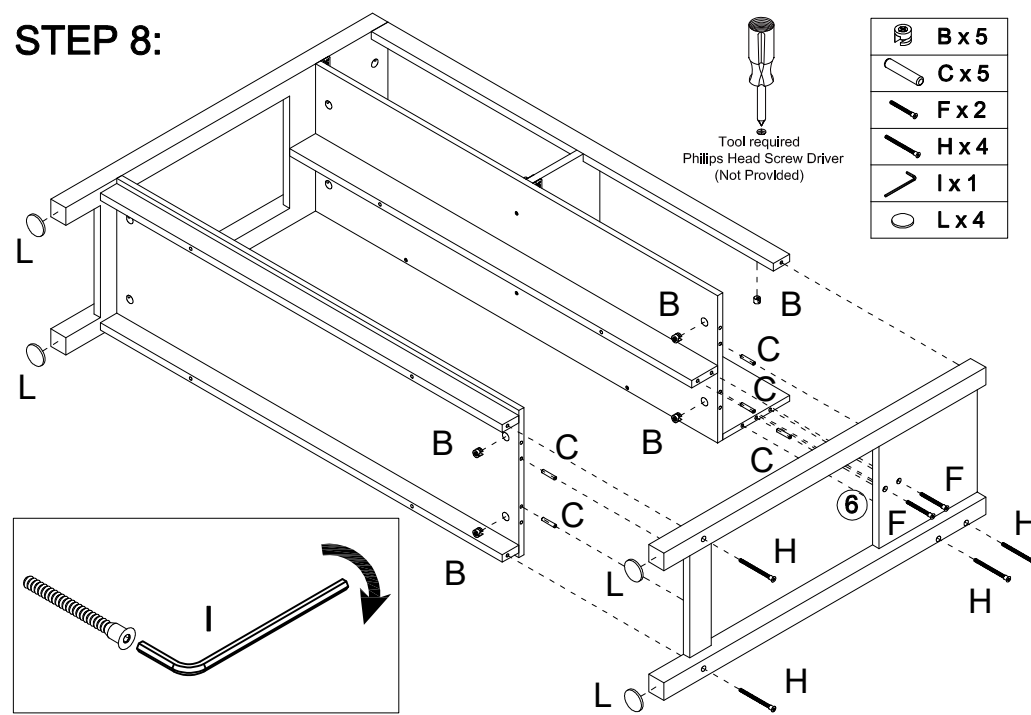




## STEP 9:

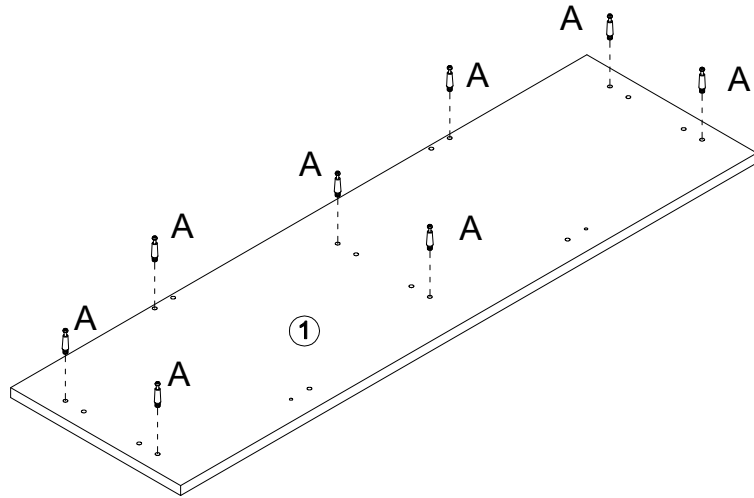 
 A x 8




  
Tool required  
Philips Head Screw Driver  
(Not Provided)

## STEP 10:


 
 B x 8  
 C x 10  
 D x 2

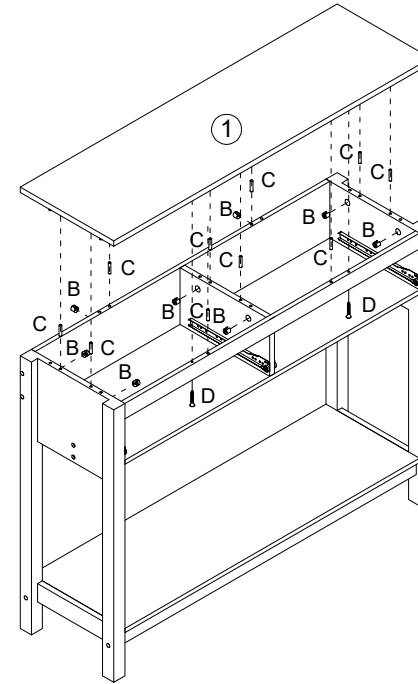


  
Tool required  
Philips Head Screw Driver  
(Not Provided)

## STEP 11:

  
 J x 2

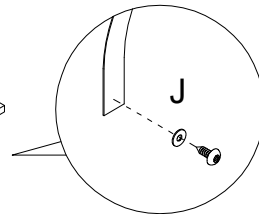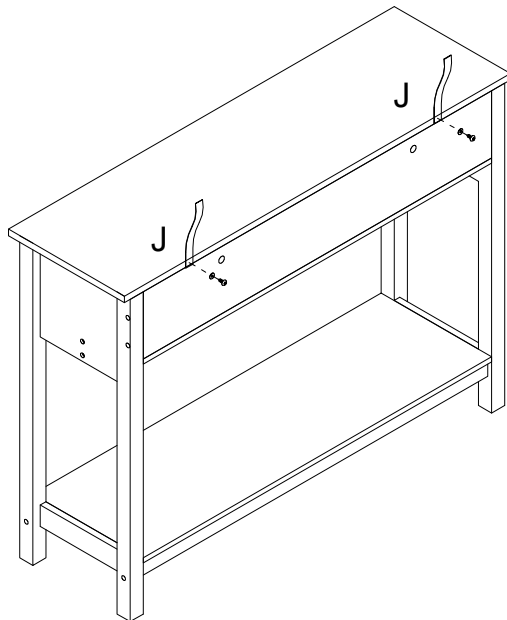


  
Tool required  
Philips Head Screw Driver  
(Not Provided)

## STEP 12:

 
 D x 8

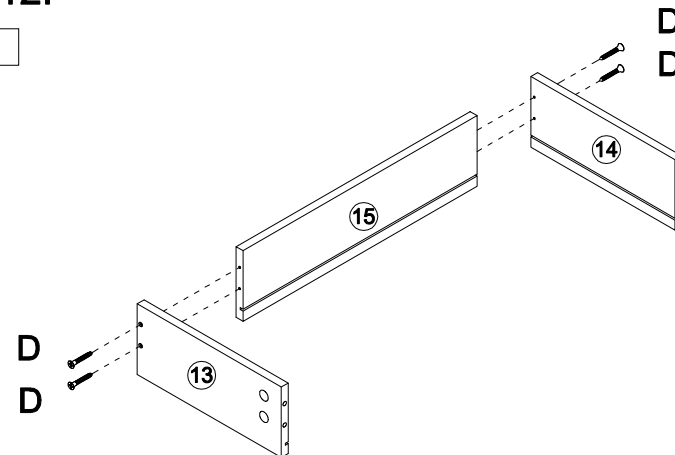

x 2

  
Tool required  
Philips Head Screw Driver  
(Not Provided)



## STEP 13:

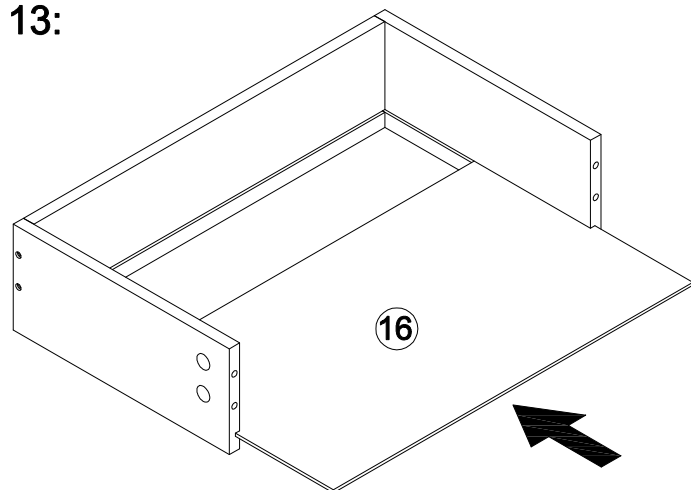 

x 2

## STEP 14:

 
 
A x 8

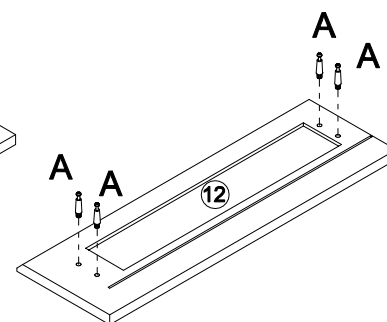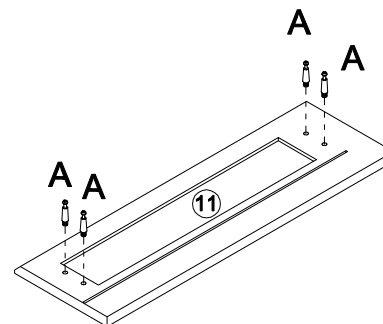

Tool required  
Phillips Head Screw Driver  
(Not Provided)

## STEP 15:

  B x 8

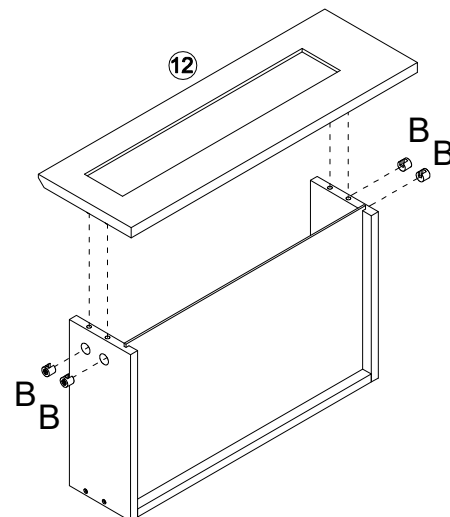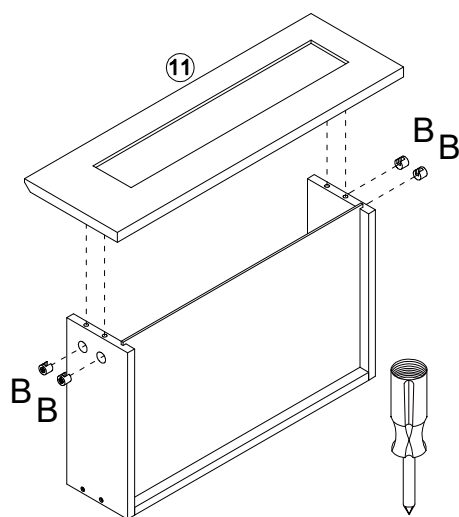



Tool required  
Phillips Head Screw Driver  
(Not Provided)

## STEP 16:

  G x 12

DL x 2


DR x 2

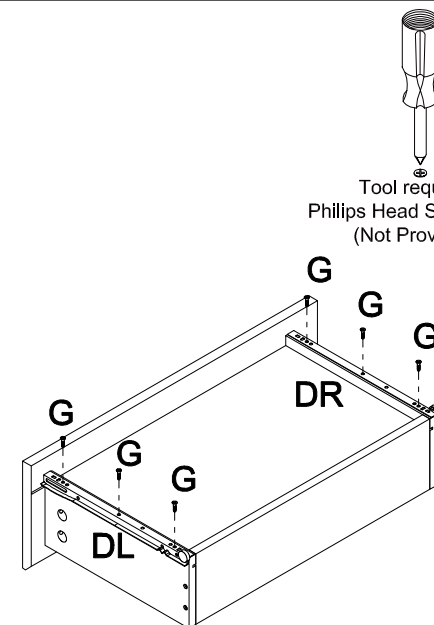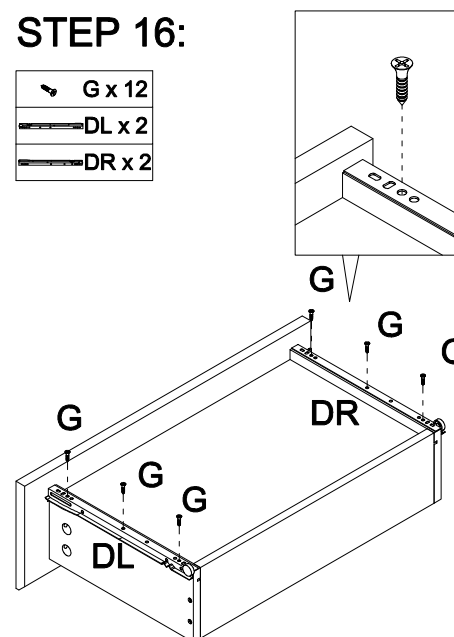

Tool required  
Phillips Head Screw Driver  
(Not Provided)



## STEP 17:

 ○ M x 12

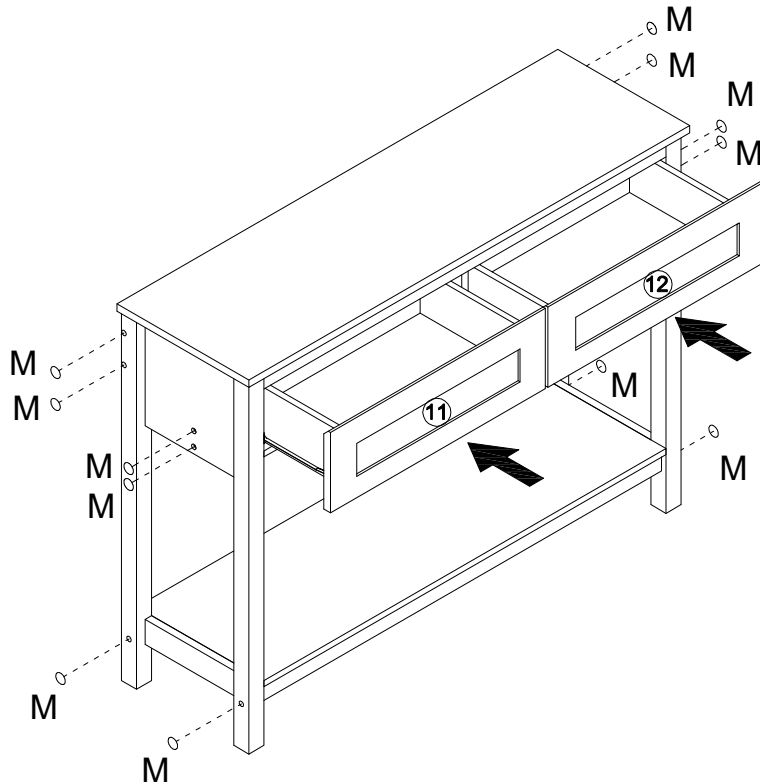

## STEP 18:

  ⚙ K x 2

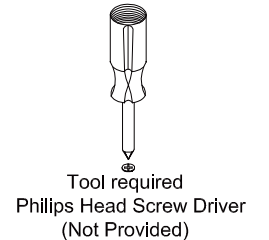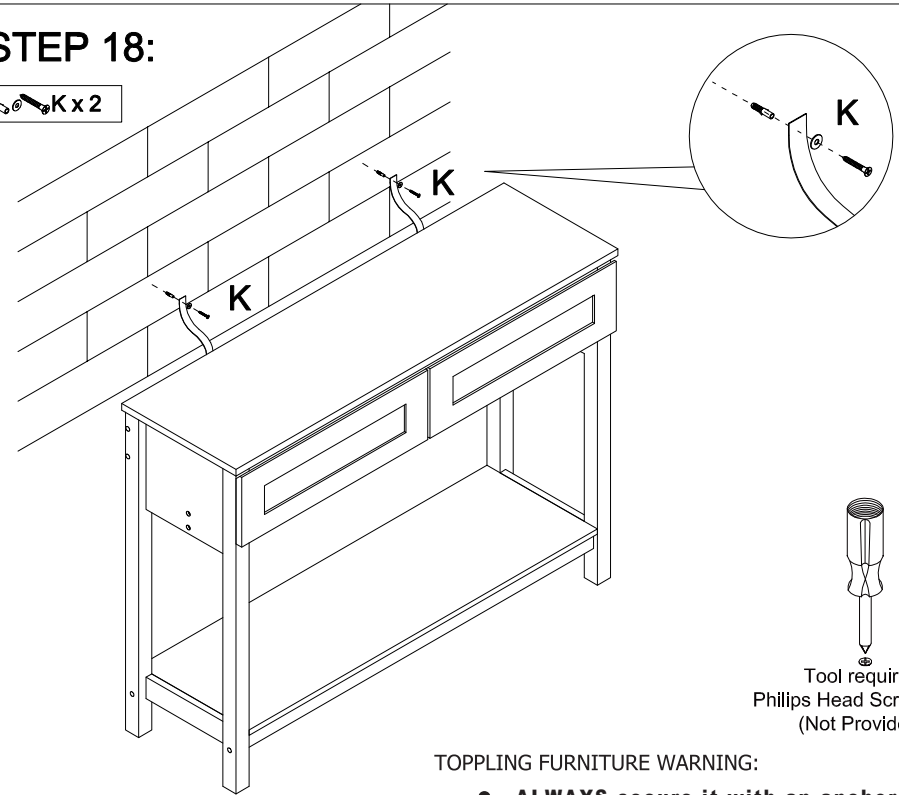


### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).
 
## ⚠ WARNING

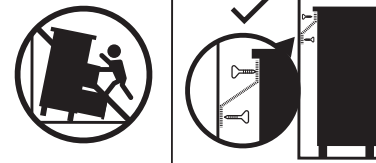

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV  
on this furniture



This is a permanent label. Do not remove!



WARNING: PLEASE SECURE  
YOUR FURNITURE WITH  
THE SUPPLIED WALL FIXING.  
SCAN THE CODE FOR  
MORE INFORMATION.

