


Lion Piano


INSTRUCTION MANUAL

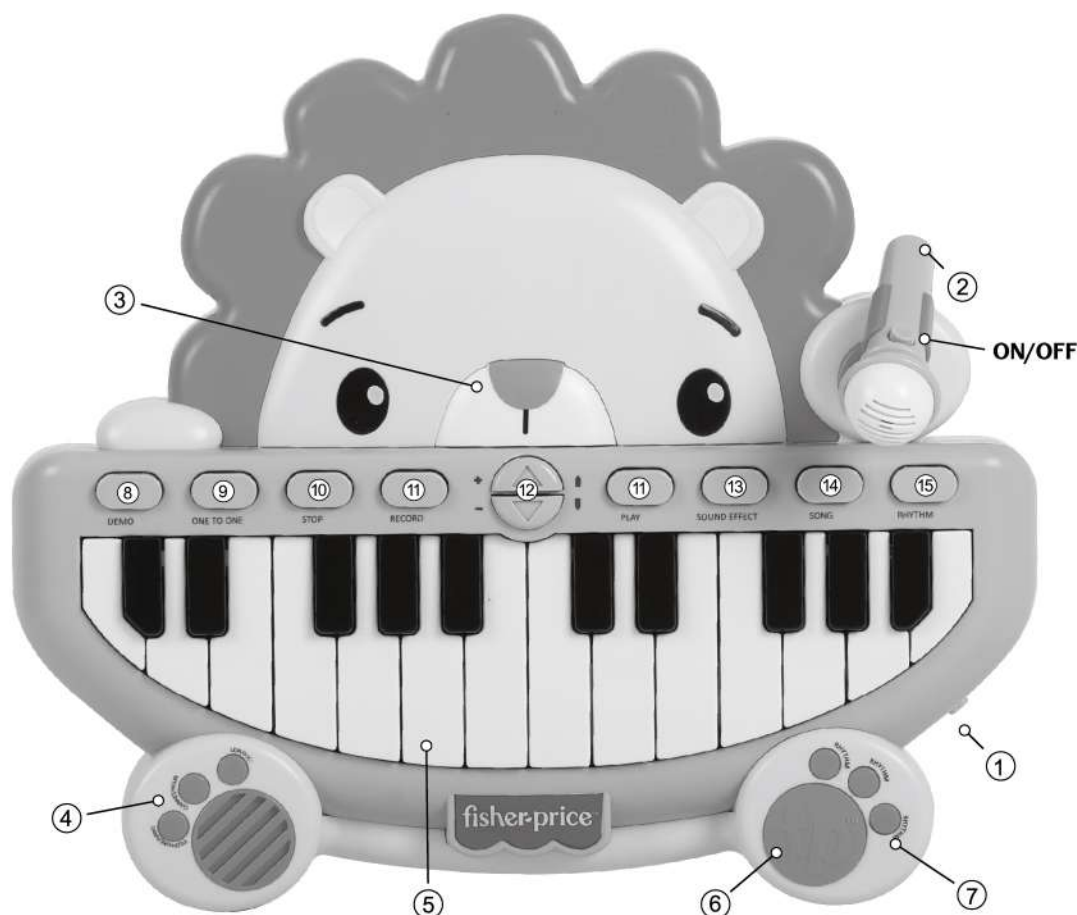

BUTTON FUNCTION DESCRIPTION

- | | | | |
|---------------------|------------------|--|------------------------|
| 1. ON/OFF switch. | 5. Keys. | 9. One to one. | 12. Adjustable volume. |
| 2. Microphone. | 6. Light effect. | 10. Stop Button. | 13. 10 Sound effects. |
| 3. 9 Sound effects. | 7. 6 Rhythms. | 11. Record/Play: Press the record button to record up to 38 notes then press the play button to play the recorded music. | 14. 12 Songs. |
| 4. 6 Timbres. | 8. Demo. | | 15. 6 Rhythms. |

INSTALLING BATTERIES

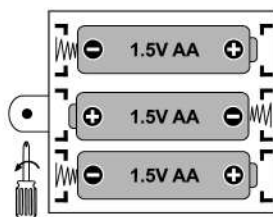

Includes 3 AA batteries 1.5V.
When replacing, use LR06 alkaline batteries.
Dispose of batteries safely.

ADULT SUPERVISION REQUIRED.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.
THE BATTERIES INCLUDED ARE FOR IN STORE DEMONSTRATION PURPOSES ONLY.
PLEASE REPLACE THE BATTERIES IMMEDIATELY AFTER THE PURCHASE.

FISHER-PRIE™ AND ASSOCIATED TRADEMARKS ARE OWNED BY AND USED UNDER LICENSE FROM MATTEL IN THE US AND MATTEL EUROPA B.V. OUTSIDE OF THE US. ©2025 MATTEL.
MANUFACTURED FOR AND DISTRIBUTED BY ELDOHM INTERNATIONAL LIMITED ROOM 505, 5/F, TOWER A, NEW MANDARIN PLAZA 14 SCIENCE MUSEUM ROAD, TST EAST, KOWLOON, HONG KONG. ELDOHM B.V. RUIIMTEVAART 24, 3824 MX AMERSFOORT, THE NETHERLANDS.

⚠ WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

⚠ WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

⚠ WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

⚠ WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN.

⚠ WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

⚠ CAUTION: BATTERY INSTALLATION BY AN ADULT IS REQUIRED.