尺寸 120x180mm/page 材质: 128g 铜版纸过油







CONTENT

SAFETY INFORMATION
WARNINGS
BATTERY SAFETY INSTRUCTIONS
Battery Installation
Common Troubles and Troublesho
Maintenance
Check Before Use
ACCESSORIES LIST
PRODUCT DESCRIPTION
INSTRUCTIONS
BUTTON INSTRUCTIONS —
HOW TO USE



USAGE INSTRUCTIONS

1. Usage Suggestion:

This product is recommended to be used in a dim indoor environment to minimize the impact of ambient light. Choose an open, flat wall or screen as the projection surface for the best experience.

2. Power Supply Instructions:

(1) With the USB Type-C power cable connected, turn on the main unit and the projection will activate. If there is no user operation for 30 minutes, the power-off music will sound, and the main unit will enter the sleep mode, turning off all functions.

(2) With 4 new 1.5V AA (LR06) batteries installed, turn on the main unit and the projection will activate. In battery power mode, if there is no user operation for 5 minutes, the power-off music will sound, and the main unit will enter the shutdown state, turning off all functions.



BUTTON INSTRUCTIONS

Power On/Off Button:

Press to turn on the power. A startup melody will play, and the projection feature will activate. Press again to turn off the main power; a shutdown melody will sound, and all functions will shut down.

Volume Button:

06

In the power-on state: Press to cycle through the volume levels First press: High volume Second press: Mute

Third press: Low volume The volume cycles in this order with each press

Mode Button:

In the power-on state: Press to toggle between the Learning/Atmosphere mode. The default mode is Learning mode. First press: Activate Atmosphere mode. In Atmosphere mode, rotating the projection

disc changes the corresponding image's musical ambiance. Second press: Activate Learning mode. In Learning mode, rotating the projection disc switches to corresponding image's educational voiceover.



Common Troubles and Troubleshooting

- If the device becomes unresponsive, follow these steps:
- 1. Turn off the light power.
- 2. Remove the batteries and cut off the power supply. 3. Leave the device for several minutes before reinserting the batteries.
- 4. Turn the light power back on and use the device again.
- 5. If the device still does not work, replace the batteries with new ones.

Maintenance

- 1. Please clean the product with a dry cloth.
- 2. Keep the main unit away from sunlight and any other heat source. Do not put the main unit in water; please keep it from moisture and water.
- 3. Please remove the batteries if the product is not used for a long time.
- 4. Do not touch the main unit with any hard object or try to disassemble it.

Check Before Use

- 1. Ensure there is no damage to the device body.
- 2. Check the USB cable is not damaged. If any issues are found, do not use the product and contact customer service.
- 3. This product does not include a power adapter.



HOW TO USE

Usage Steps:

07

- Step 1: Insert the assembled projection disc (assembly steps are shown in the diagram).
- Step 2: Press the power on/off button to turn on the device, adjust the volume using the volume button, and switch between Learning mode and Atmosphere
- mode using the mode button. Step 3: Rotate the focusing wheel left and right until the image is clear.
- Step 4: Open the bottom support bracket to adjust the projection angle. Step 5: To replace or remove a slide:

Pull out the projection disc,





After assembling the slide, flip the projection disc 180 degrees again and reinsert it according to the arrow direction markings.





Complete the assembly.

Power Supply Options:

08

USB Type-C Power Cable or Battery: Select between using the USB Type-C power cable or inserting batteries as the main power source. if the power supply applied, battery should be taken out.

Note: Remove the batteries if the device will not be used for an extended period to avoid damage from battery leakage.

Adjusting the Projection Angle:

Step: Manually open the support stand until it locks into place. Place the main unit on a flat surface to adjust the projection angle, either vertically upwards or with a slight tilt.

Focusing Adjustment:

Operation: Rotate the focusing wheel clockwise or counterclockwise to manually adjust the lens focus, achieving a clear projection.

