

Assembly Instructions


















 


43540822 MAYA CHEST OF DRAWERS

WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

 
CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

MAXIMUM SAFE LOAD:15KG FOR TOP PANEL, 7KG FOR EACH DRAWER.

 
 
 
 
 
 
 
 
 
 
 



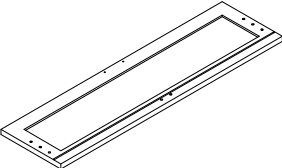 
 
 
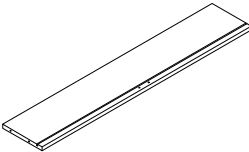 
 
① Hardware List

	A	M6x35mm	35pcs		P		5pcs
	B	Ø15x9mm	35pcs		CL		3pcs
	C	Ø6x30mm	29pcs		CR		3pcs
	D	M4x35mm	22pcs		DL		3pcs
	E	M4x40mm	8pcs		DR		3pcs
	F	M7x40mm	5pcs				
	G		1pcs				
	H		8pcs				
	I	M3x16mm	8pcs				
	J		2pcs				
	K		2pcs				
	L	M3x12mm	42pcs				
	M		3pcs				
	N	M3x12mm	6pcs				
	O	Ø8x30mm	3pcs				

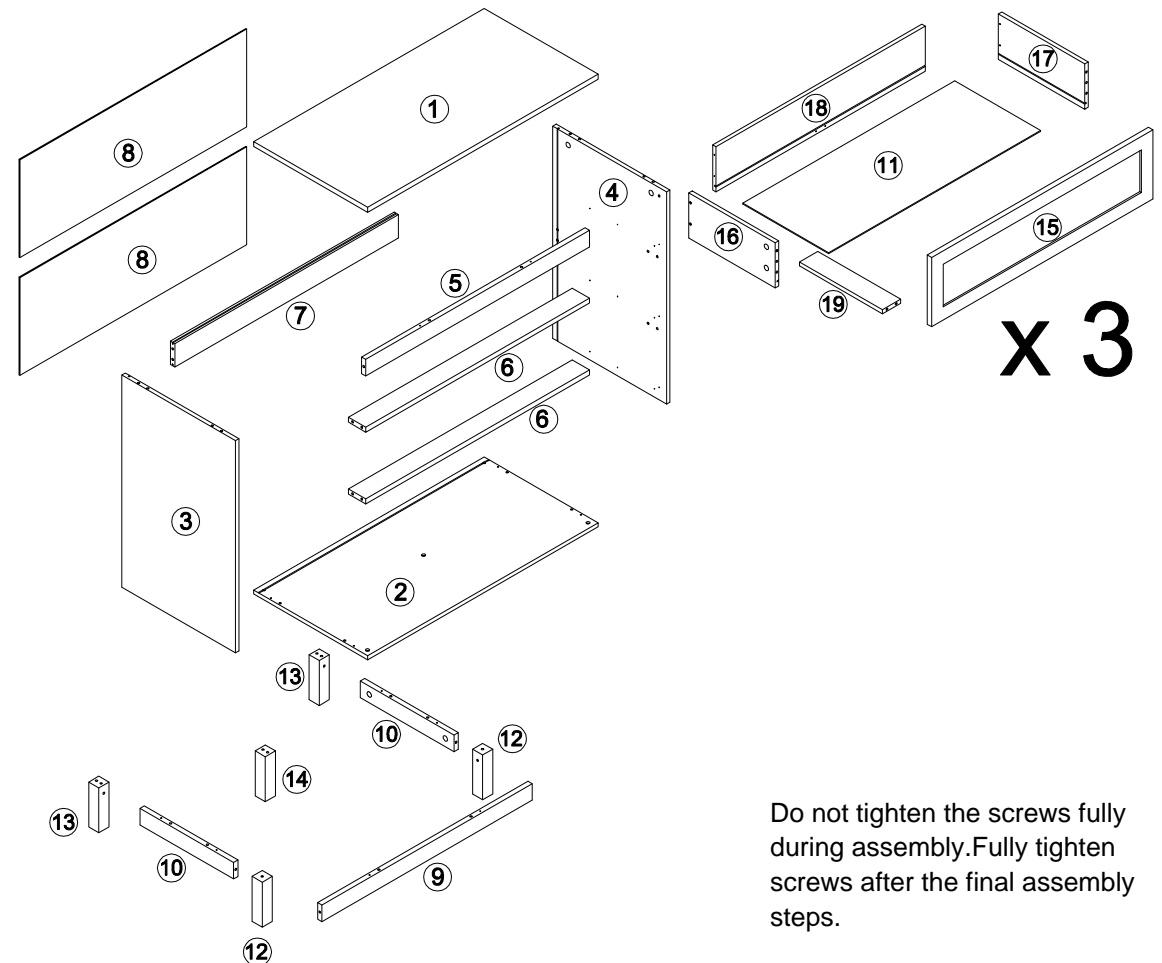


②

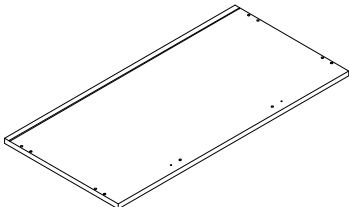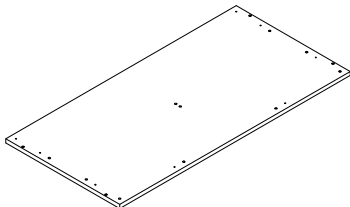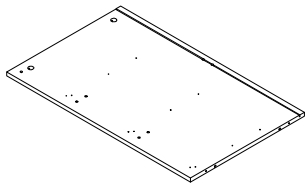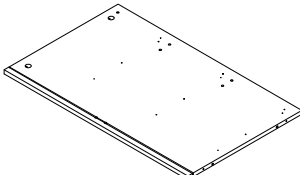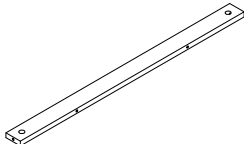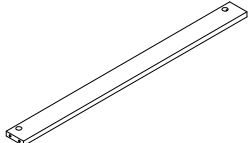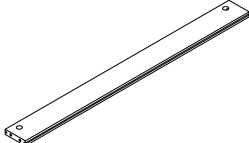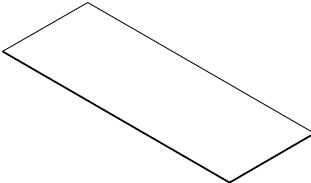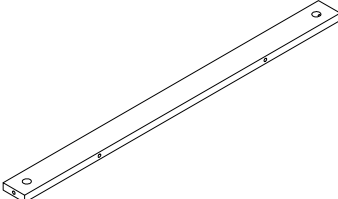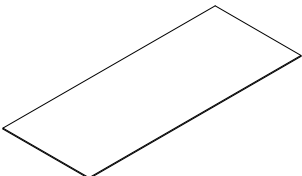 


3

				
① 1PC	② 1PC	③ 1PC	④ 1PC	⑤ 1PC
				
⑥ 2PCS	⑦ 1PC	⑧ 2PCS	⑨ 1PC	⑩ 2PCS
				
⑪ 3PCS	⑫ 2PCS	⑬ 2PCS	⑭ 1PC	⑮ 3PCS
				
⑯ 3PCS	⑰ 3PCS	⑱ 3PCS	⑲ 3PCS	

 
STEP 1:

-  L x 24
-  CL x 3
-  CR x 3

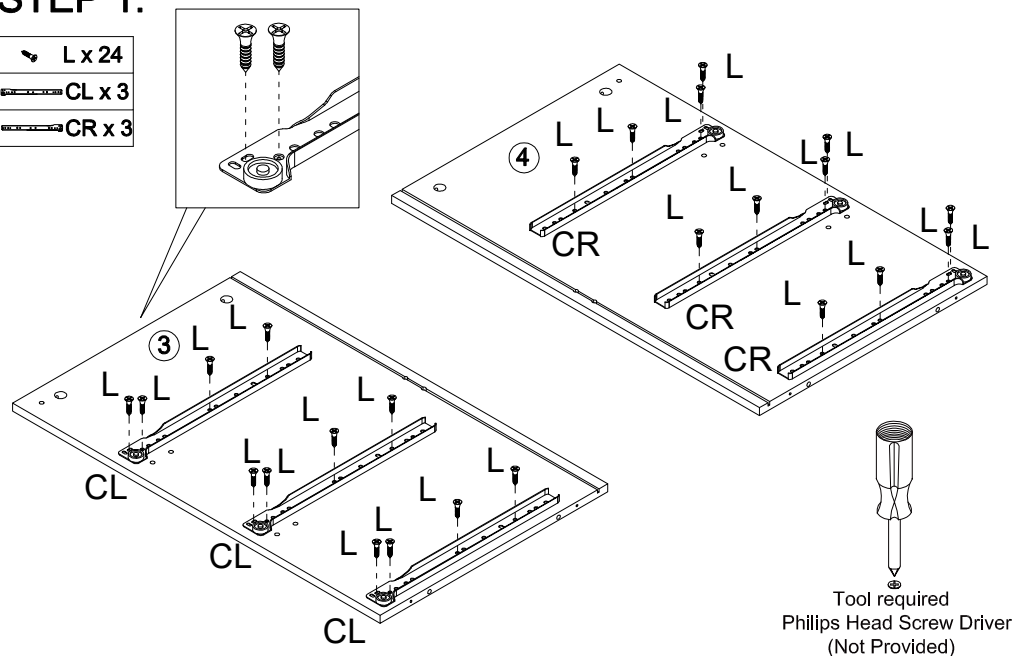



 
STEP 2:

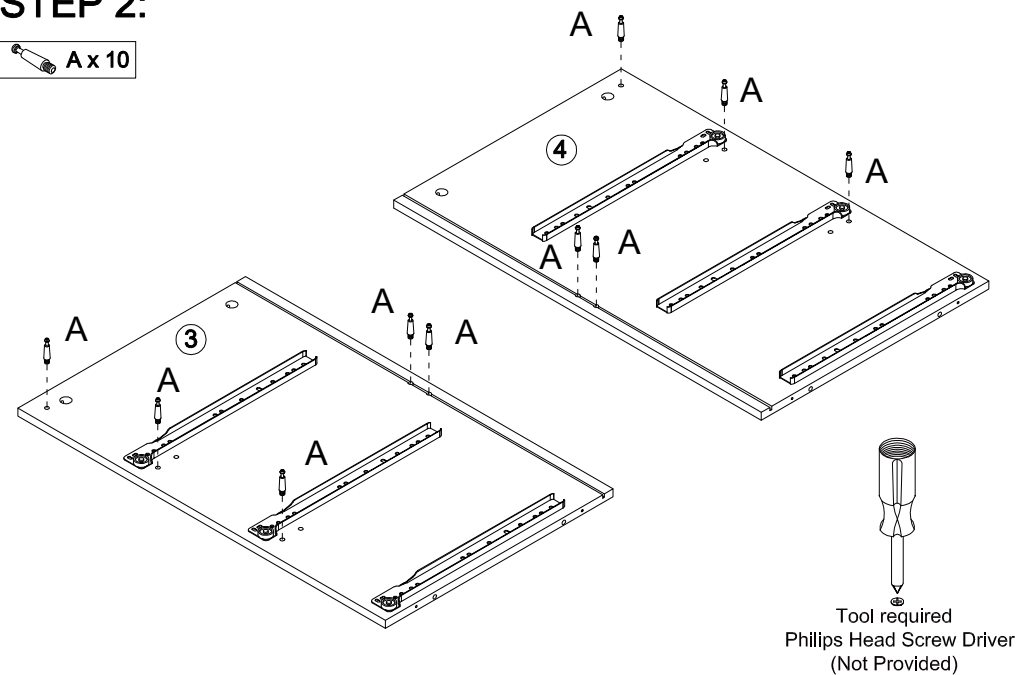-  A x 10





 
STEP 3:

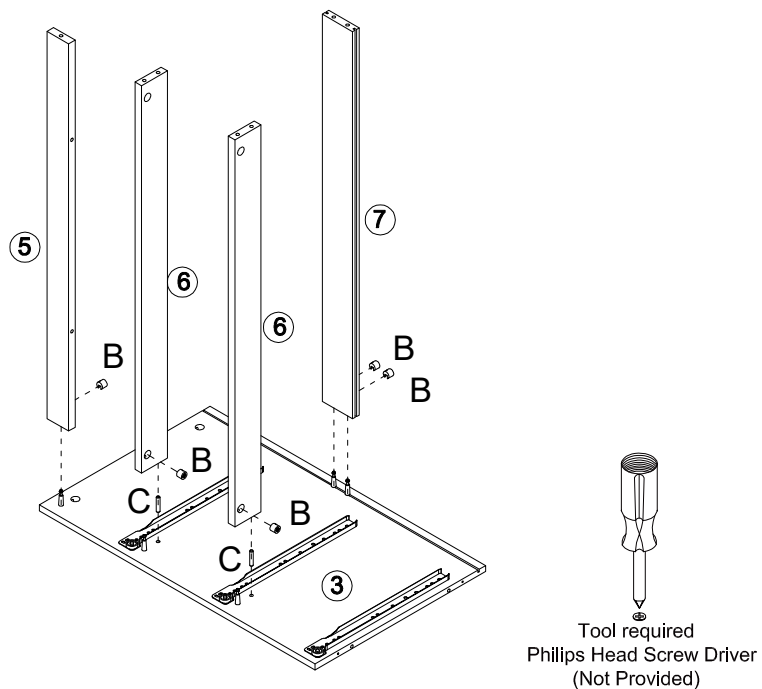-  B x 5
-  C x 2

 


STEP 4:

-  B x 5
-  C x 2

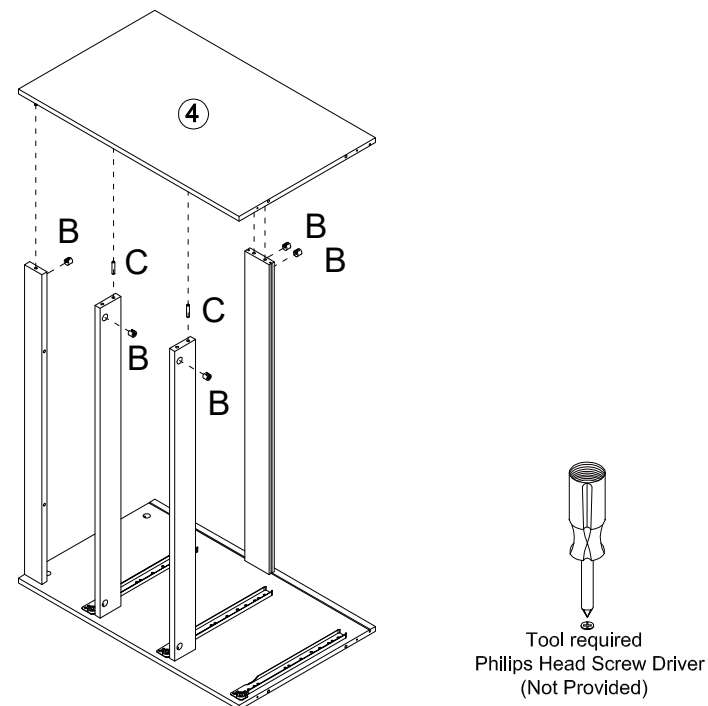 



STEP 5:

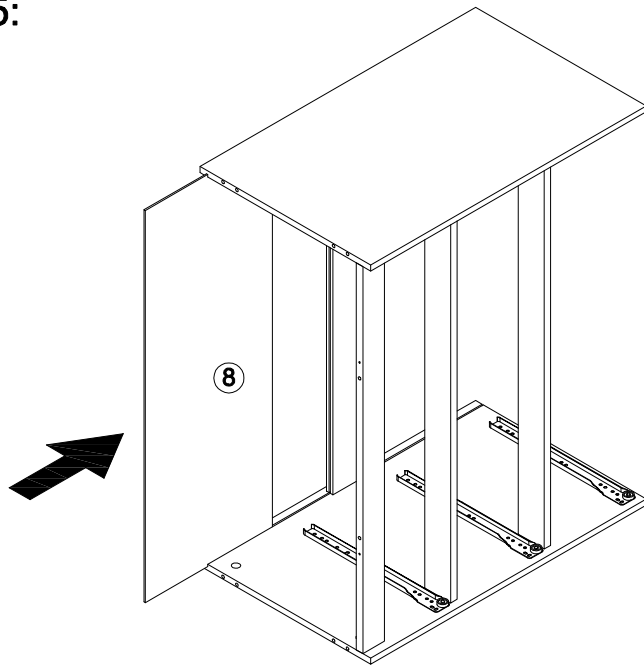




STEP 6:

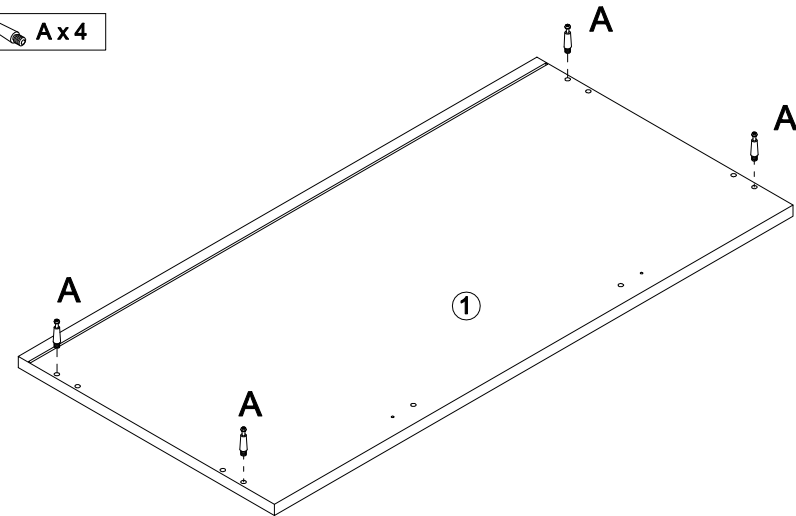 
 A x 4





Tool required
Philips Head Screw Driver
(Not Provided)

STEP 7:

 
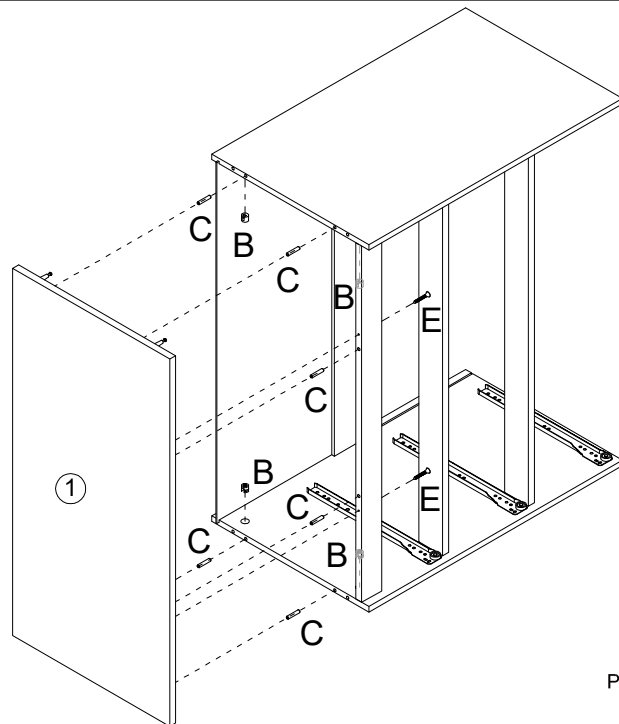 
 B x 4
 C x 6
 E x 2





Tool required
Philips Head Screw Driver
(Not Provided)

STEP 8:

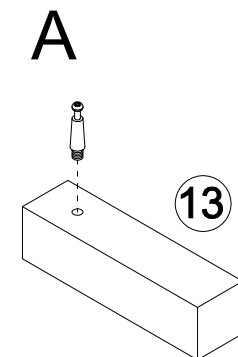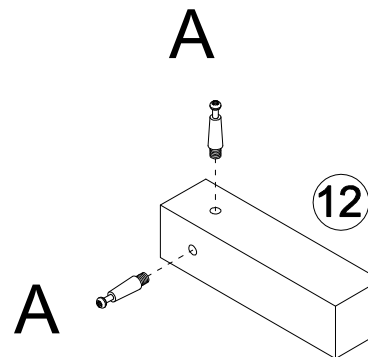
 A x 6

 


x 2





Tool required
Philips Head Screw Driver
(Not Provided)

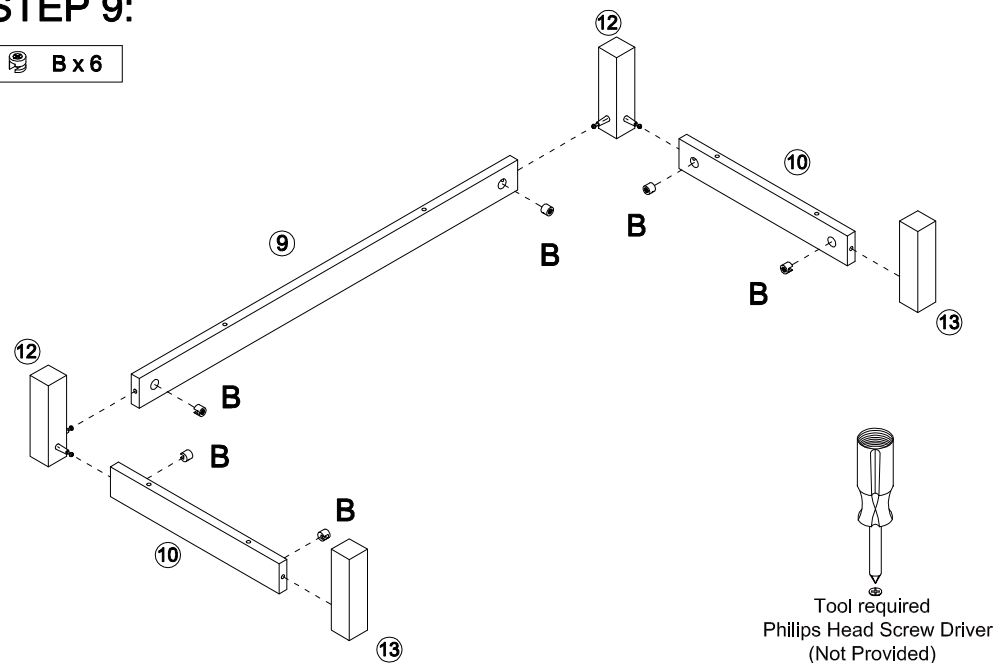 
STEP 9:

 B x 6






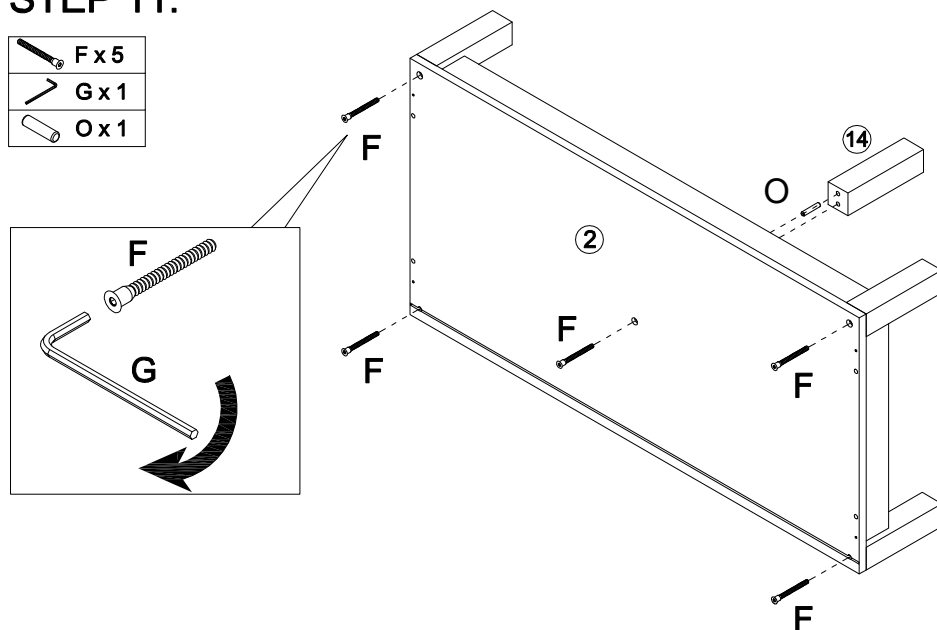 
STEP 10:

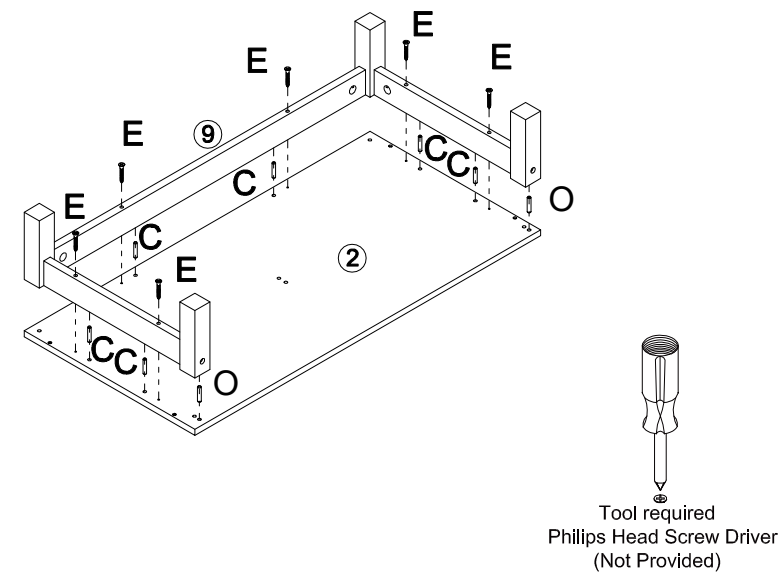 C x 6
 E x 6
 O x 2

 


STEP 11:

 
 
 
 F x 5
 G x 1
 O x 1



 
STEP 12:

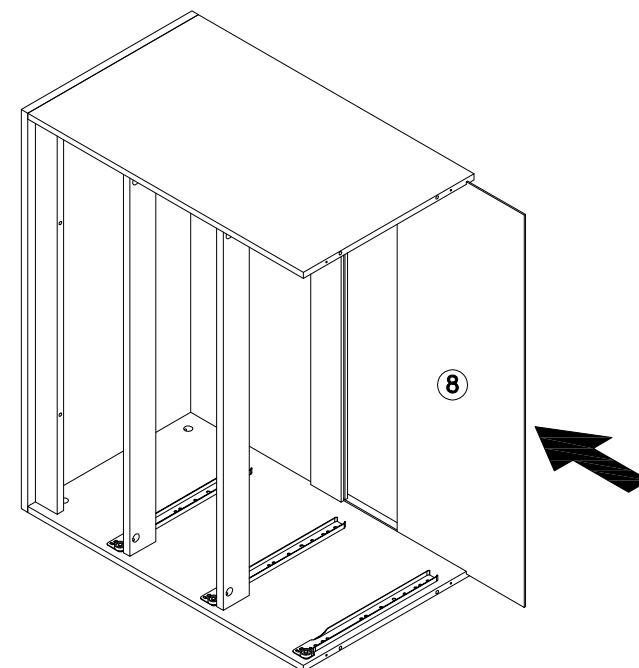

 
STEP 13:

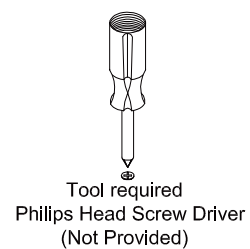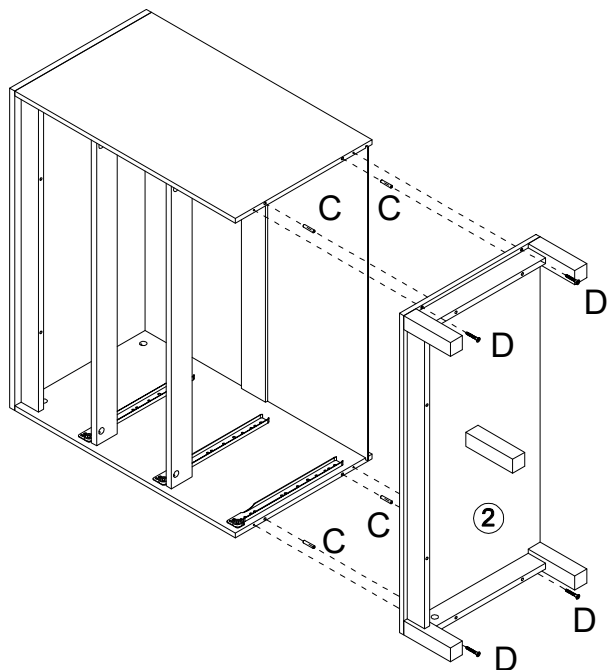

 
STEP 14:

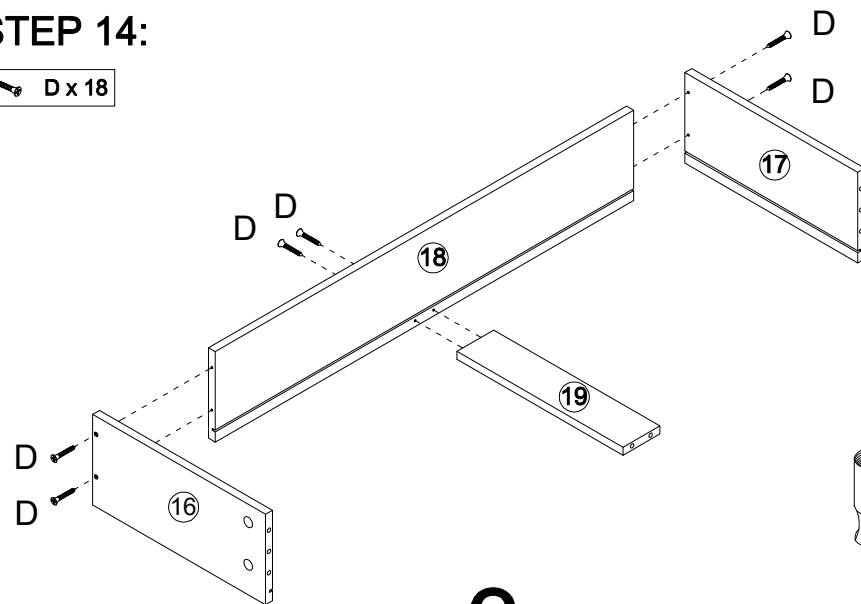

x 3

 
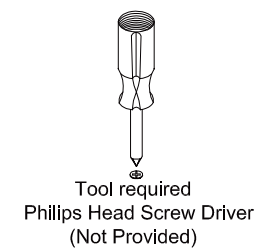 


STEP 15:

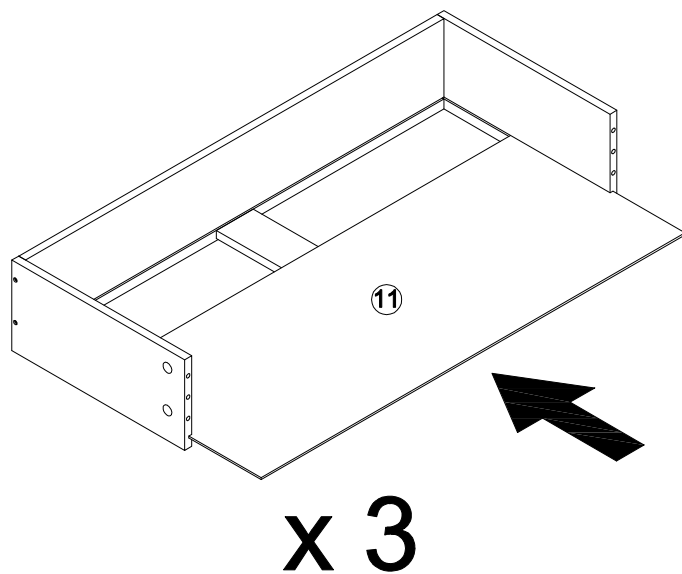 


x 3

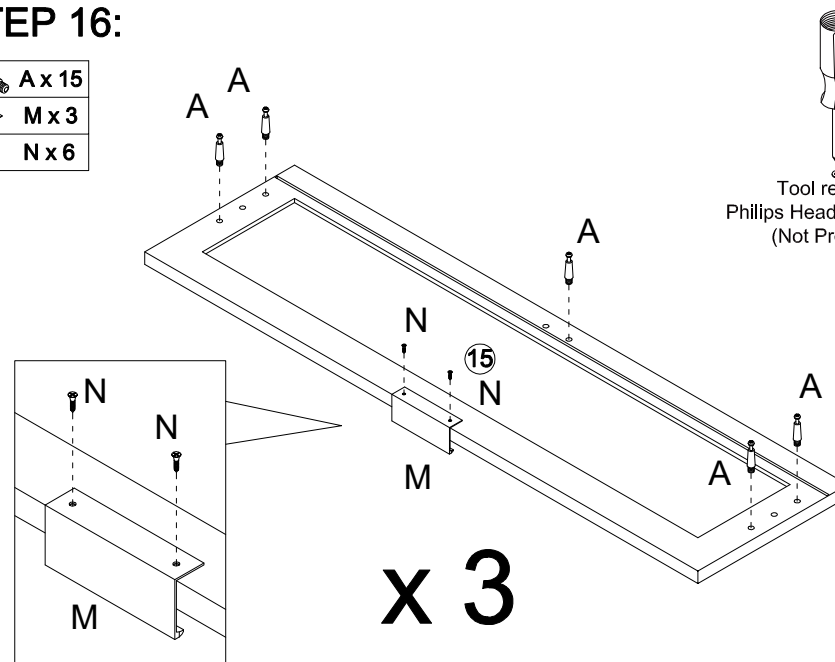

STEP 16:

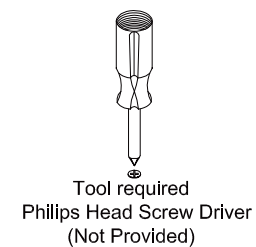 


x 3





STEP 17:

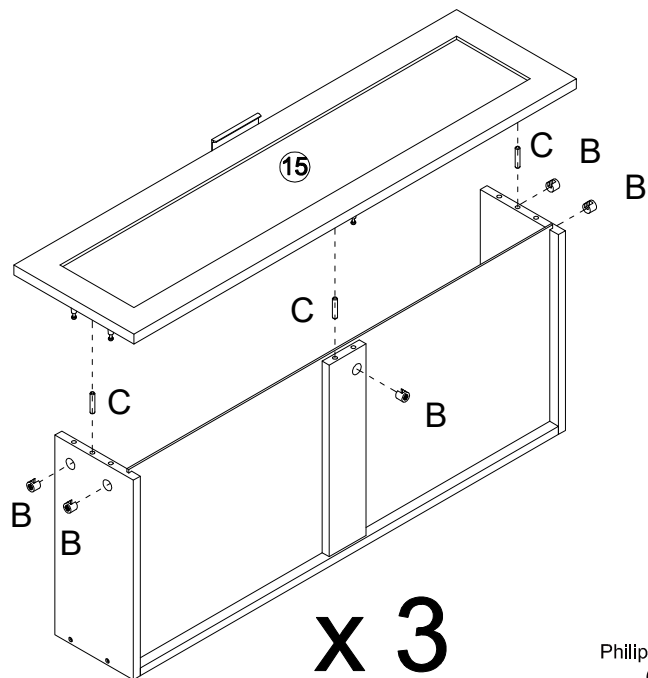 
	B x 15
	C x 9



 
Tool required
Phillips Head Screw Driver
(Not Provided)

STEP 18:



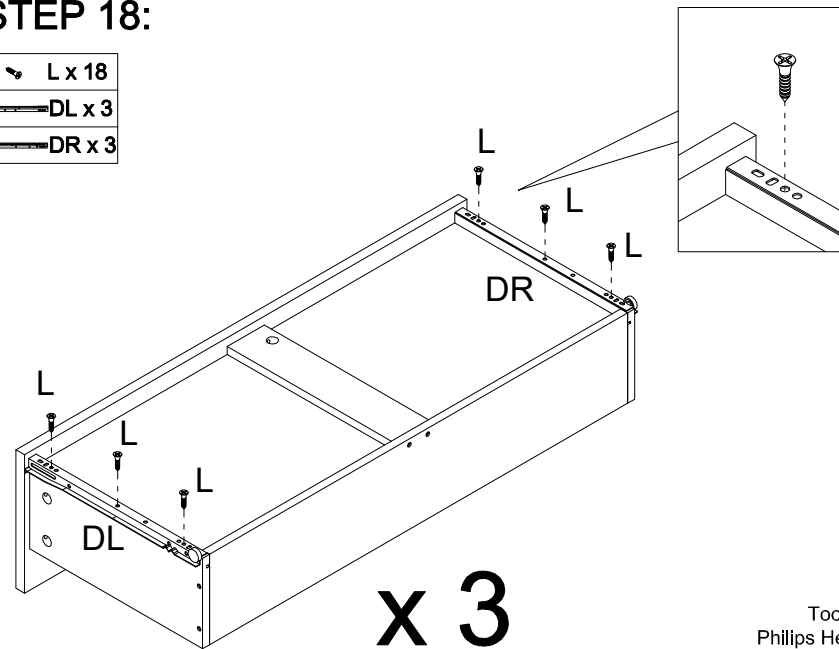

	L x 18
	DL x 3
	DR x 3

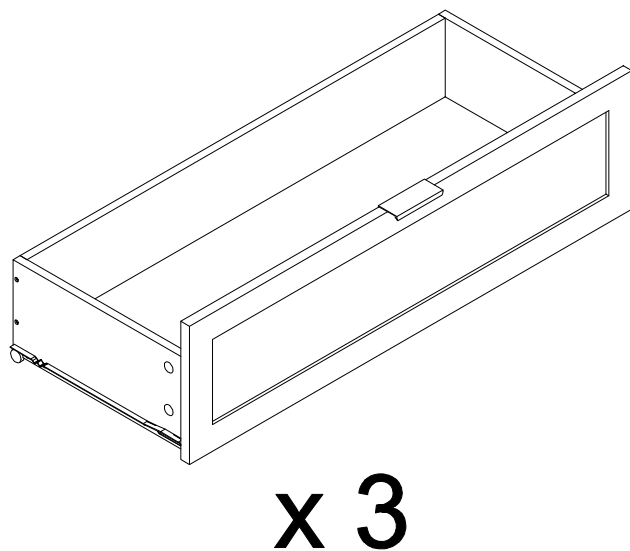 


Tool required
Phillips Head Screw Driver
(Not Provided)



 
STEP 19:

	H x 8
	I x 8
	J x 2
	P x 5

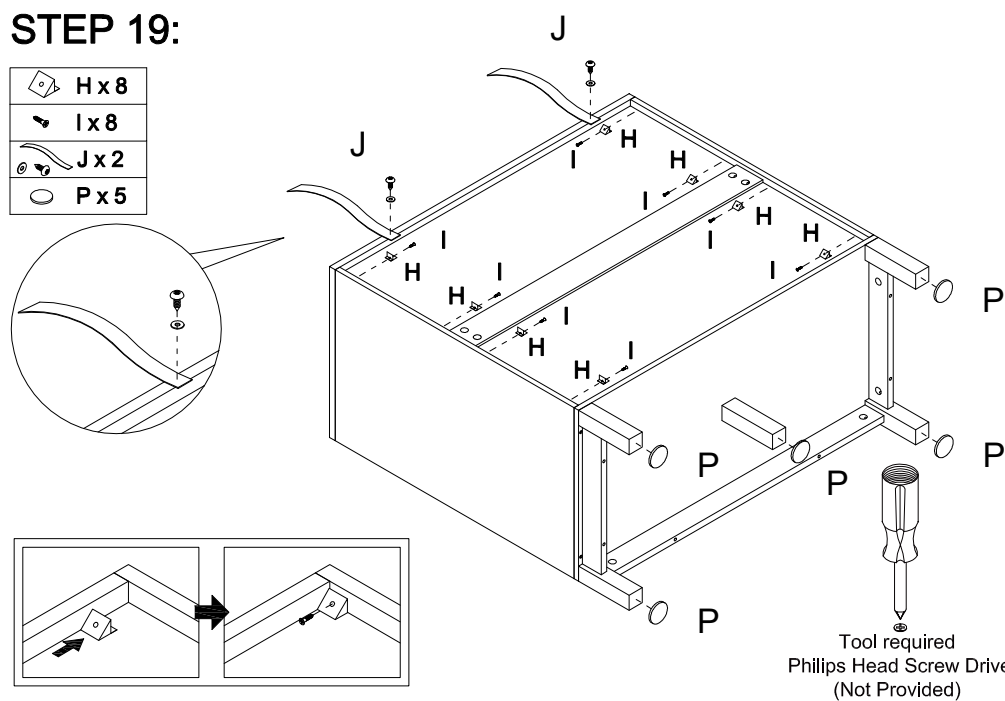

 
 
Tool required
Phillips Head Screw Driver
(Not Provided)

STEP 20:

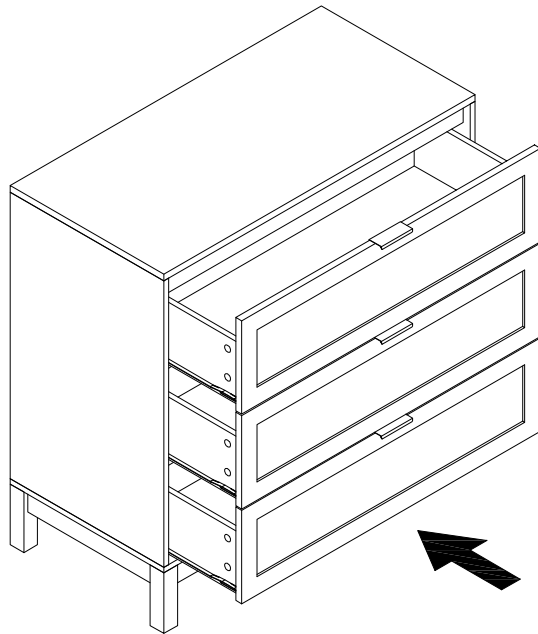

STEP 21:

 K x 2

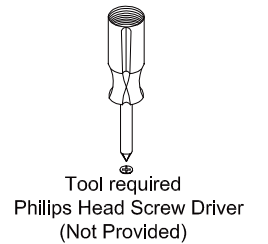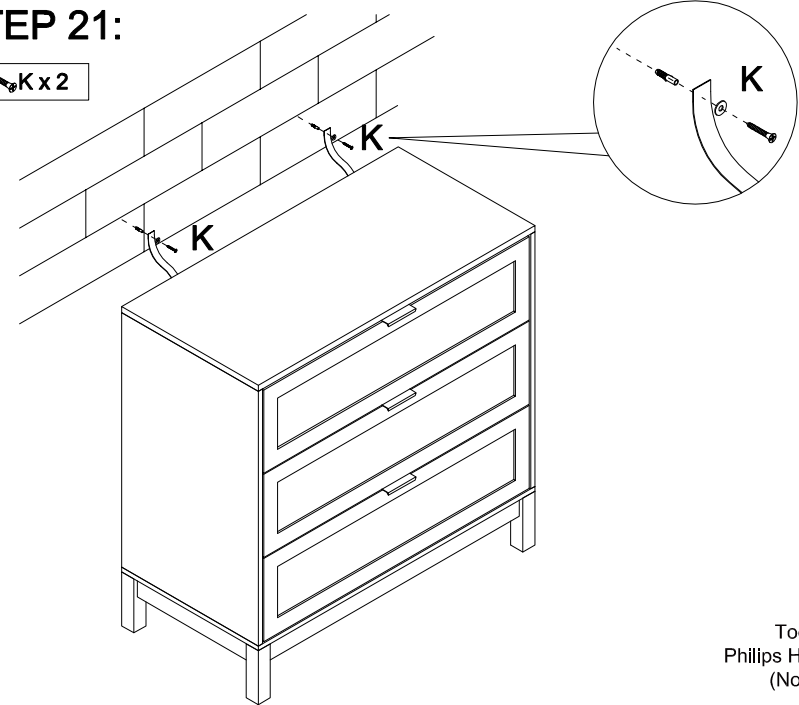

 
TOPPLING FURNITURE WARNING:

- **ALWAYS secure it with an anchor device.**
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- **Use safety drawer locks to prevent children climbing.**
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**

⚠ WARNING

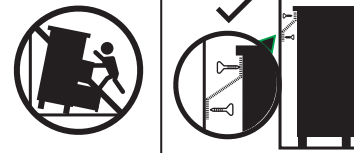

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV
on this furniture



This is a permanent label. Do not remove!



WARNING: PLEASE SECURE
YOUR FURNITURE WITH
THE SUPPLIED WALL FIXING.
SCAN THE CODE FOR
MORE INFORMATION.

