

Assembly Instructions

43540891 MAYA BEDSIDE TABLE






 











 


WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

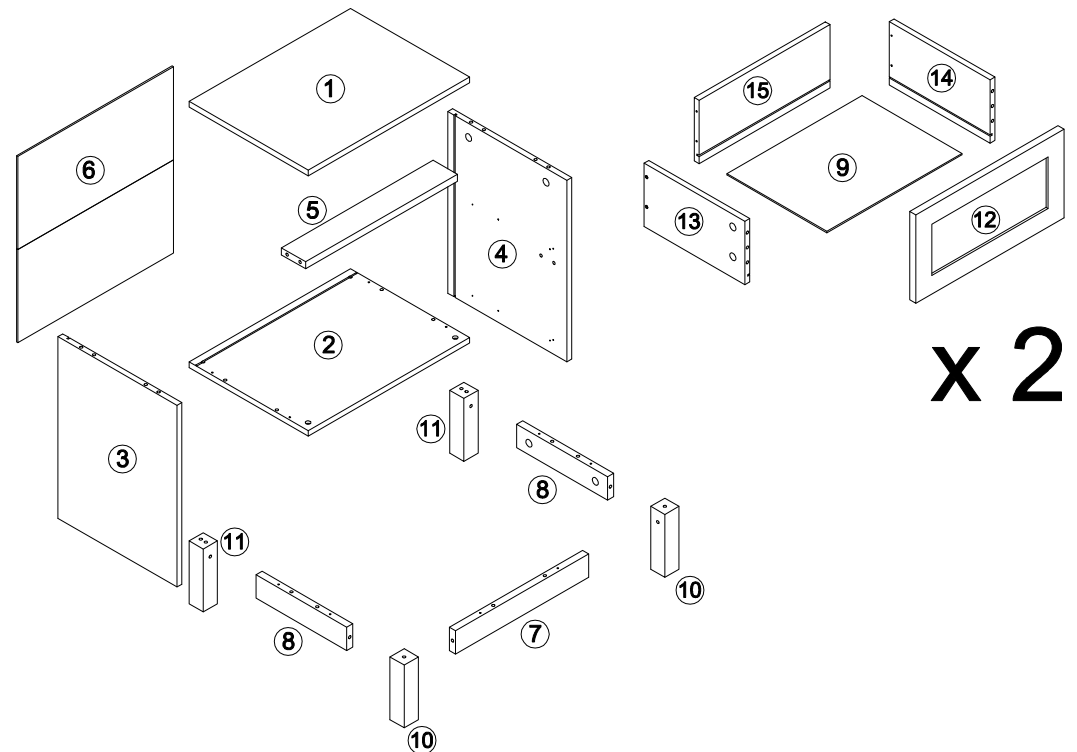 
MAXIMUM SAFE LOAD:10KG FOR TOP PANEL, 5KG FOR EACH DRAWER

①

Hardware List

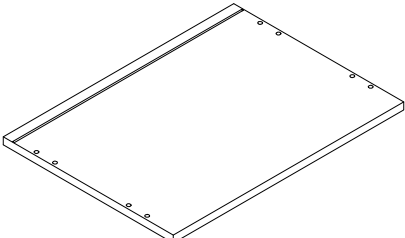 
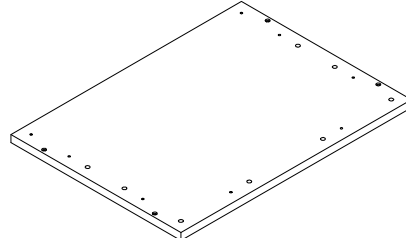 
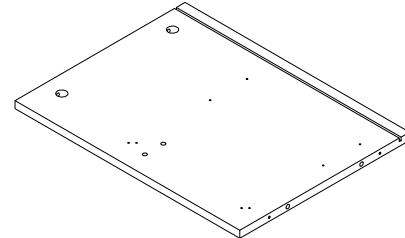 
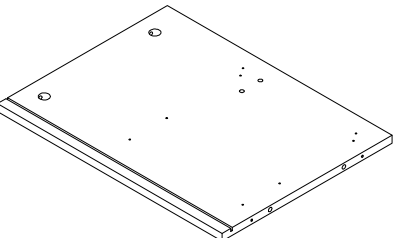 
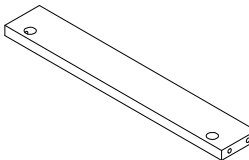 
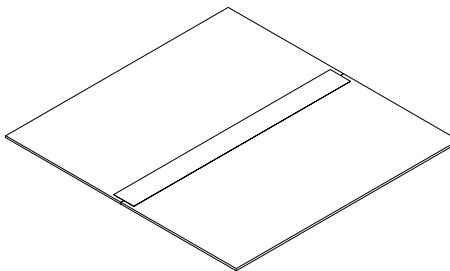 
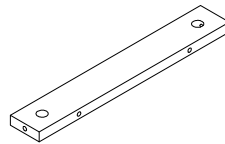 
 
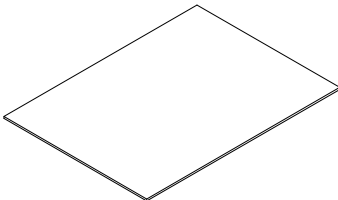 
 

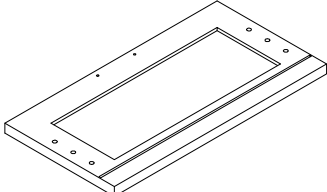 
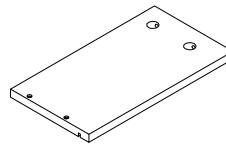 
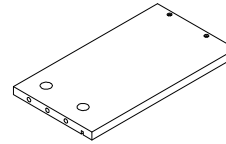 
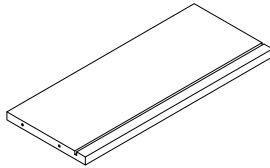 
| | | | | | | | |
|---|---|---------|-------|---|----|---------|------|
|  | A | M6x35mm | 20pcs |  | P | Ø8x30mm | 2pcs |
|  | B | Ø15x9mm | 20pcs |  | CL | | 2pcs |
|  | C | Ø6x30mm | 20pcs |  | CR | | 2pcs |
|  | D | M4x35mm | 12pcs |  | DL | | 2pcs |
|  | E | M4x40mm | 6pcs |  | DR | | 2pcs |
|  | F | M7x40mm | 4pcs | | | | |
|  | G | | 1pcs | | | | |
|  | H | | 4pcs | | | | |
|  | I | M3x16mm | 4pcs | | | | |
|  | J | | 1pcs | | | | |
|  | K | | 1pcs | | | | |
|  | L | M3x12mm | 28pcs | | | | |
|  | M | | 2pcs | | | | |
|  | N | M3x12mm | 4pcs | | | | |
|  | O | | 4pcs | | | | |

②



 
 


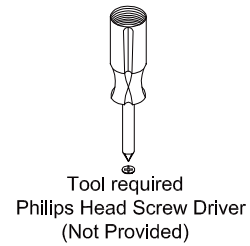 
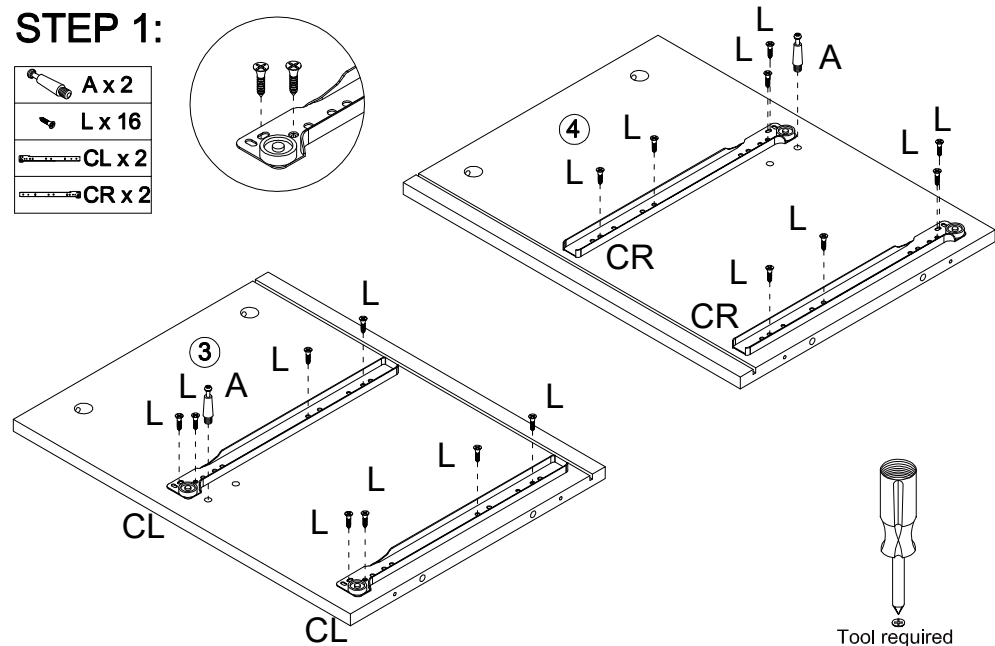 
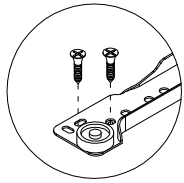 
Do not tighten the screws fully during assembly. Fully tighten screws after the final assembly steps.

3



| | | | |
|---|---|---|--|
|  |  |  |  |
| ① 1PC | ② 1PC | ③ 1PC | ④ 1PC |
|  |  |  |  |
| ⑤ 1PC | ⑥ 1PC | ⑦ 1PC | ⑧ 2PCS |
|  |  |  |  |
| ⑨ 2PCS | ⑩ 2PCS | ⑪ 2PCS | ⑫ 2PCS |
|  |  |  | |
| ⑬ 2PCS | ⑭ 2PCS | ⑮ 2PCS | |

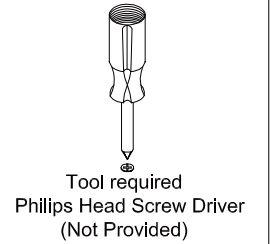 
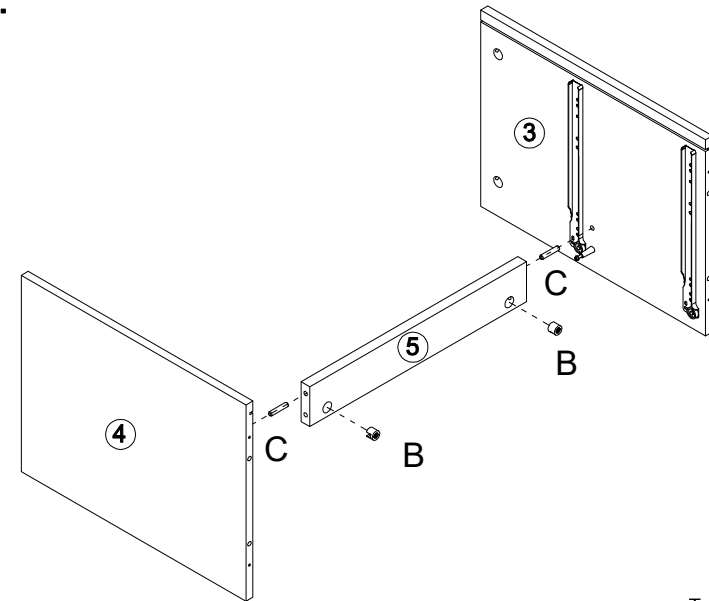 
STEP 1:

-  A x 2
-  L x 16
-  CL x 2
-  CR x 2



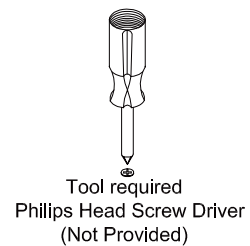 
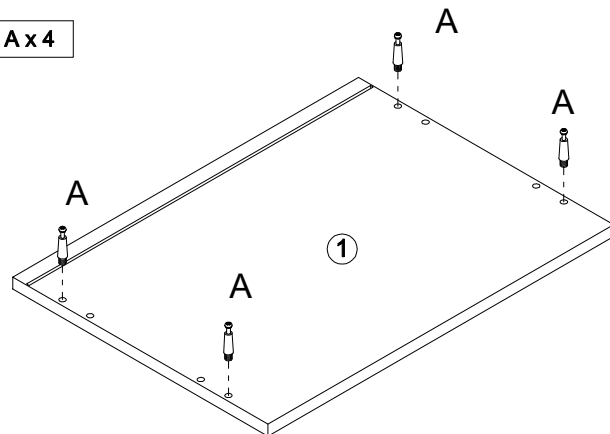 
STEP 2:

-  B x 2
-  C x 2





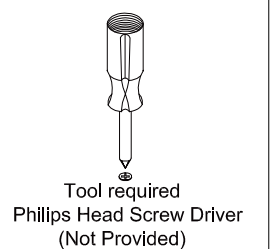 
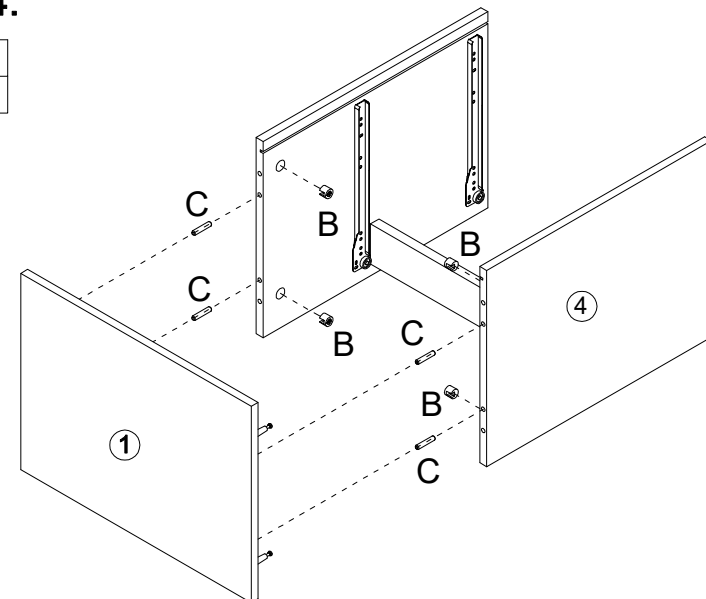 
STEP 3:

-  A x 4



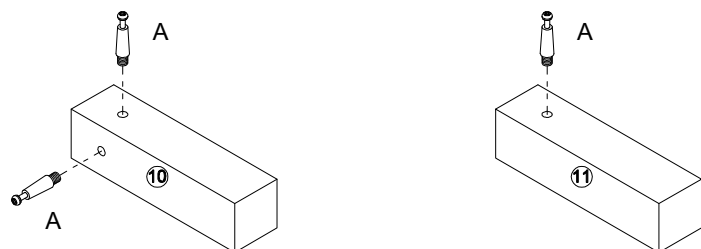 
STEP 4:

-  B x 4
-  C x 4

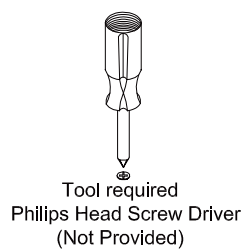 


STEP 5:


 A x 6

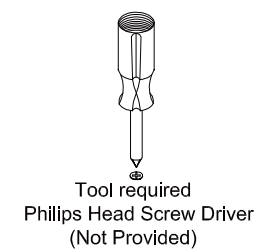 
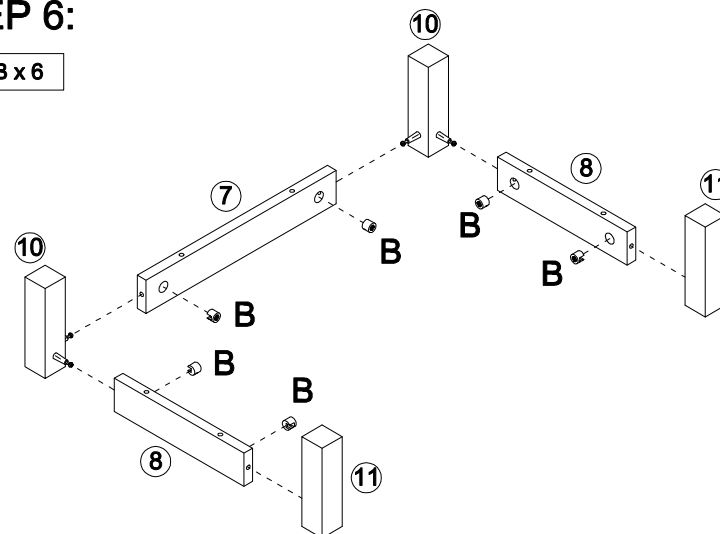 


x 2



 


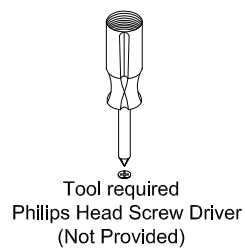 
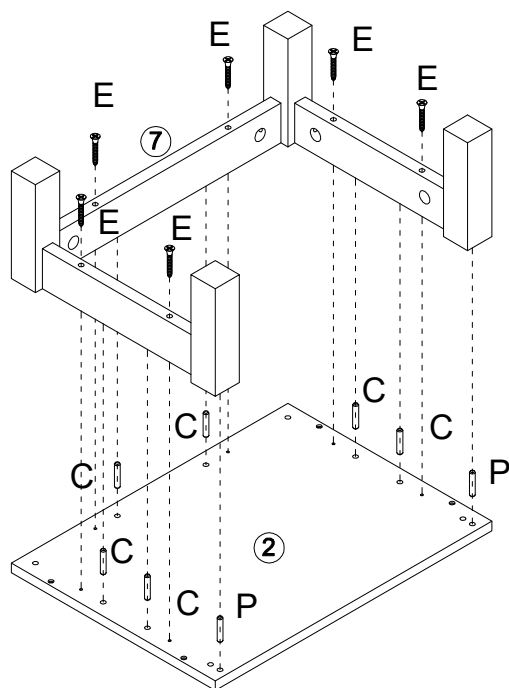 
STEP 6:

 B x 6





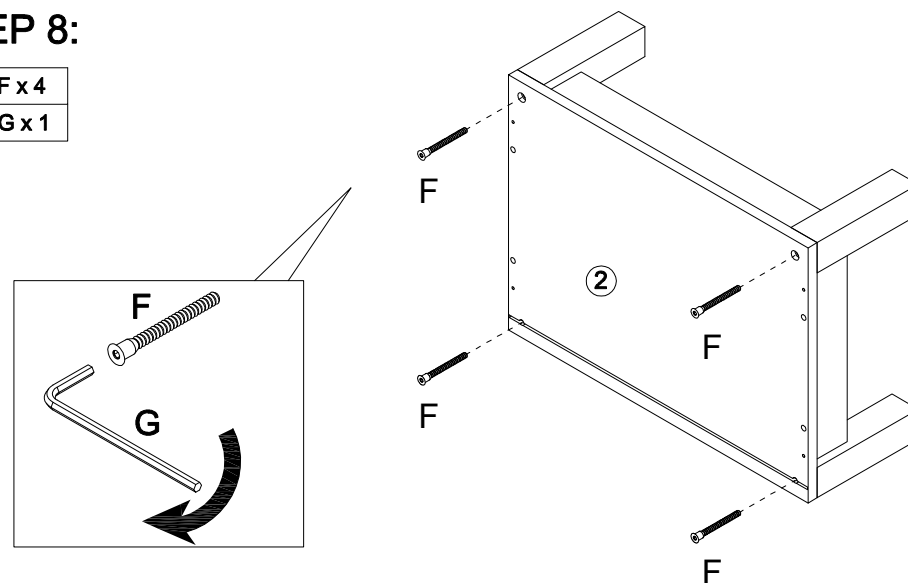 
STEP 7:

 C x 6
 E x 6
 P x 2

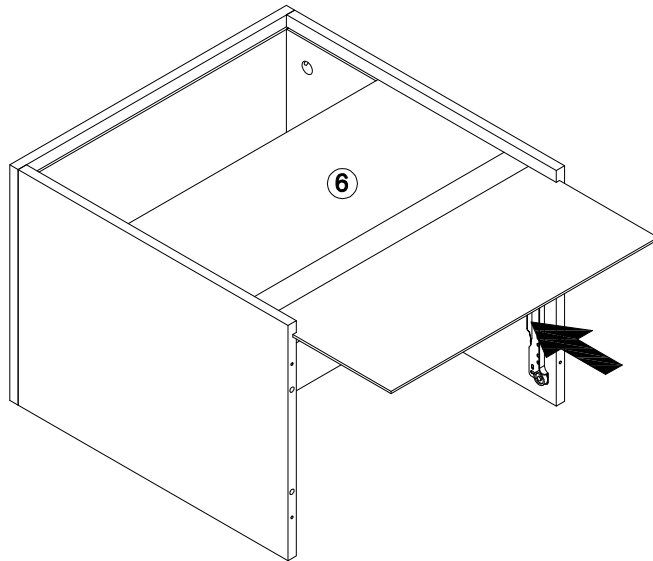 


STEP 8:

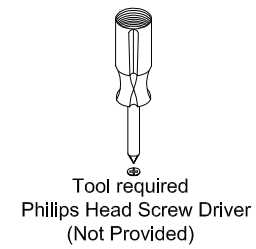 
 F x 4
 G x 1



STEP 9:

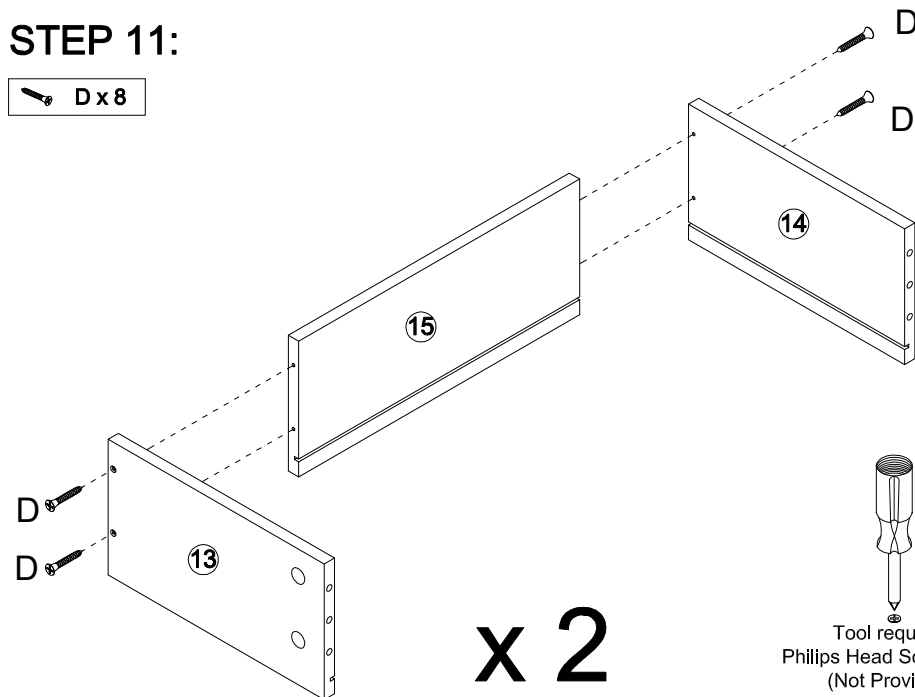 


STEP 10:

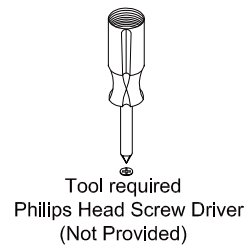 


Tool required
 Philips Head Screw Driver
 (Not Provided)

STEP 11:

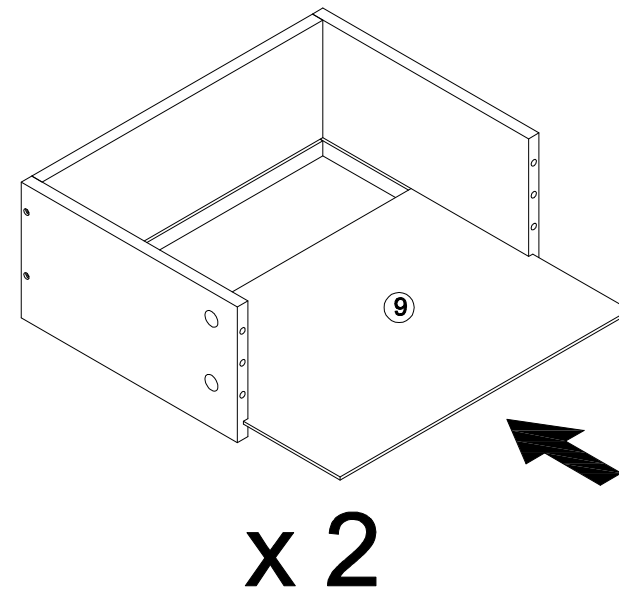 


x 2






Tool required
 Philips Head Screw Driver
 (Not Provided)

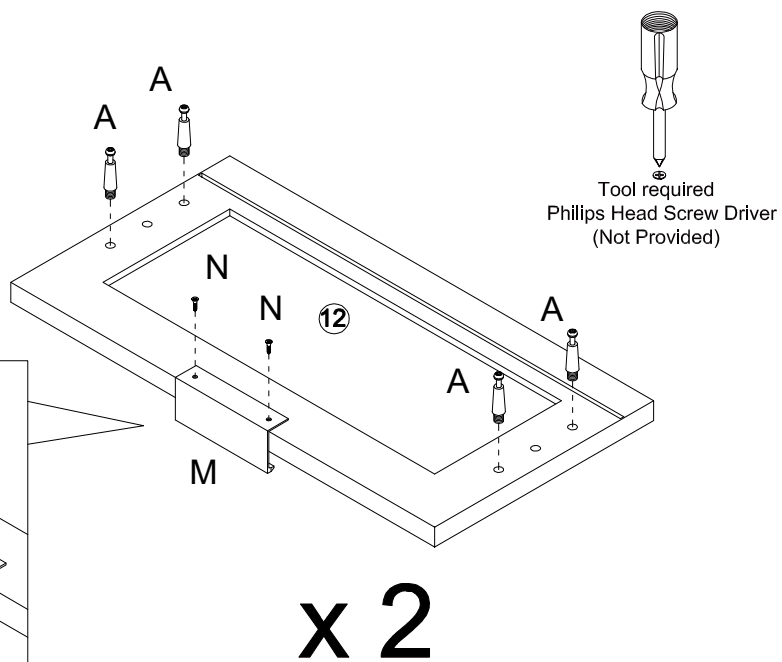 
STEP 12:





x 2

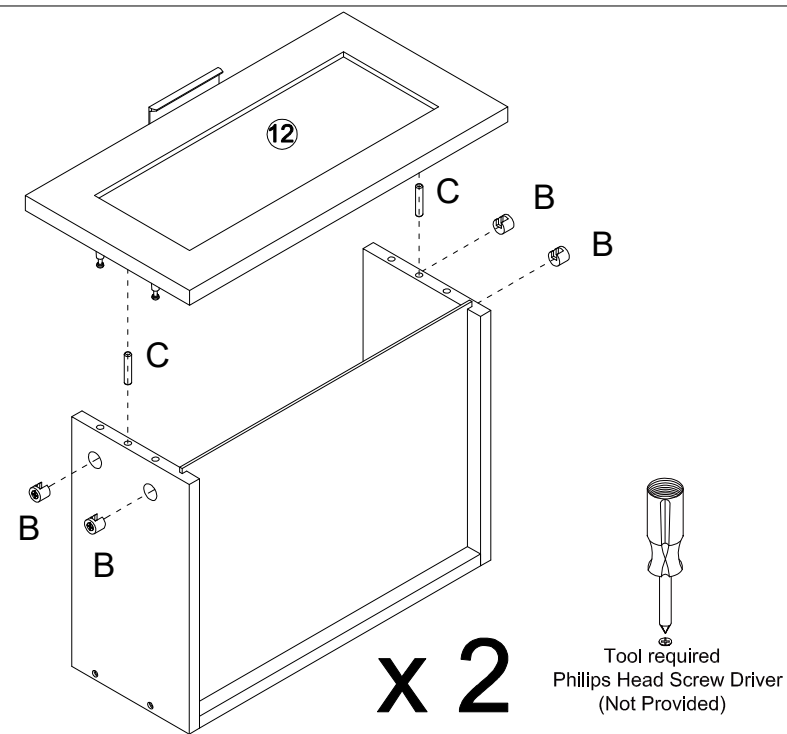 
STEP 13:

| | |
|---|-------|
|  | A x 8 |
|  | M x 2 |
|  | N x 4 |






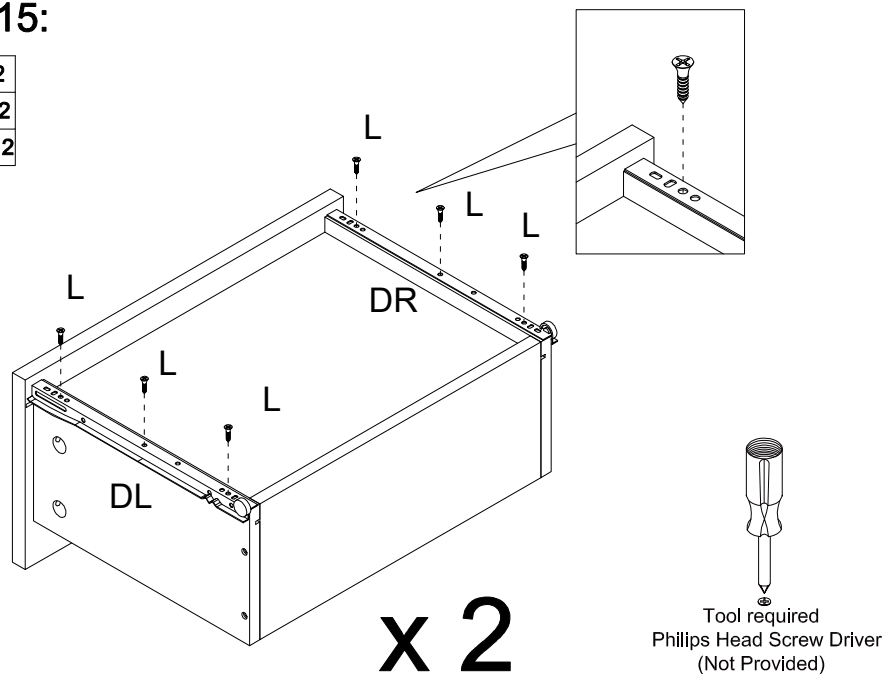 
STEP 14:

| | |
|---|-------|
|  | B x 8 |
|  | C x 4 |







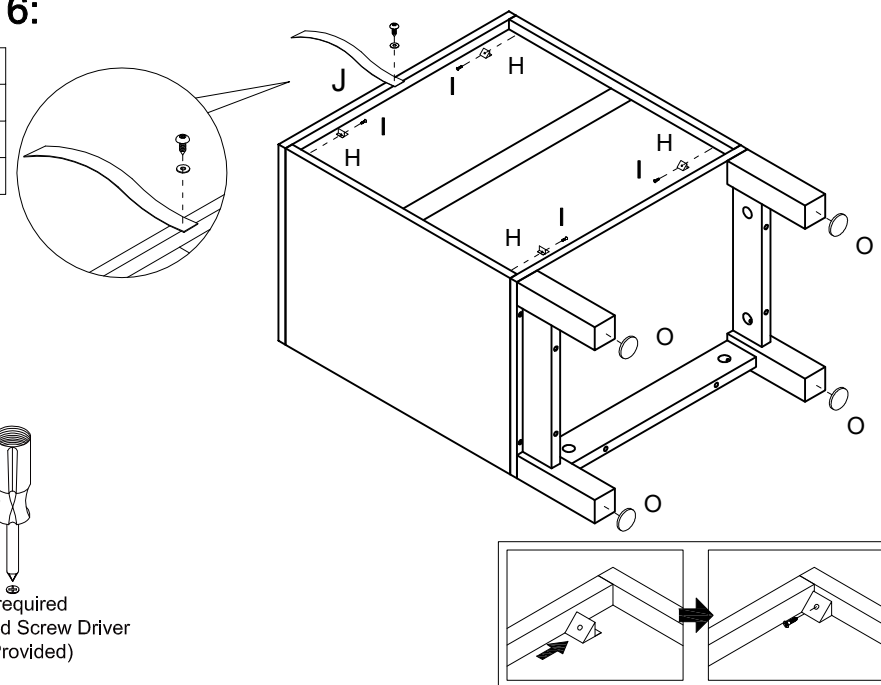 
STEP 15:

| | |
|---|--------|
|  | L x 12 |
|  | DL x 2 |
|  | DR x 2 |

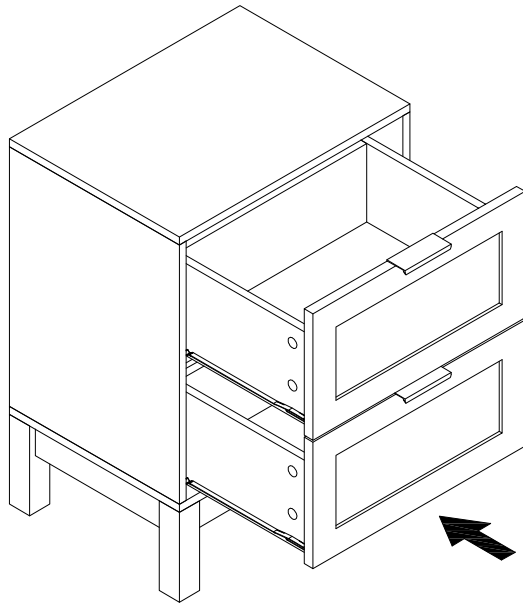 


STEP 16:

| | |
|--|-------|
|  | H x 4 |
|  | I x 4 |
|  | J x 1 |
|  | O x 4 |

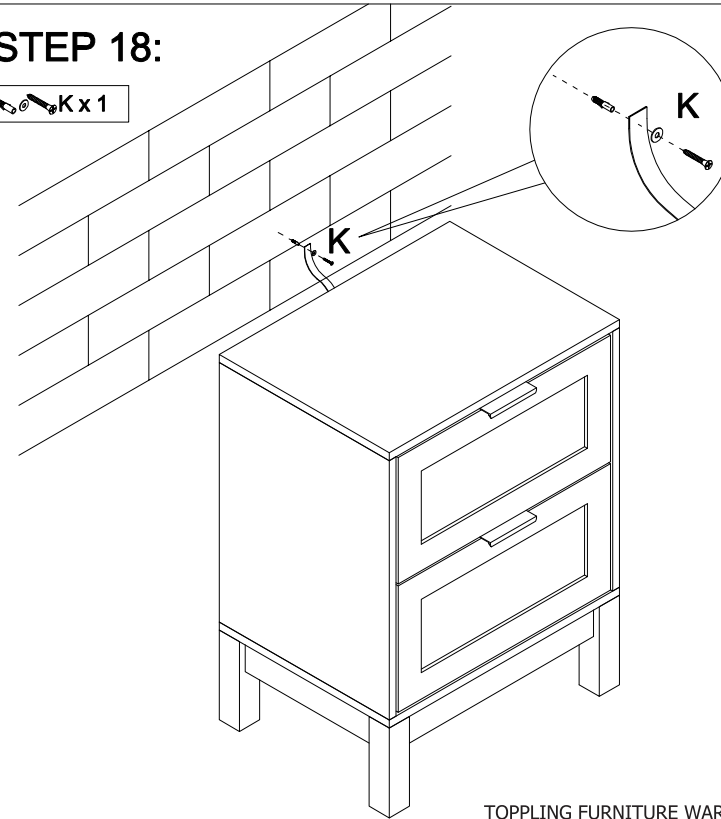 



STEP 17:



STEP 18:

 K x 1




Tool required
Phillips Head Screw Driver
(Not Provided)

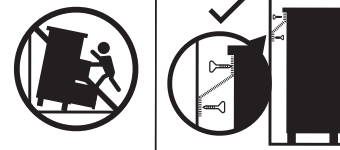 
TOPPLING FURNITURE WARNING:

- **ALWAYS secure it with an anchor device.**
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- **Use safety drawer locks to prevent children climbing.**
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**

⚠ WARNING



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV
on this furniture



This is a permanent label. Do not remove!



WARNING: PLEASE SECURE
YOUR FURNITURE WITH
THE SUPPLIED WALL FIXING.
SCAN THE CODE FOR
MORE INFORMATION.

