





 


 



 
 
 
 
 
# Assembly Instructions
















## 43540983 MORGAN CHEST OF DRAWERS OO


**WARNING:** DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

**CARE INSTRUCTIONS:** TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE O

**MAXIMUM SAFE LOAD: TOP 10KGS, DRAWER 7KGS.**

              
 
	a	M6x35	29pcs		g		3pcs
	b	M15x10	29pcs		h		3pcs
	c	M3x12	42pcs		i		3pcs
	d	M6x30	14pcs		j		2pcs
	e	M4x35	21pcs		k		2pcs
	f		3pcs		n		6pcs
	t		4pcs		s		8pcs
	o	M4x12	12pcs		r	M3x14	4pcs

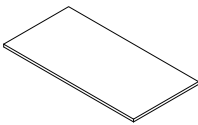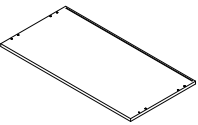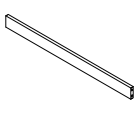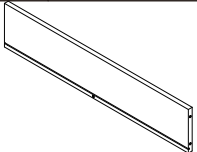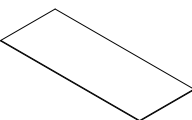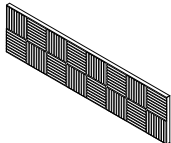	1pc		1pc		1pc		1pc		1pc
	4pcs		3pcs		3pcs		3pcs		3pcs
	3pcs		3pcs		2pcs		1pc		2pcs


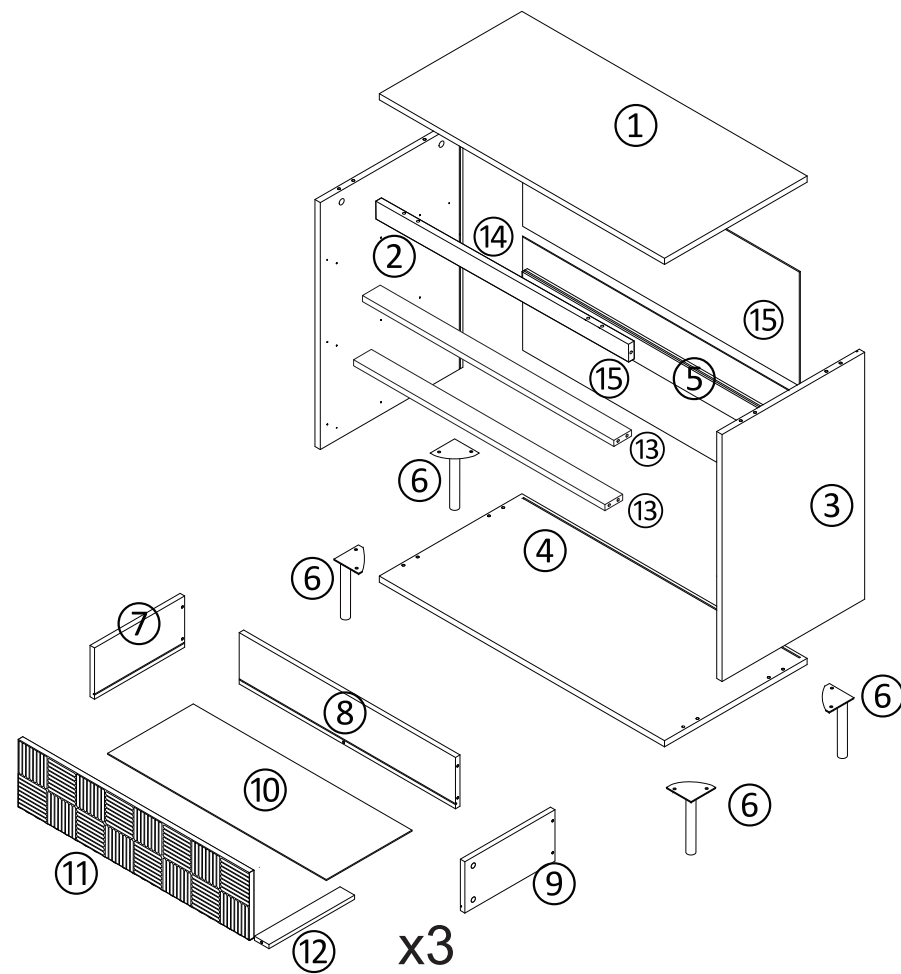 


Do not tighten the screws  
Fully tighten screws after the final assembly steps



## step 1

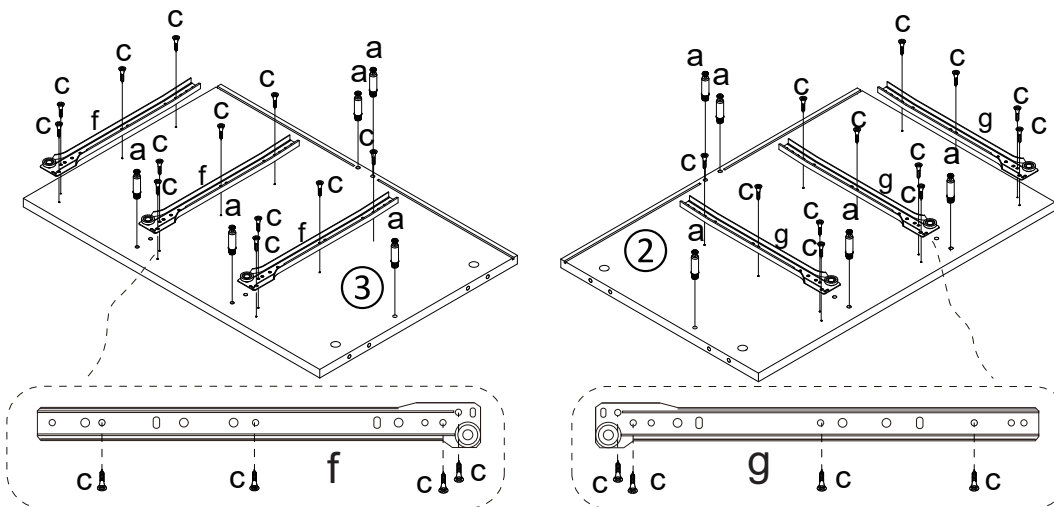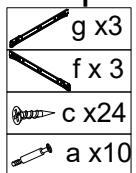  



## step 2

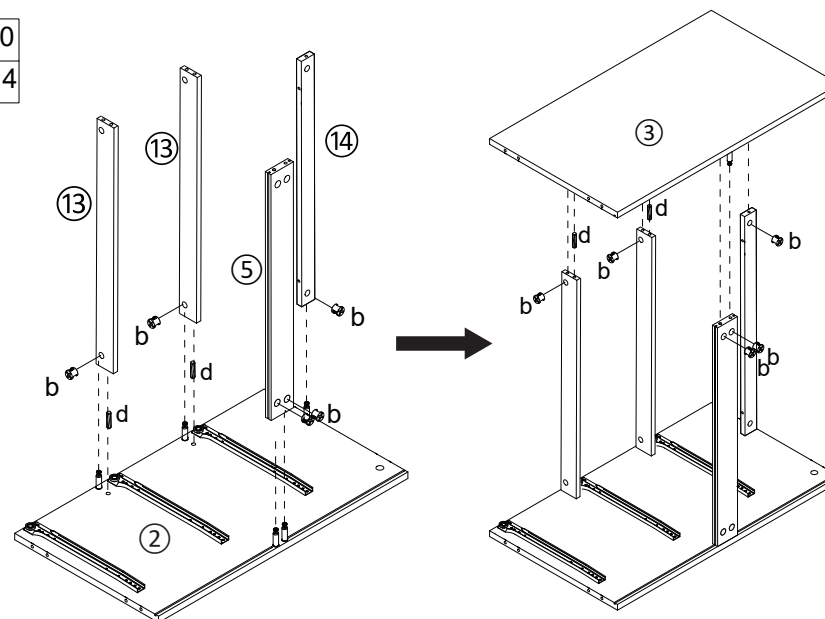  



## step 3

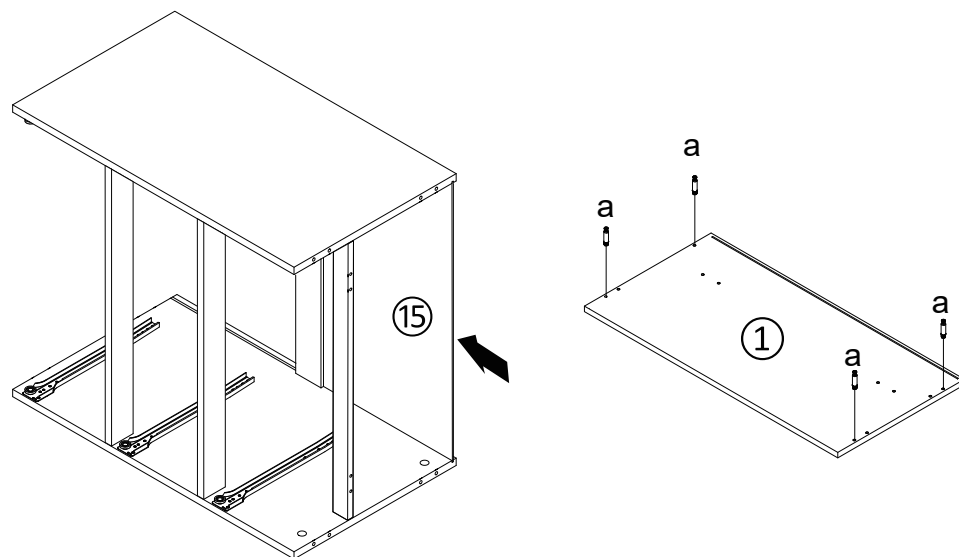  


## step 4

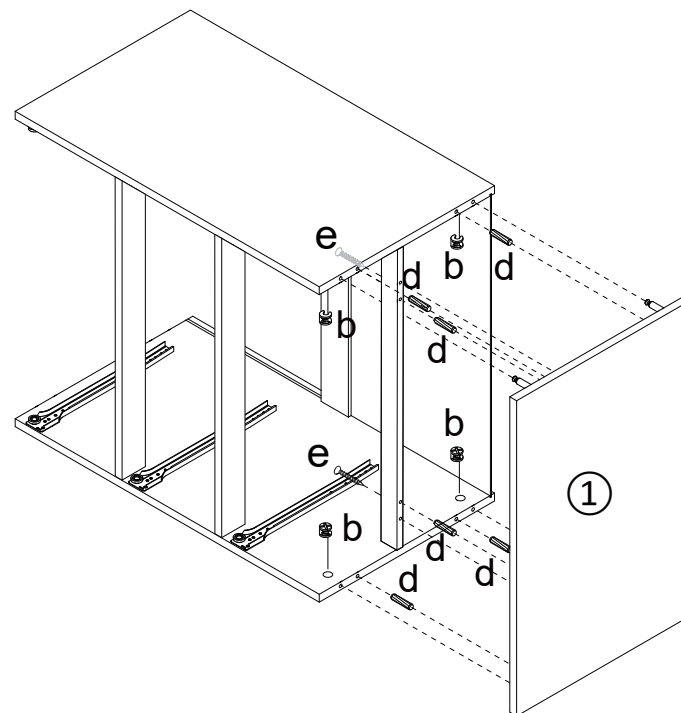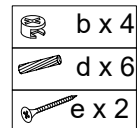  



## step 5

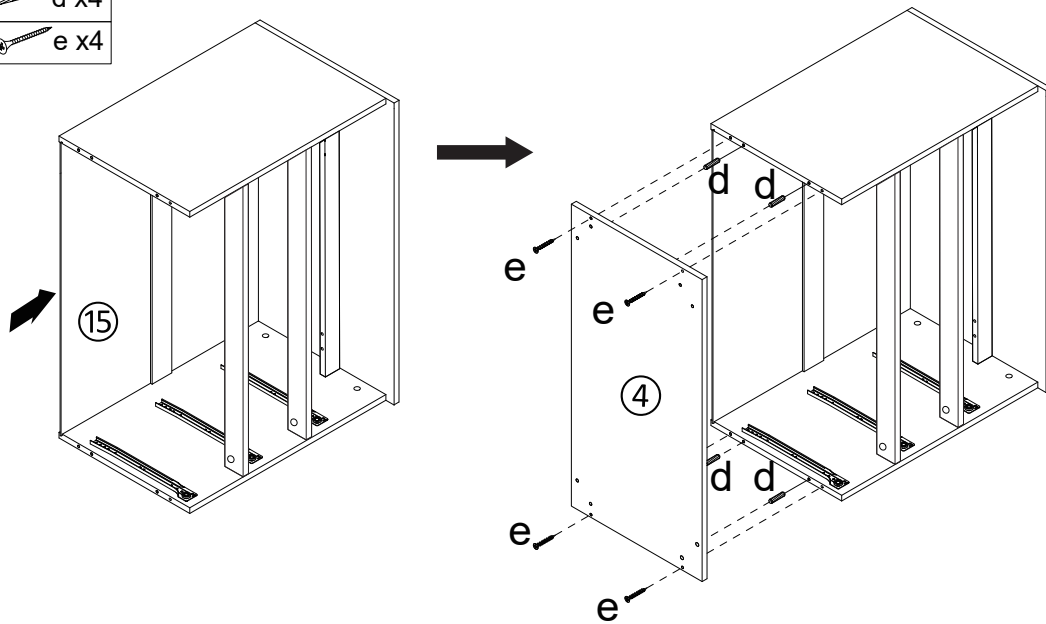  



## step 6

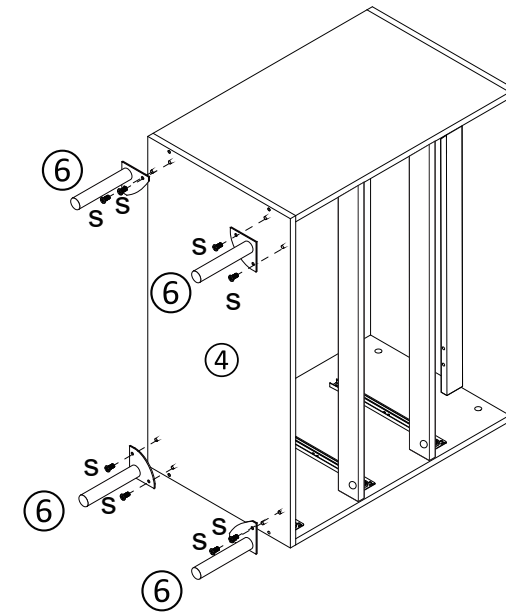 



## step 7

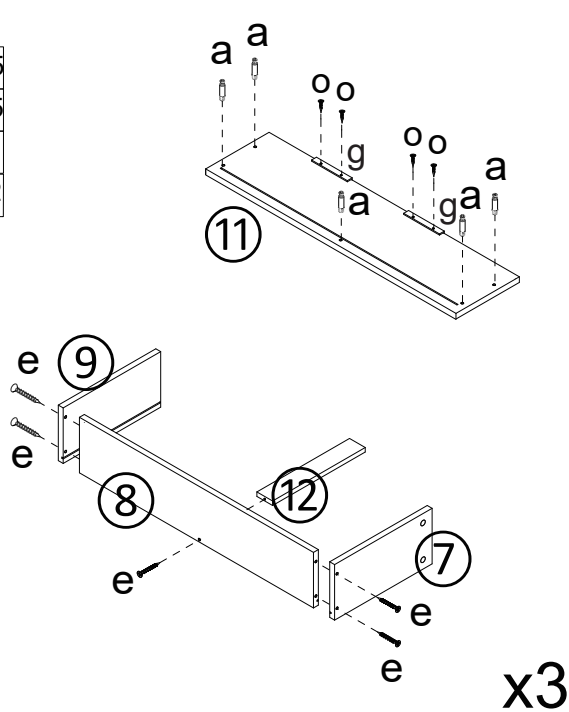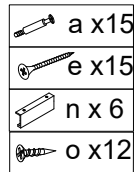  



## step 8

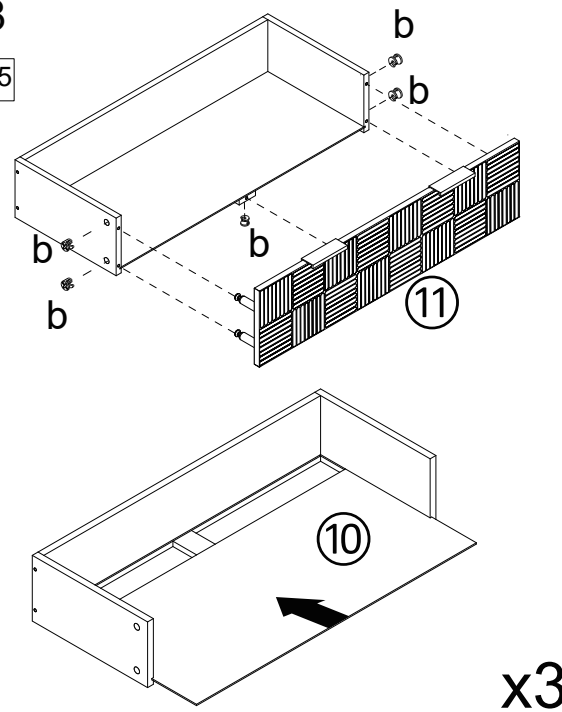  


## step 9

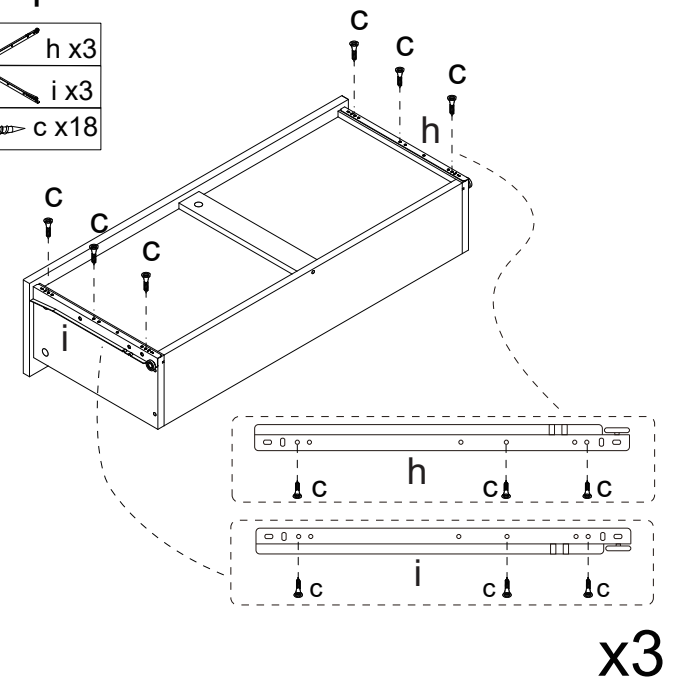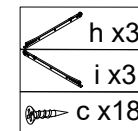  

## step 10

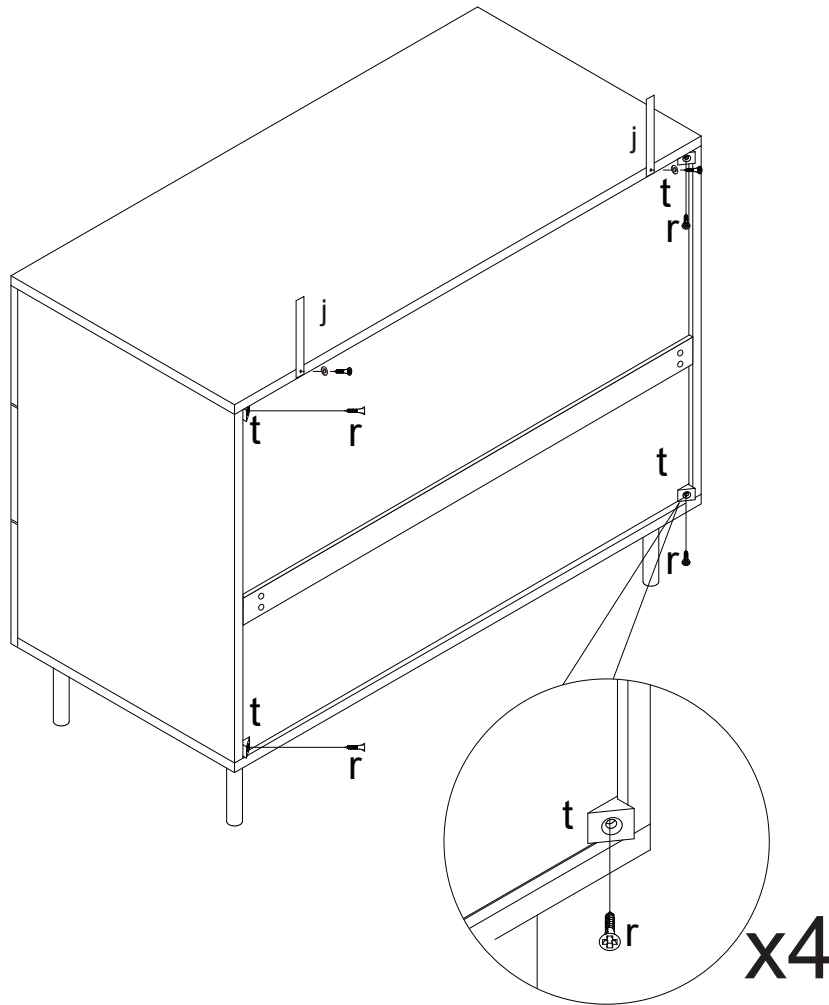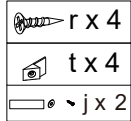  

## step 11

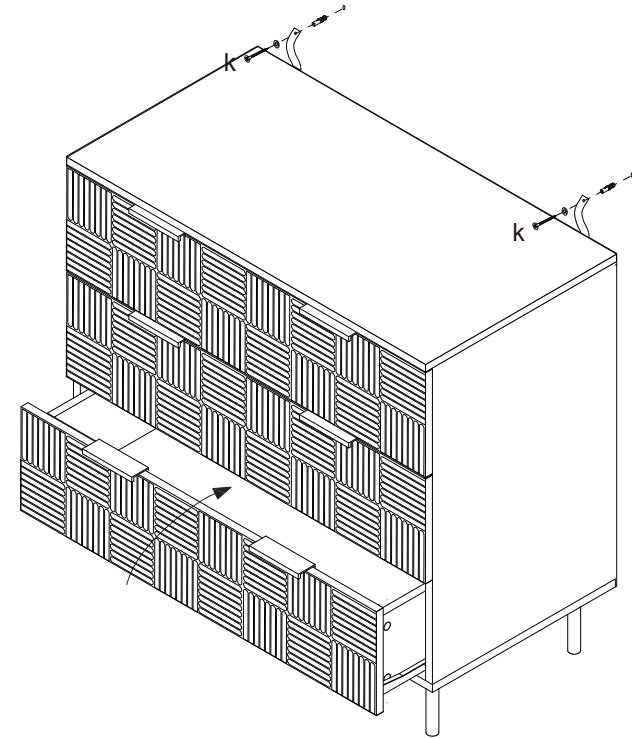 

### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

 
- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



## ⚠ WARNING

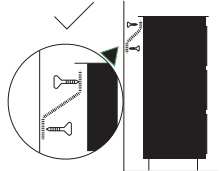

**Children have died from furniture tipover.**

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



**This is a permanent label. Do not remove!**