

Assembly Instructions

 










43541089 CHARLES CABINET


WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

MAXIMUM SAFE LOAD: 15KG FOR TOP PANEL, 10KG FOR SHELF.











① Hardware List

	A	M6x35mm	10pcs		H		2pcs
	B	Ø15x9mm	10pcs		I		4pcs
	C	Ø6x30mm	14pcs		J	M4x12mm	24pcs
	D	M4x35mm	6pcs		K		4pcs
	E		8pcs				
	F	M3x16mm	8pcs				
	G		2pcs				

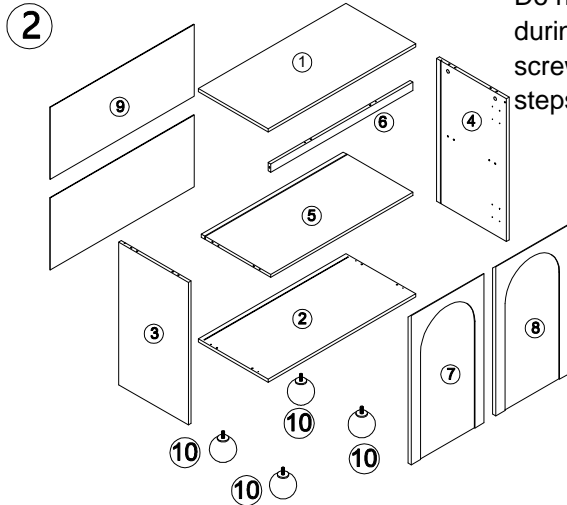 


Do not tighten the screws fully during assembly. Fully tighten screws after the final assembly steps.

          ③

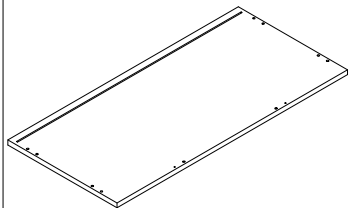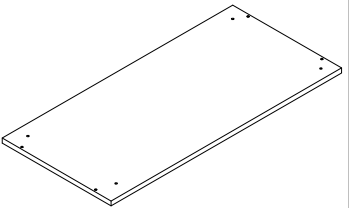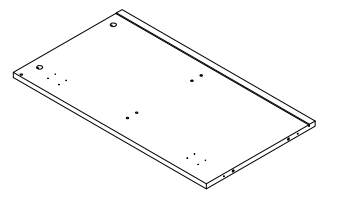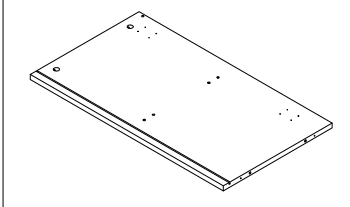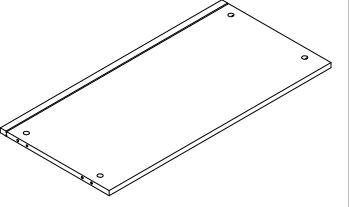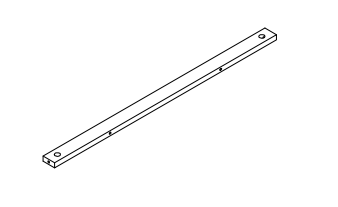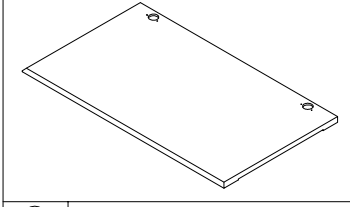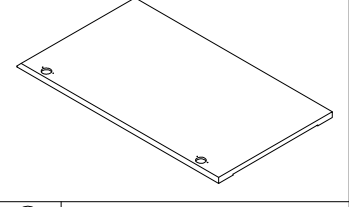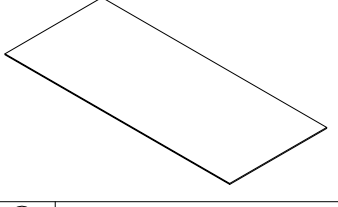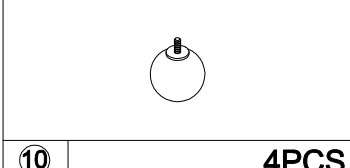

		
① 1PC	② 1PC	③ 1PC
		
④ 1PC	⑤ 1PC	⑥ 1PC
		
⑦ 1PC	⑧ 1PC	⑨ 2PCS
		
⑩ 4PCS		


 
STEP 1:

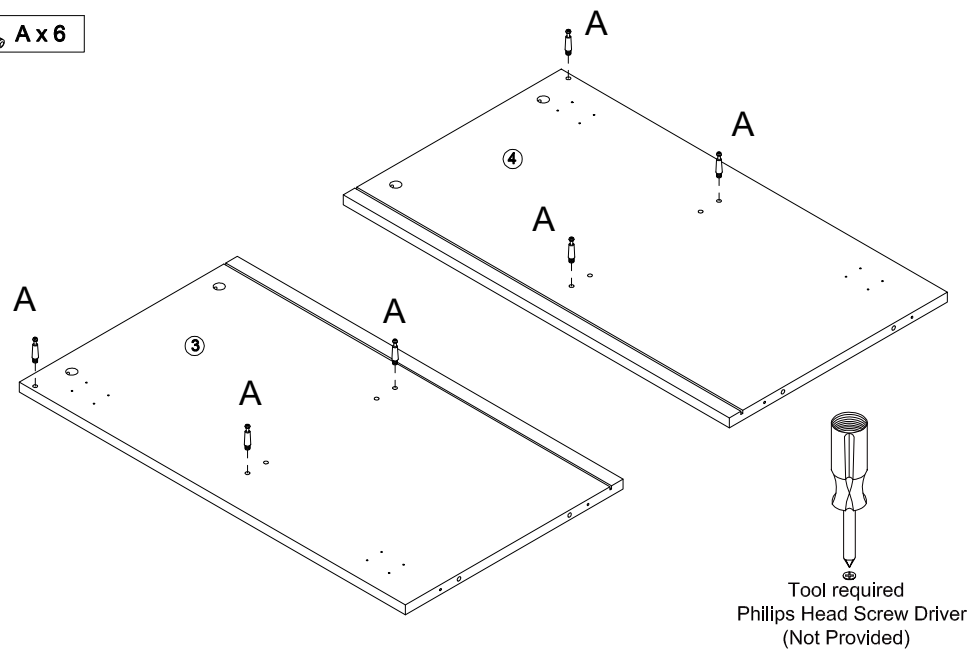 A x 6

  
 



STEP 2:

 B x 3
 C x 2

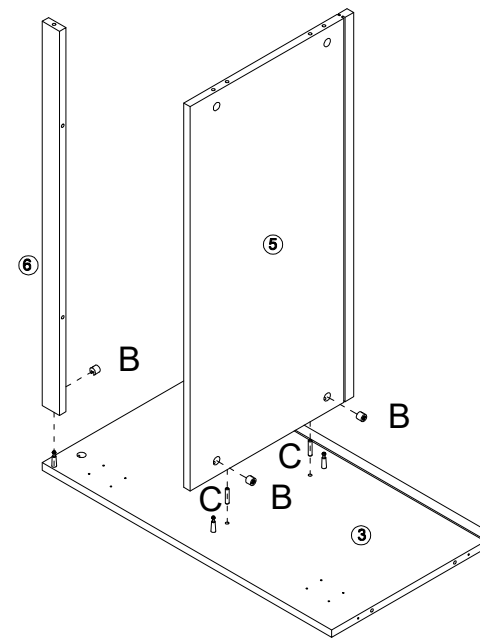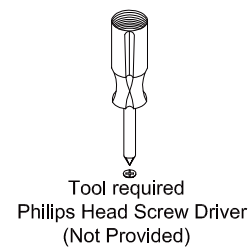


STEP 3:

  B x 3
 C x 2

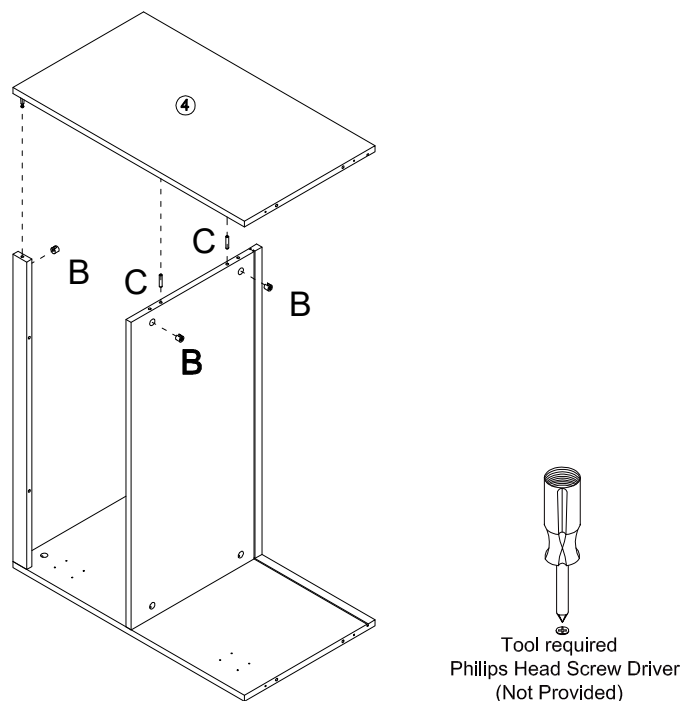


 
STEP 4:

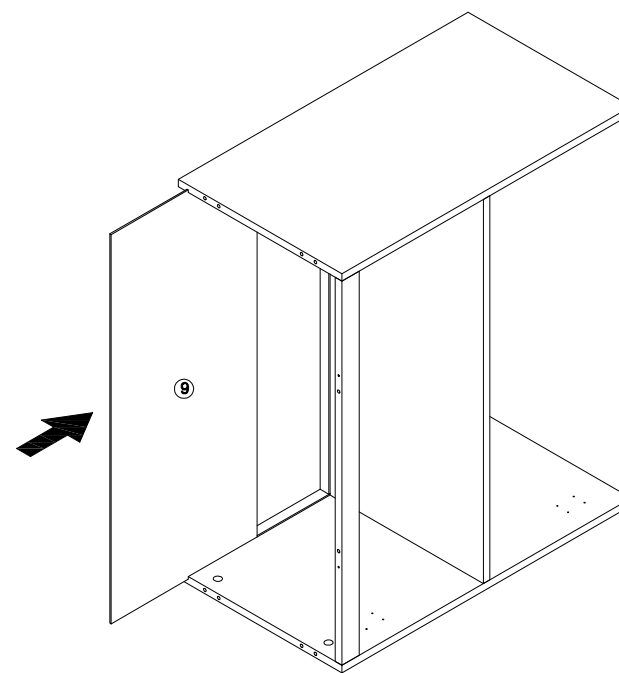


STEP 5:

  A x 4

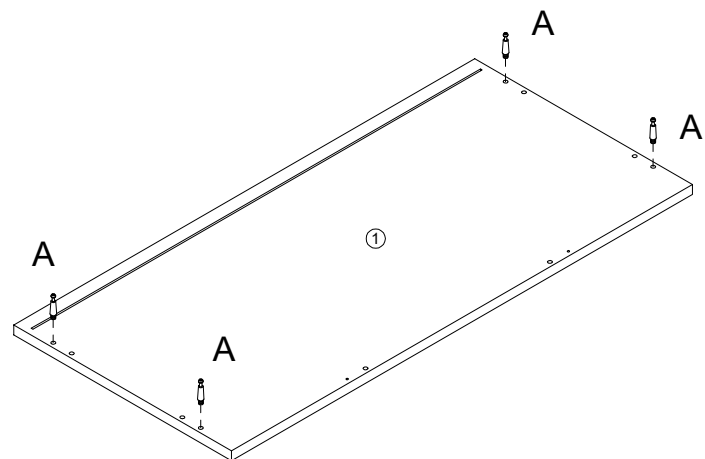


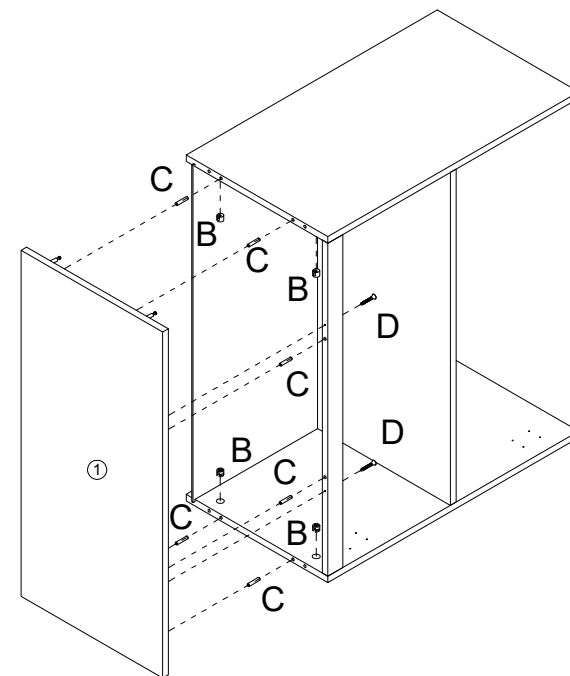 

Tool required
Philips Head Screw Driver
(Not Provided)


STEP 6:

 B x 4

 
 C x 6

 D x 2





Tool required
Philips Head Screw Driver
(Not Provided)

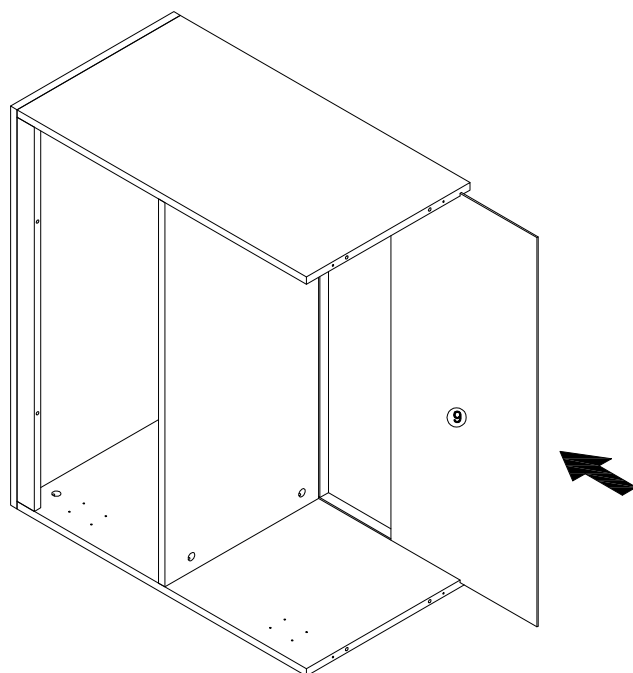
STEP 7:




STEP 8:

 C x 4

 
 D x 4

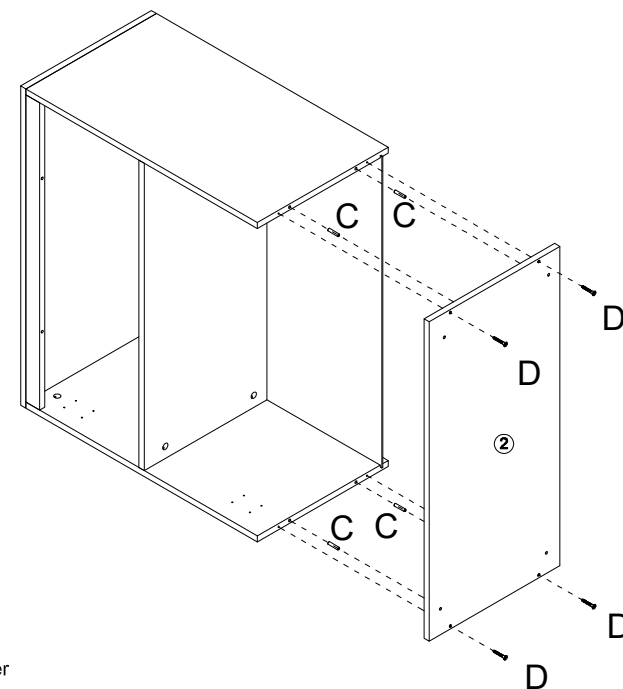


Tool required
Philips Head Screw Driver
(Not Provided)

STEP 9:

 ○ K x 4


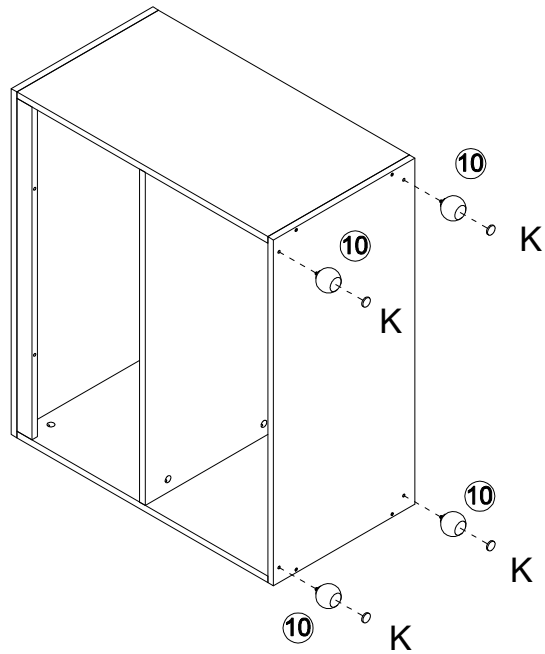


STEP 10:


□ E x 8

✂ F x 8

  ⌘ G x 2

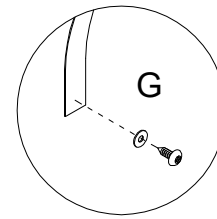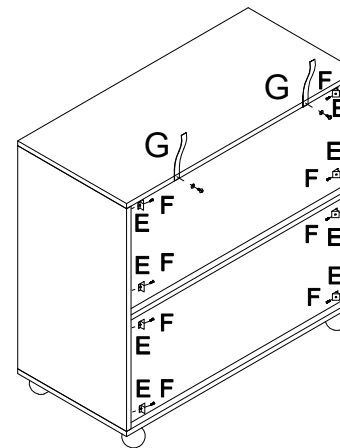

 
Tool required
Philips Head Screw Driver
(Not Provided)

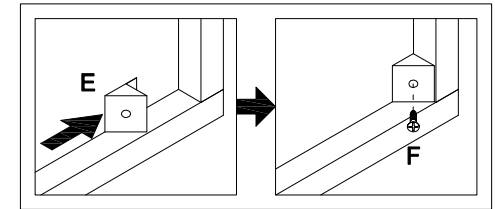

STEP 11:

✂ I x 4

 
✂ J x 8

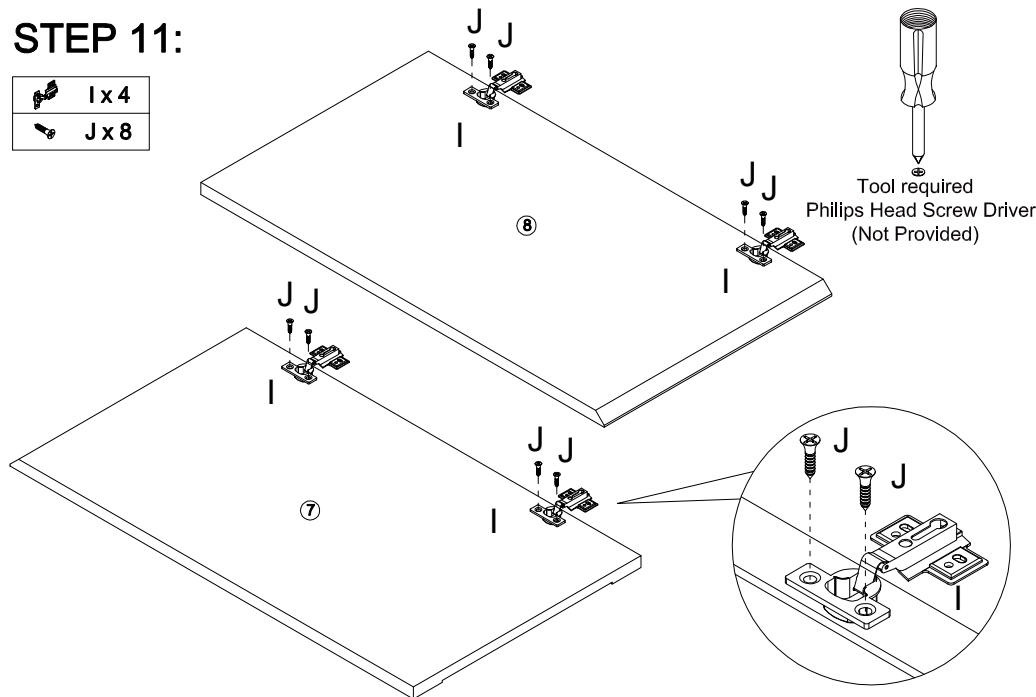


Tool required
Philips Head Screw Driver
(Not Provided)

STEP 12:

 ✂ J x 16

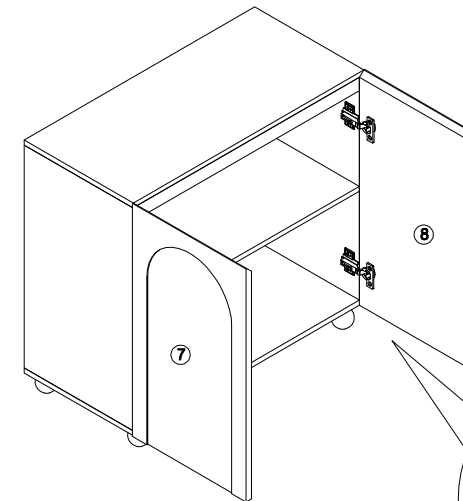


 Tool required
Philips Head Screw Driver
(Not Provided)

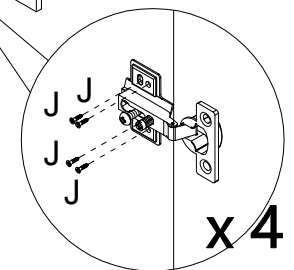


STEP 13:

  H x 2

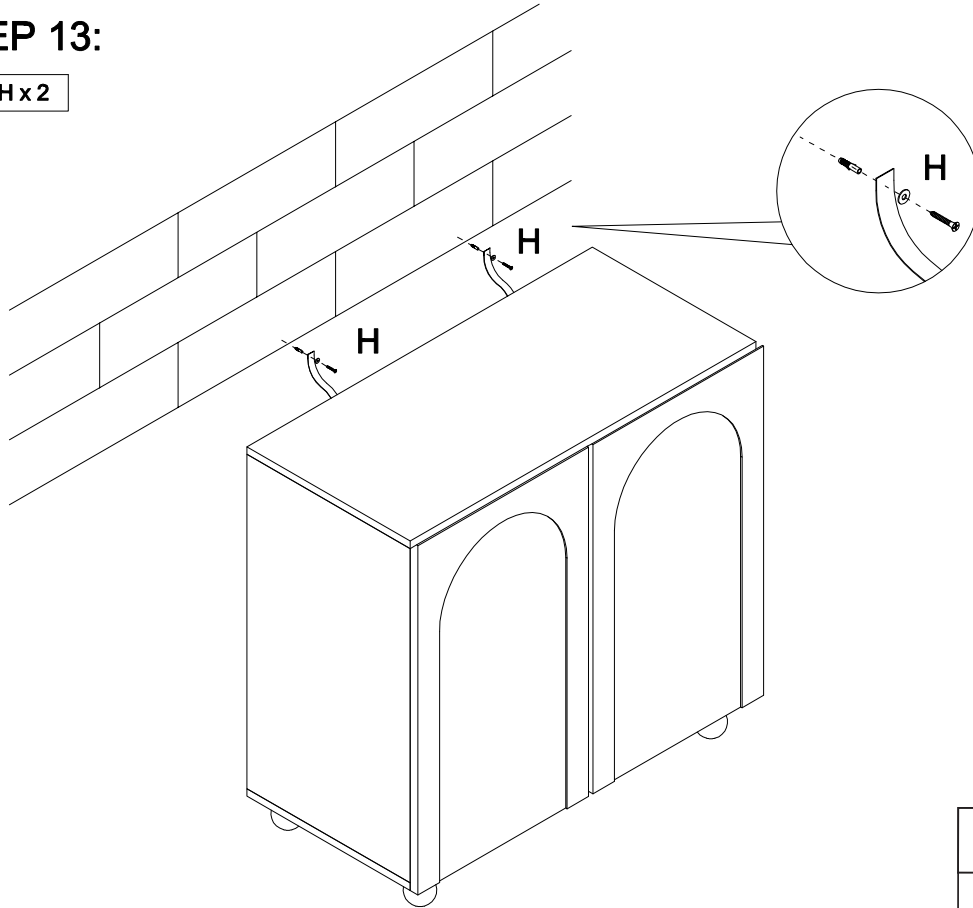

Tool required
Philips Head Screw Driver
(Not Provided)

 ⚠ WARNING

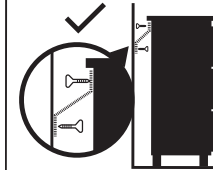

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV
on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



TOPPLING HAZARD

WARNING: PLEASE SECURE
YOUR FURNITURE WITH
THE SUPPLIED WALL FIXING.
SCAN THE CODE FOR
MORE INFORMATION.

