

Assembly Instructions

43541140/71196480 CHARLES BEDSIDE TABLE

 



 







WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.


MAXIMUM SAFE LOAD: 10KG FOR TOP PANEL, 5KG FOR SHELF.

①

Hardware List









	A	M6x35mm	4pcs		G		1pcs
	B	Ø15x9mm	4pcs		H		1pcs
	C	Ø6x30mm	8pcs		I		2pcs
	D	M4x35mm	4pcs		J	M4x12mm	12pcs
	E		4pcs		K		4pcs
	F	M3x16mm	4pcs		L		4pcs

 ②

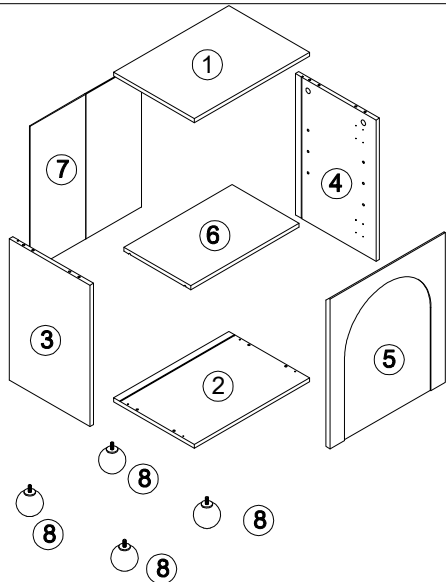



Do not tighten the screws fully during assembly. Fully tighten screws after the final assembly steps.

       ③

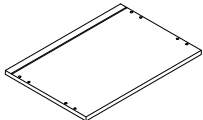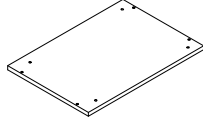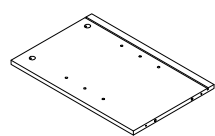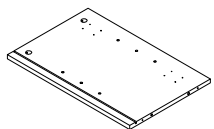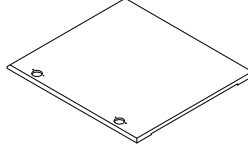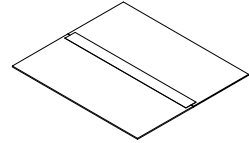

		
① 1PC	② 1PC	③ 1PC
		
④ 1PC	⑤ 1PC	⑥ 1PC
		
⑦ 1PC	⑧ 4PCS	

 
 
STEP 1:

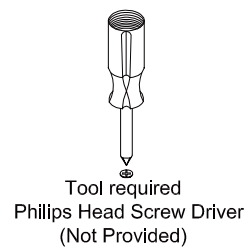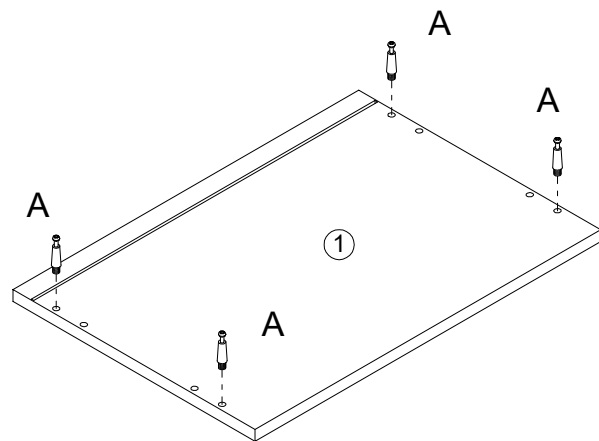 A x 4




  STEP 2:

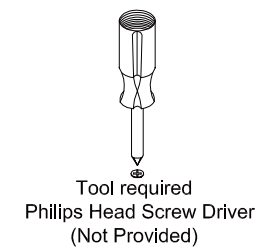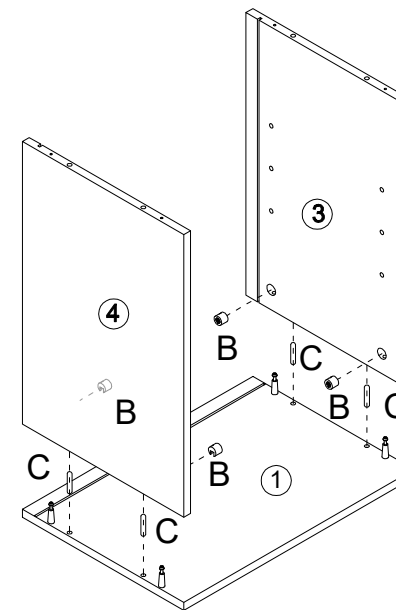

 B x 4
 C x 4


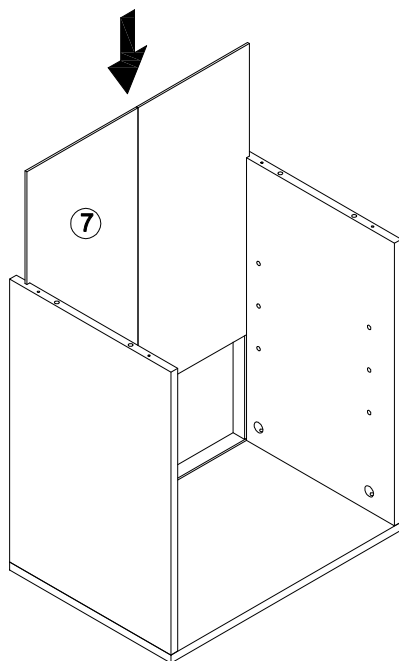 


STEP 3:




STEP 4:

   C x 4
 D x 4

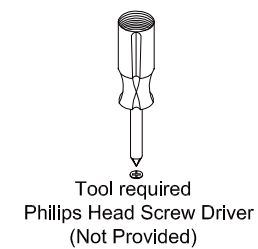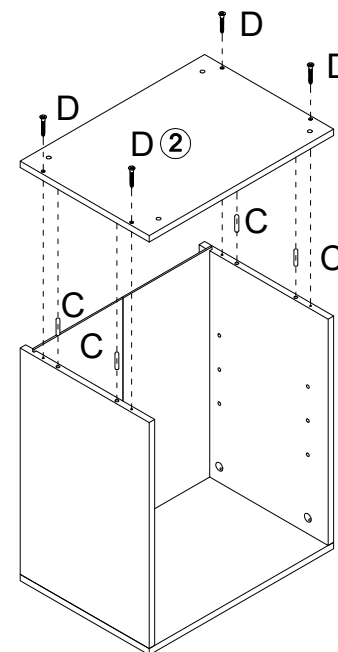




STEP 5:

 ○ L x 4

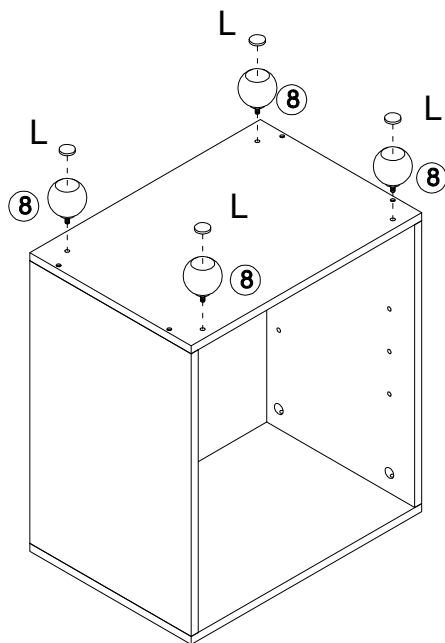



STEP 6:

   □ E x 4
 ⚙ F x 4
 ⚙ G x 1

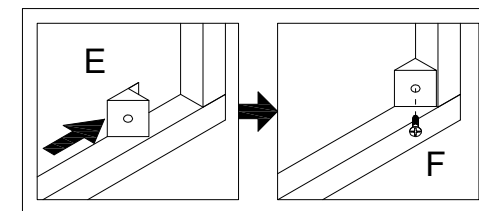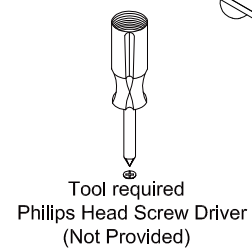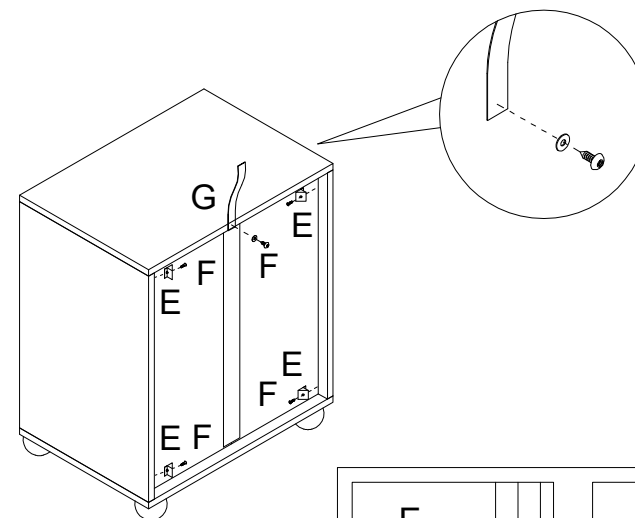




STEP 7:

  ⚙ I x 2
 ⚙ J x 4

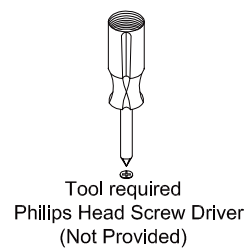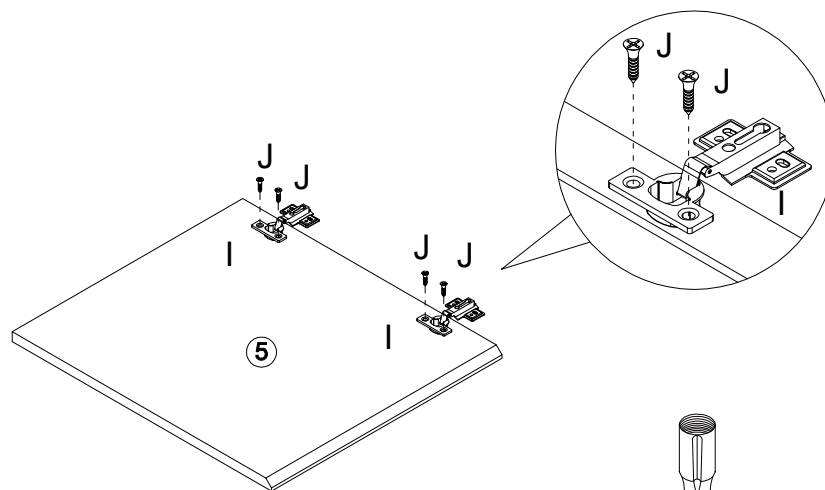


STEP 8:

   ⚙ J x 8

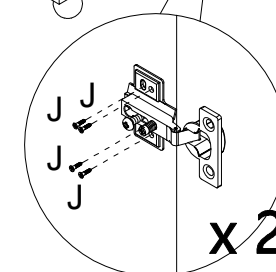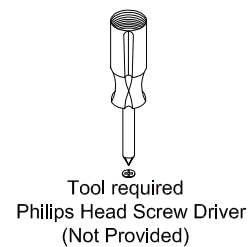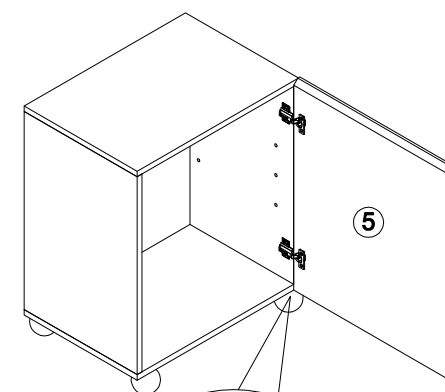


STEP 9:

  K x 4

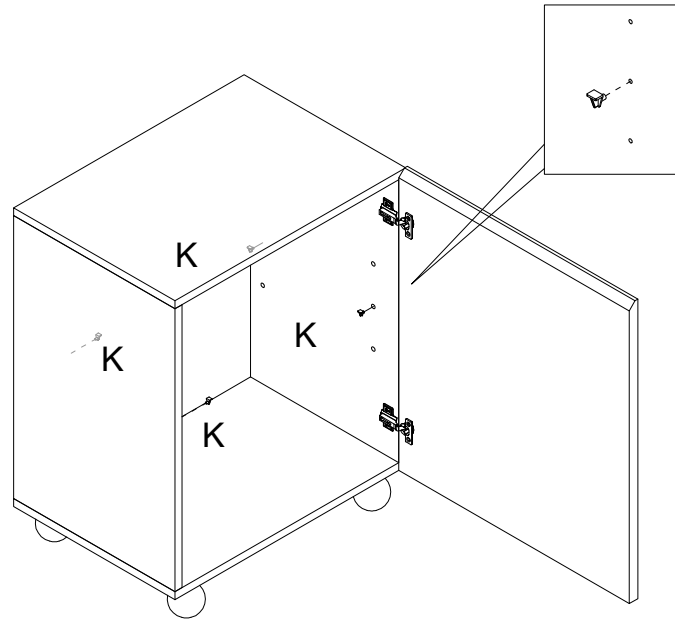


 
STEP 10:

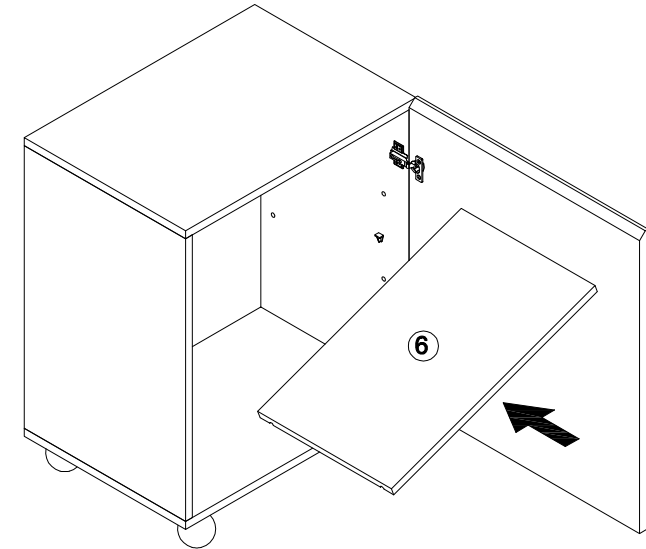


STEP 11:

  H x 1

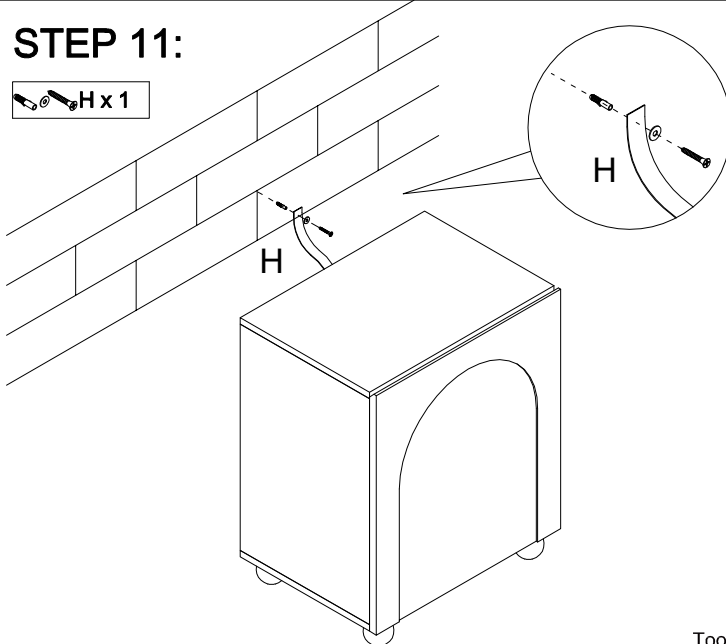


Tool required
Phillips Head Screw Driver
(Not Provided)

 ⚠ WARNING

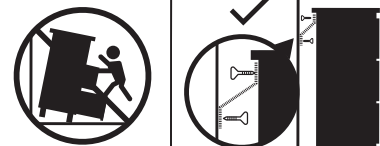

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV
on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE
YOUR FURNITURE WITH
THE SUPPLIED WALL FIXING.
SCAN THE CODE FOR
MORE INFORMATION.

