

Assembly Instructions



 












43541324 LEON CHEST OF DRAWERS

WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.


CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

MAXIMUM SAFE LOAD:15KG FOR TOP PANEL, 7KG FOR EACH DRAWER.

  
① Hardware List

	A	M6x35mm	29pcs
	B	Ø15x9mm	29pcs
	C	Ø6x30mm	23pcs
	D	M4x35mm	24pcs
	E	M3x12mm	42pcs
	F		4pcs
	G	M4x12mm	16pcs
	H		8pcs
	I	M3x16mm	8pcs
	J		2pcs
	K		2pcs
	CL		3pcs
	CR		3pcs
	DL		3pcs
	DR		3pcs

 ②














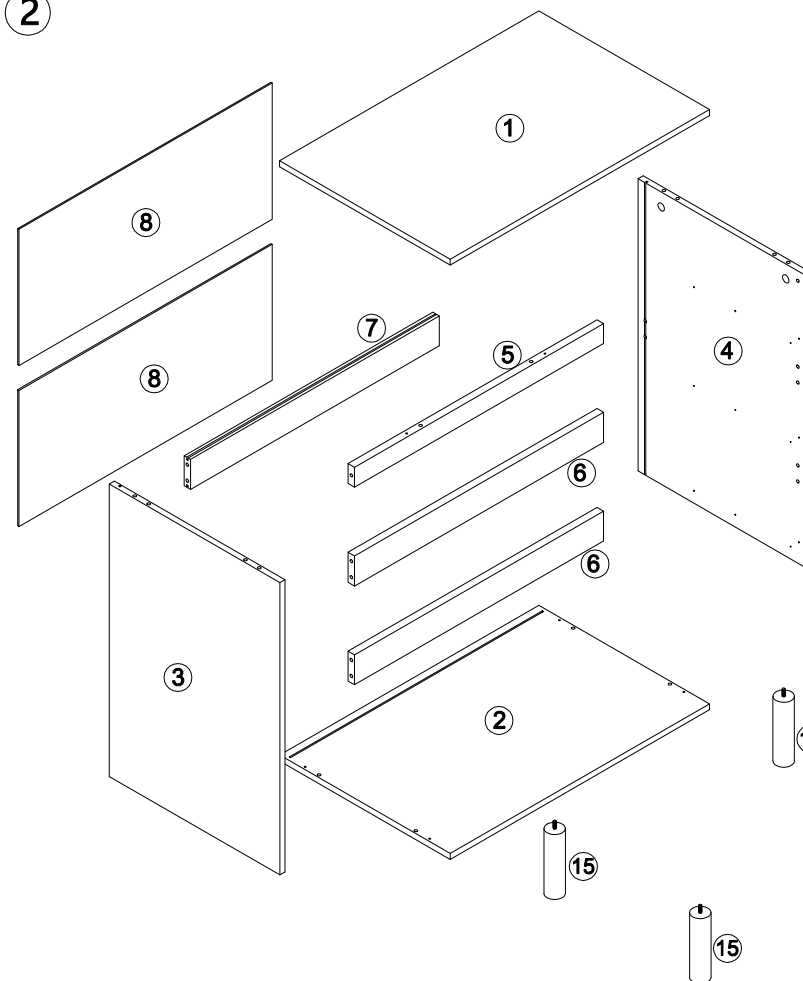


               
Do not tighten the screws fully during assembly. Fully tighten screws after the final assembly steps.

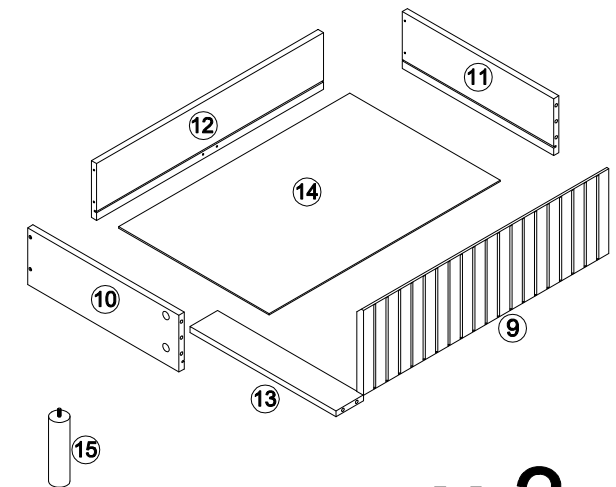




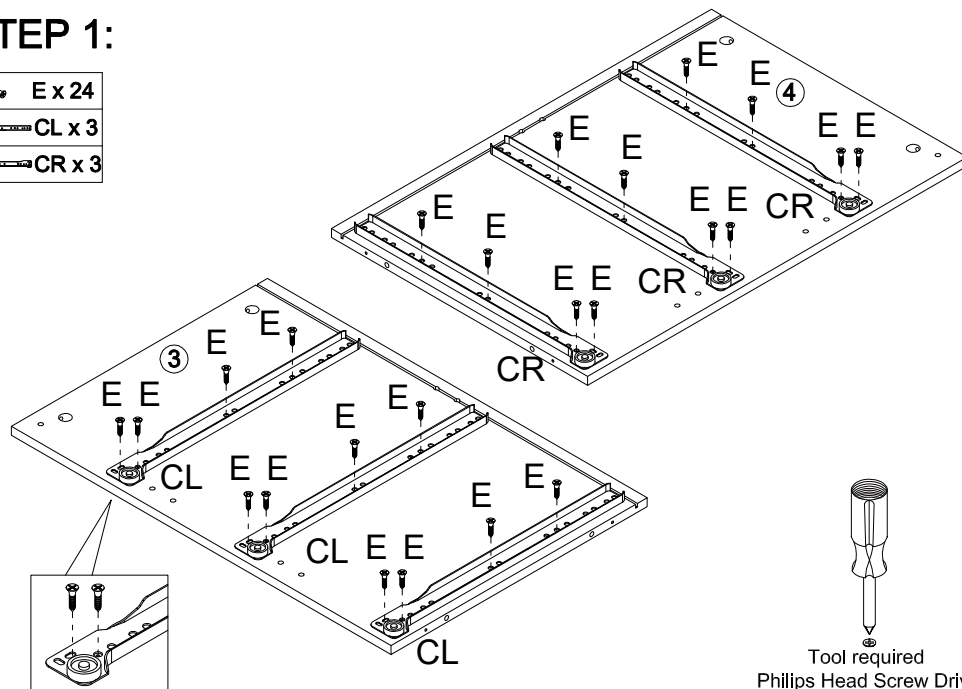 
x 3

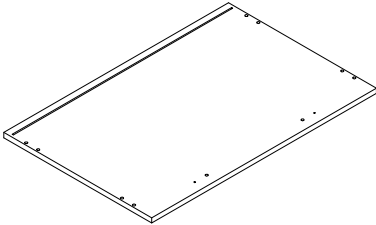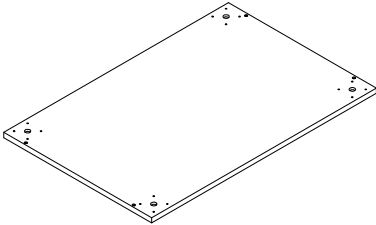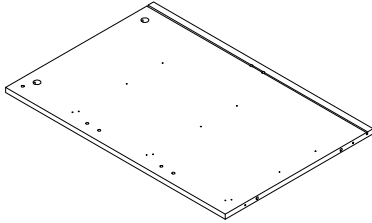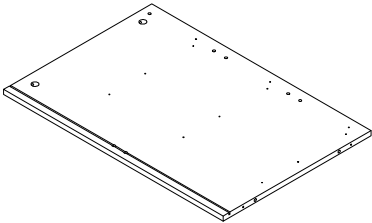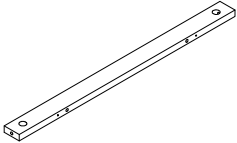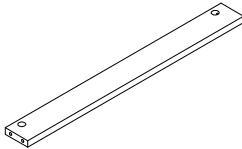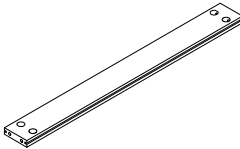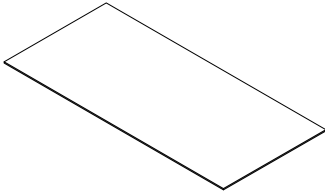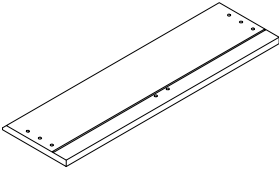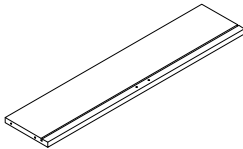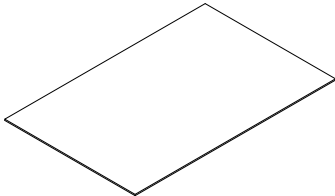3

							
①	1PC	②	1PC	③	1PC	④	1PC
							
⑤	1PC	⑥	2PCS	⑦	1PC	⑧	2PCS
							
⑨	3PCS	⑩	3PCS	⑪	3PCS	⑫	3PCS
							
⑬	3PCS	⑭	3PCS	⑮	4PCS		

 
STEP 1:

-  E x 24
-  CL x 3
-  CR x 3






STEP 2:

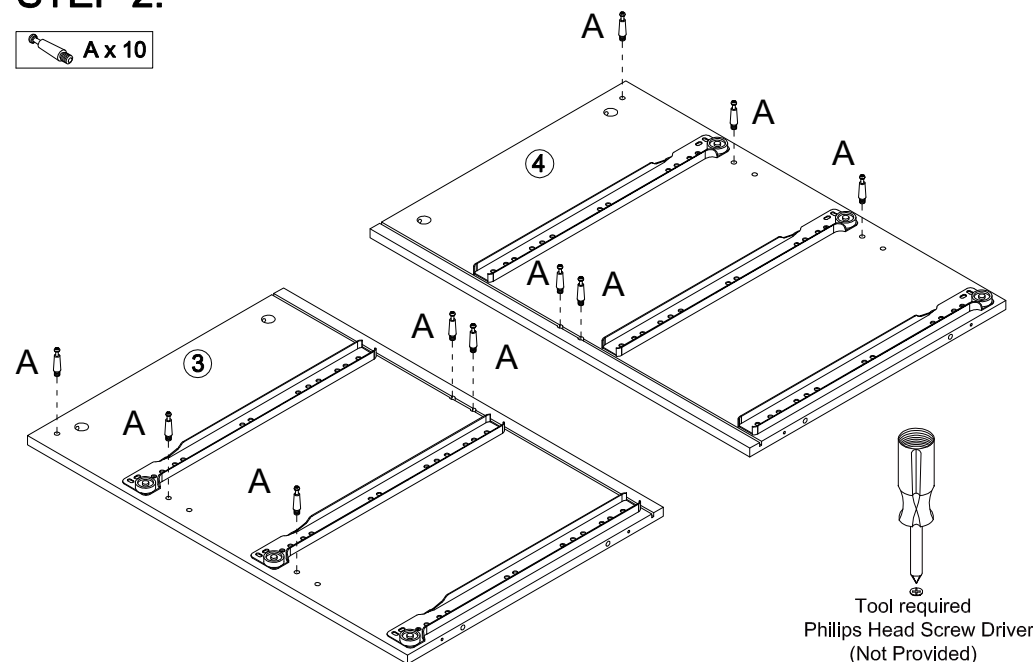-  A x 10





 
STEP 3:

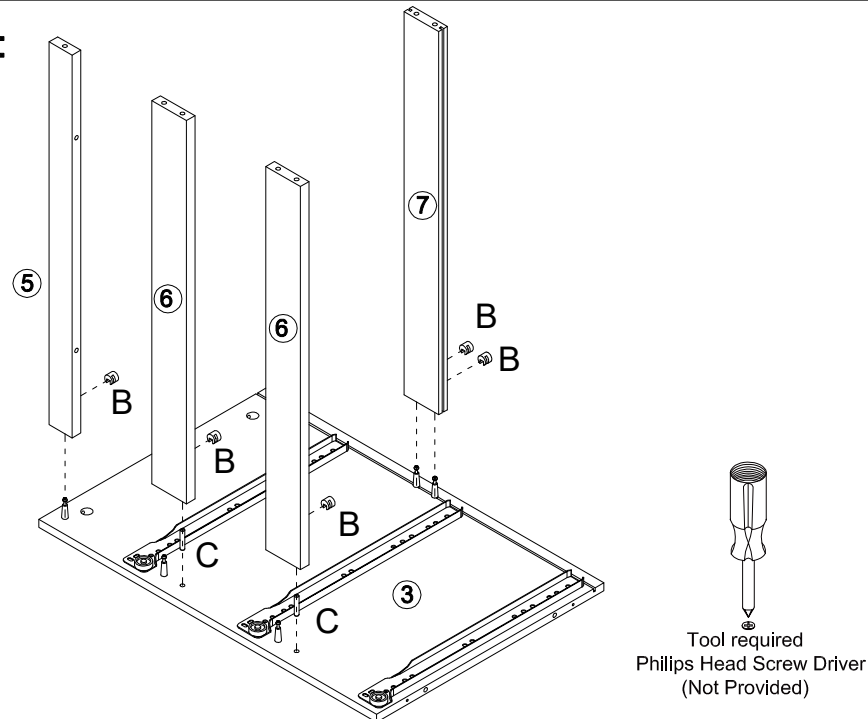-  B x 5
-  C x 2




STEP 4:

 
-  B x 5
-  C x 2

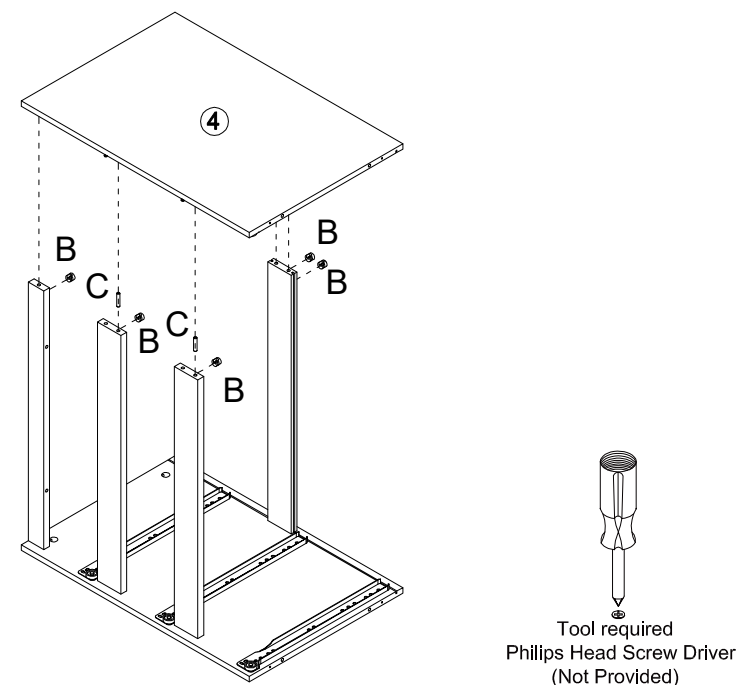


 
STEP 5:

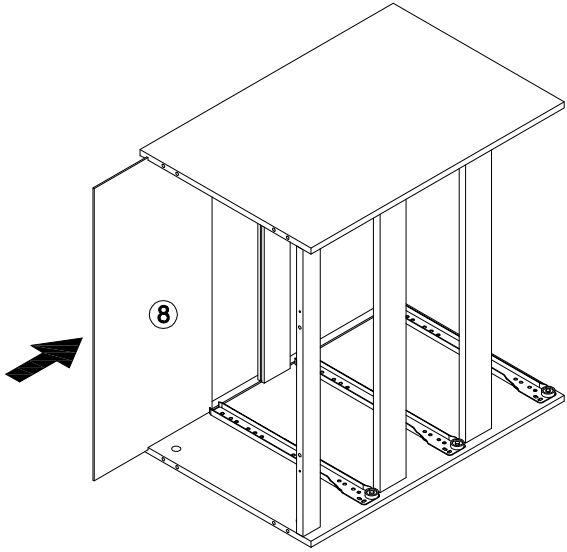

 
STEP 6:

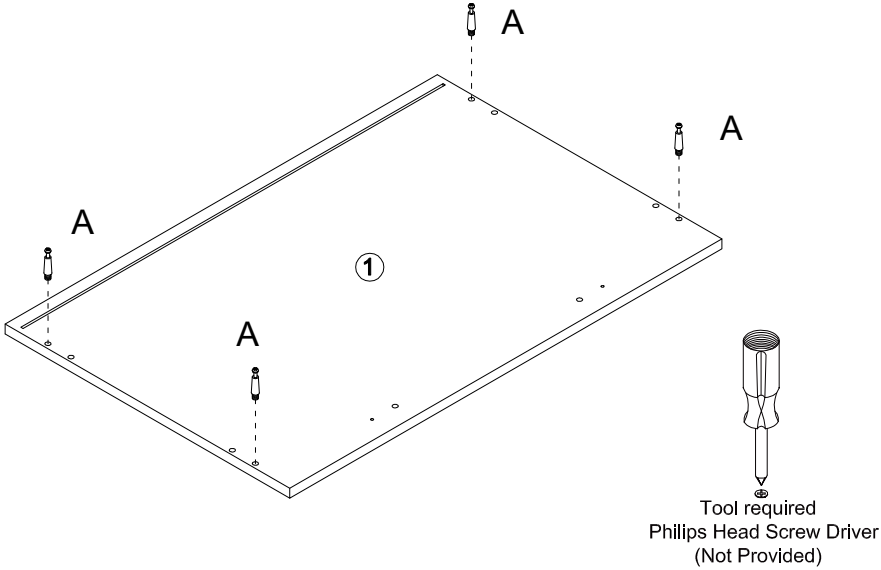


 
 
STEP 7:

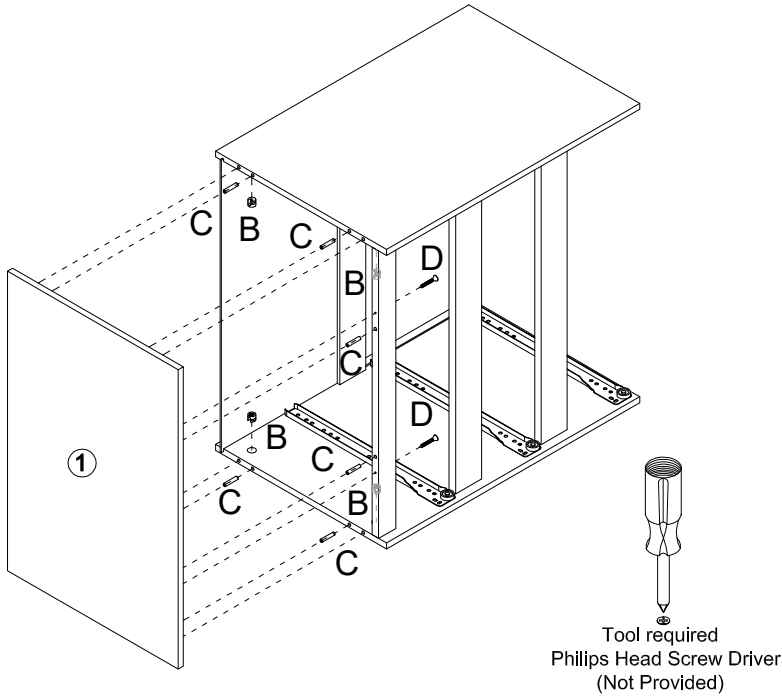


 
STEP 8:

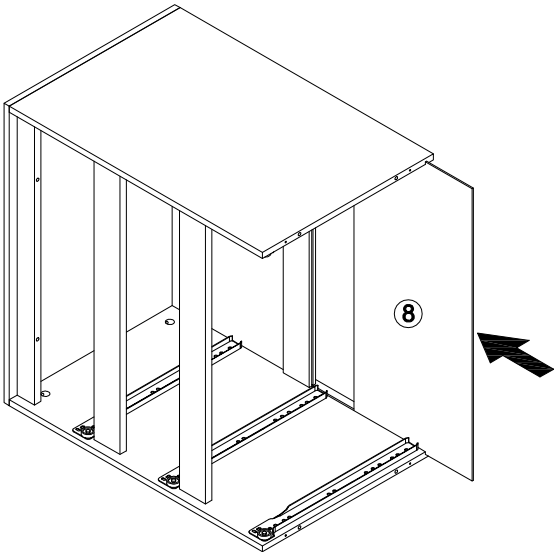

   
STEP 9:

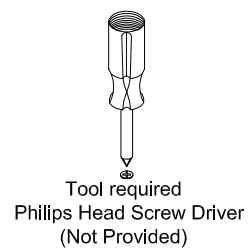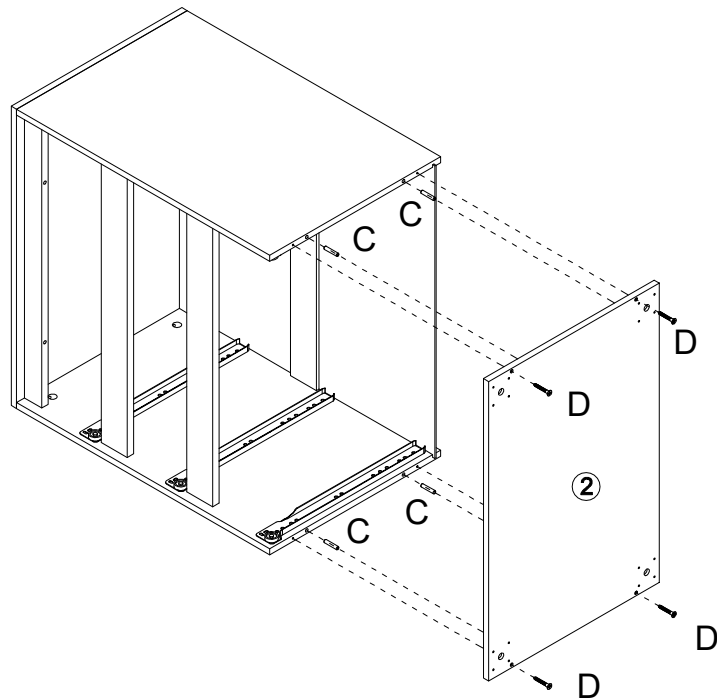


 
 
STEP 10:

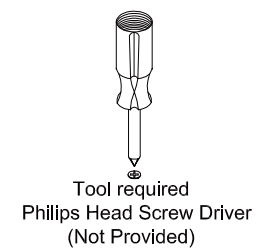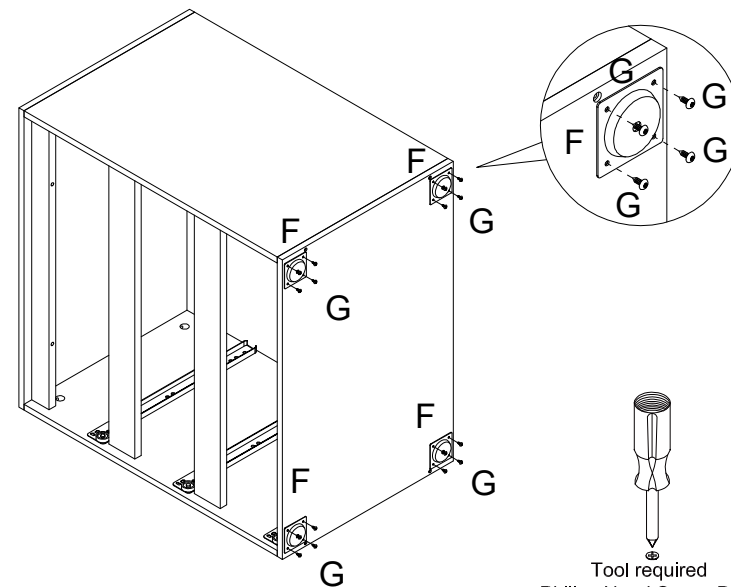

 STEP 11:

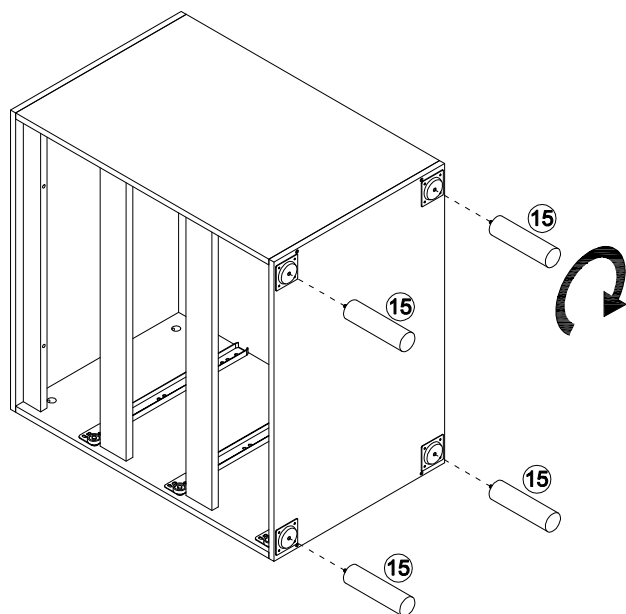


   STEP 12:

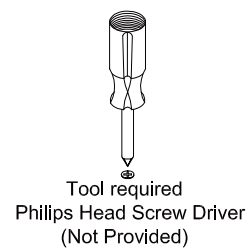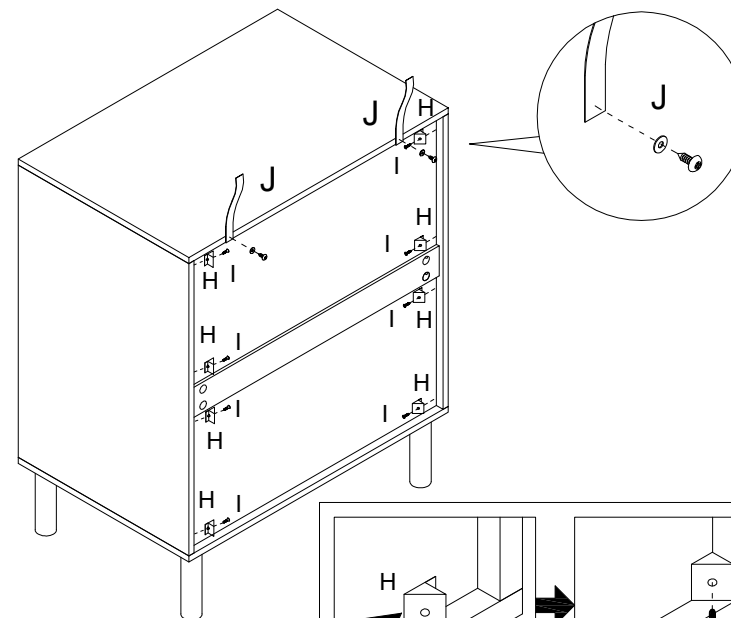


STEP 13:

  D x 18

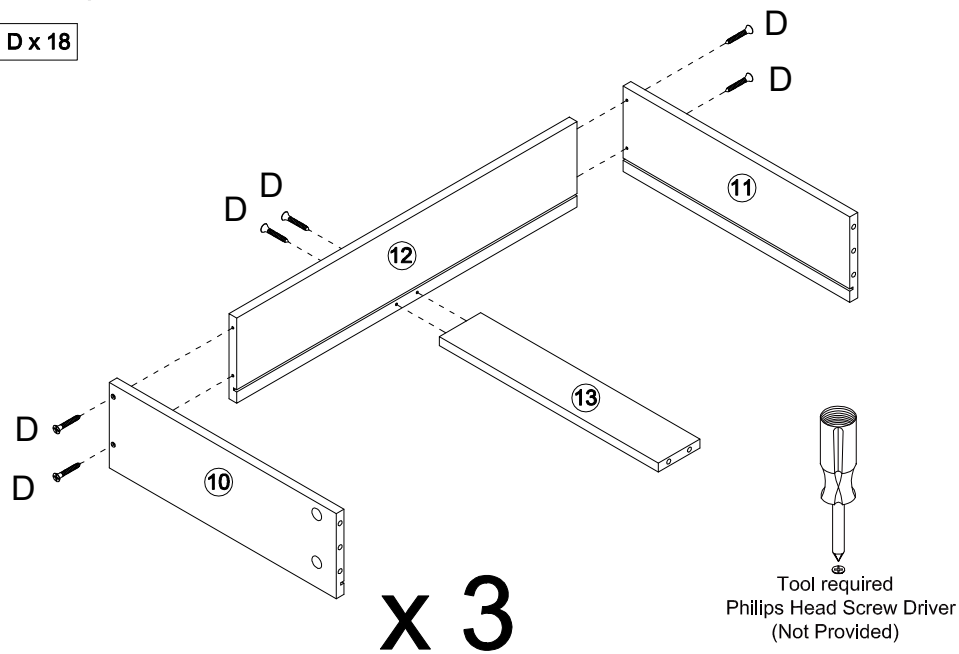


  STEP 14:

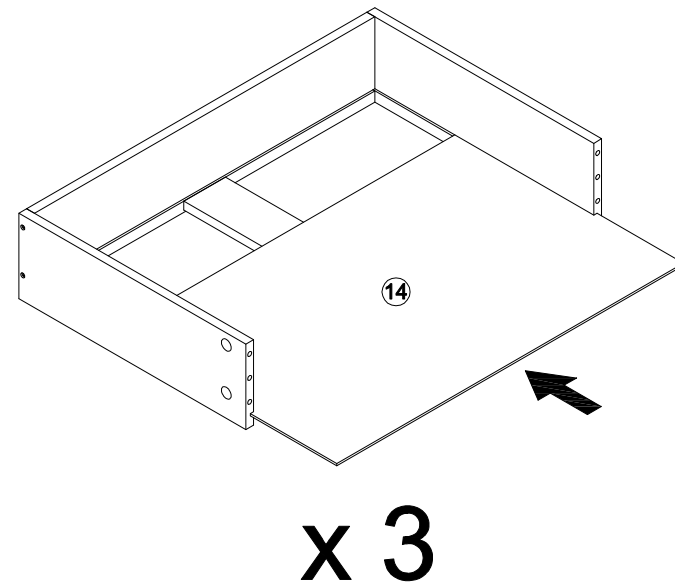
 



STEP 15:

 A x 15

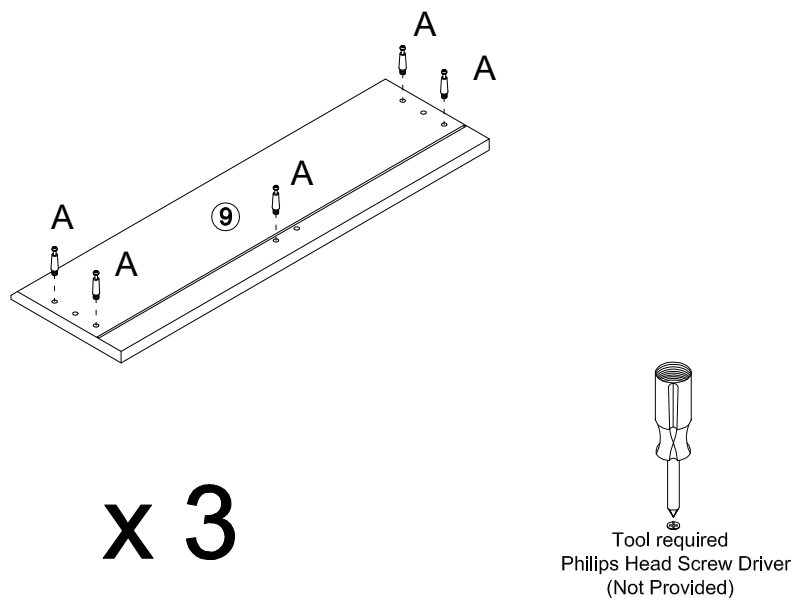


STEP 16:

  B x 15
 C x 9

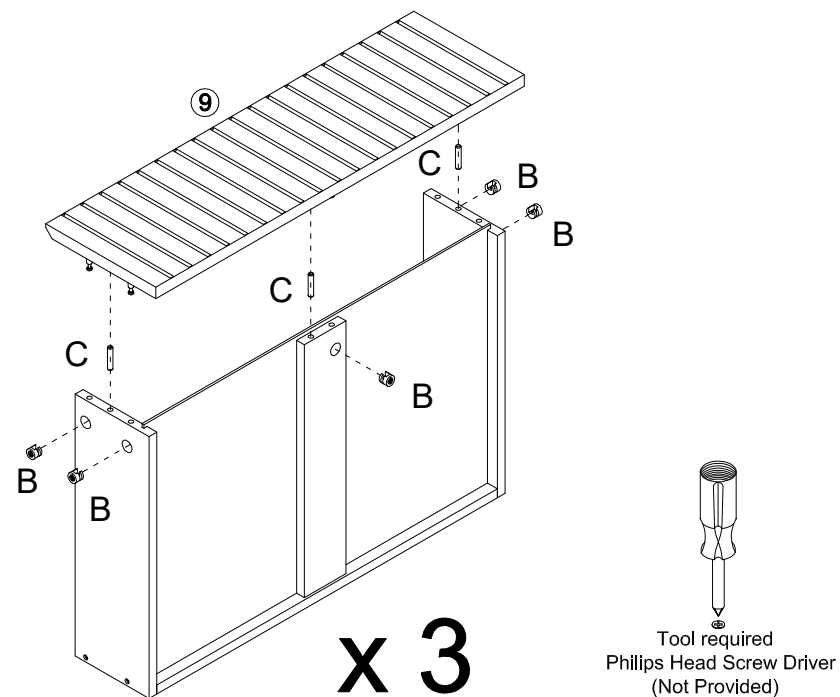


STEP 17:

 - ▼ E x 18
- DL x 3
- DR x 3

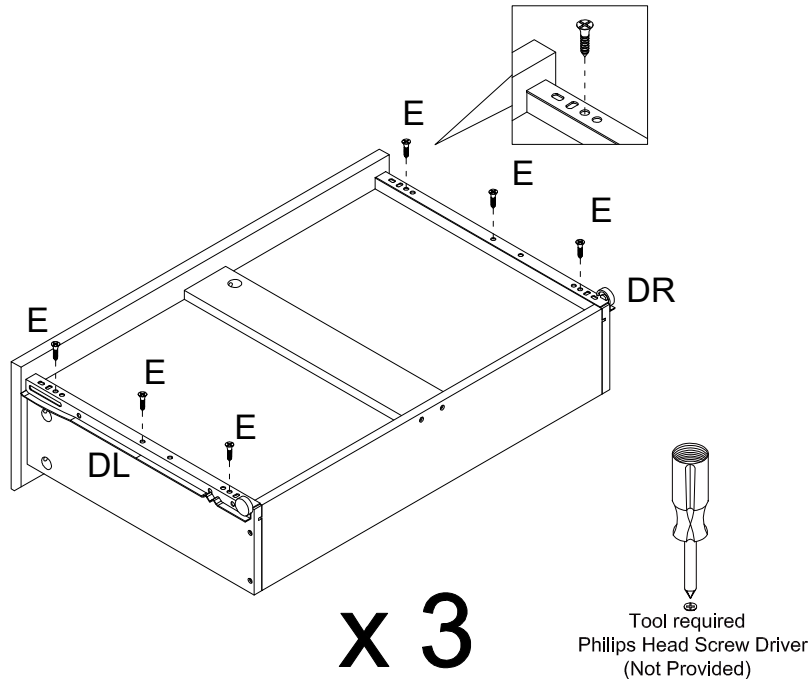


 STEP 18:

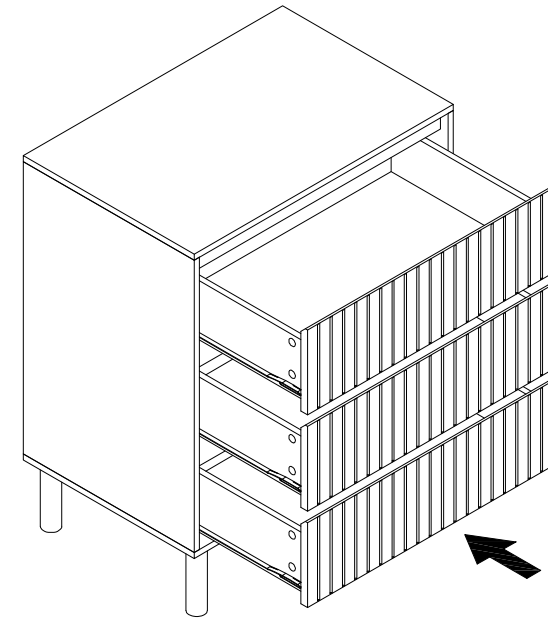


STEP 19:

 - K x 2

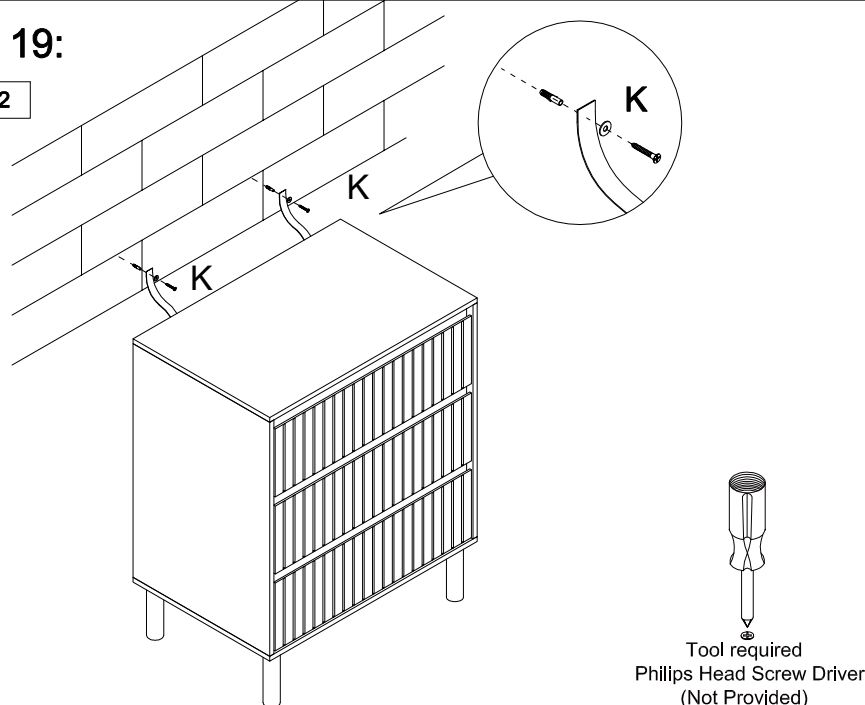

WARNING

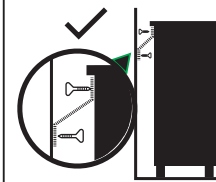 

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV
on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE
YOUR FURNITURE WITH
THE SUPPLIED WALL FIXING.
SCAN THE CODE FOR
MORE INFORMATION.

