

Assembly Instructions

K: 43541416 | T: 71220994 LEON BEDSIDE TABLE





 





WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.


MAXIMUM SAFE LOAD: 10KGS FOR TOP PANEL, 5KGS FOR DRAWER, 5KGS FOR SHELF.

①

Hardware List















	A	M6x35mm	12pcs		G	M4x12mm	16pcs
	B	Ø15x9mm	12pcs		H		8pcs
	C	Ø6x30mm	18pcs		I	M3x16mm	8pcs
	D	M4x35mm	10pcs		J		1pc
	E		1pc				
	F		4pcs				

 ②

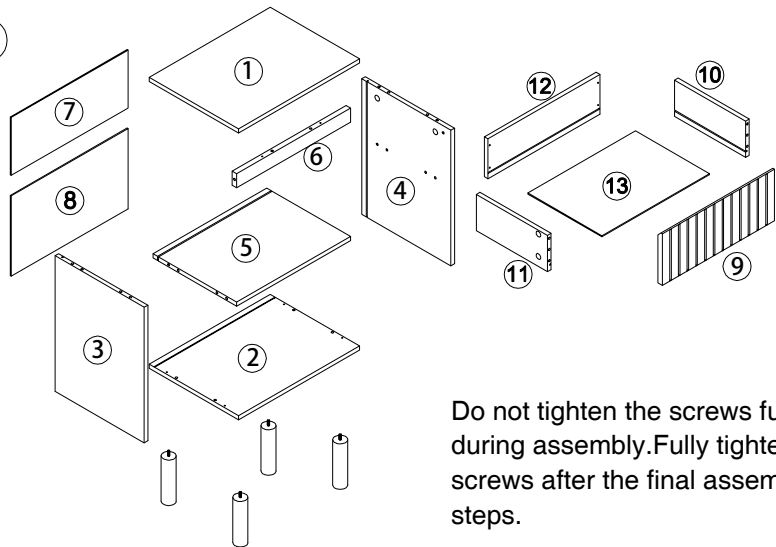


Do not tighten the screws fully during assembly. Fully tighten screws after the final assembly steps.

             
③

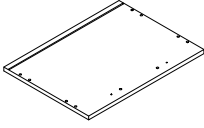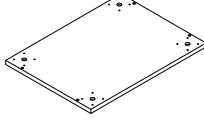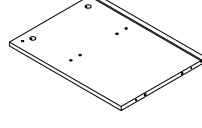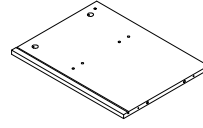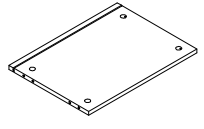	①	1PC		②	1PC		③	1PC		④	1PC
	⑤	1PC		⑥	1PC		⑦	1PC		⑧	1PC
	⑨	1PC		⑩	1PC		⑪	1PC		⑫	1PC
	⑬	1PC		⑭	4PCS						



 STEP 1:

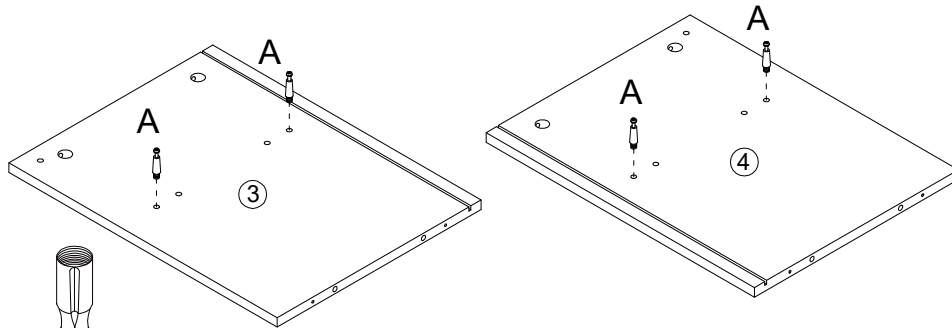
 **A x 4**

 



Tool required
Phillips Head Screw Driver
(Not Provided)

STEP 2:

  
 **B x 2**
 **C x 2**

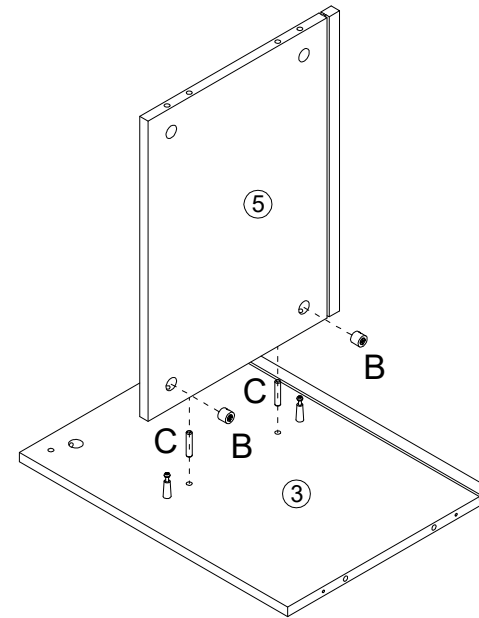



Tool required
Phillips Head Screw Driver
(Not Provided)


STEP 3:

   **B x 2**
 **C x 4**

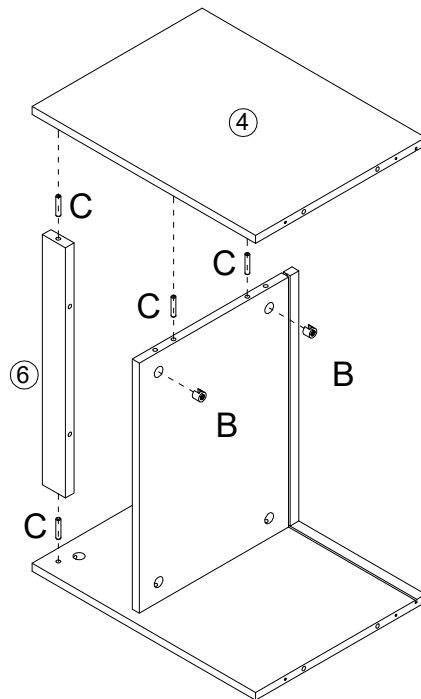




Tool required
Phillips Head Screw Driver
(Not Provided)

   STEP 4:

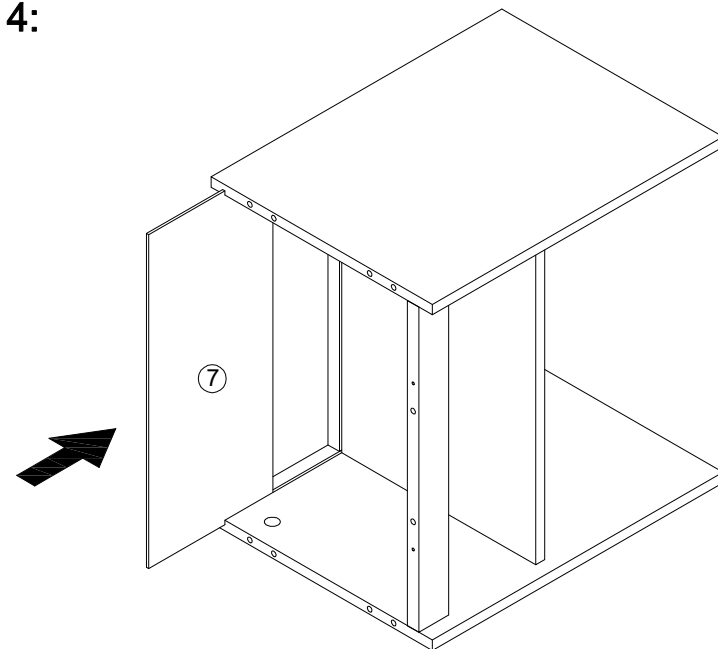




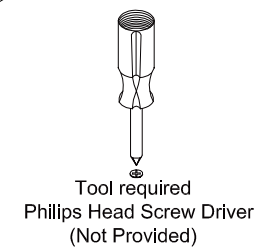 
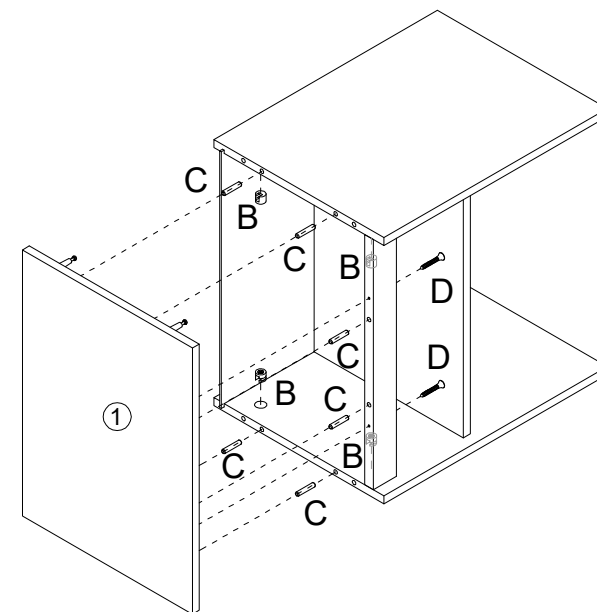 
STEP 5:

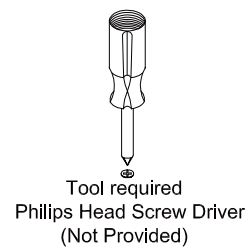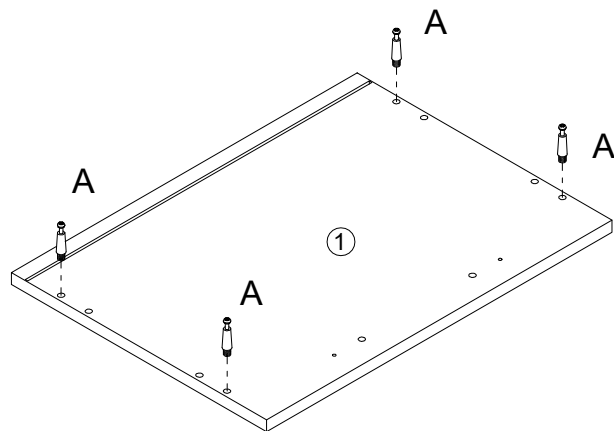 A x 4

 


STEP 6:



 B x 4
 C x 6
 D x 2


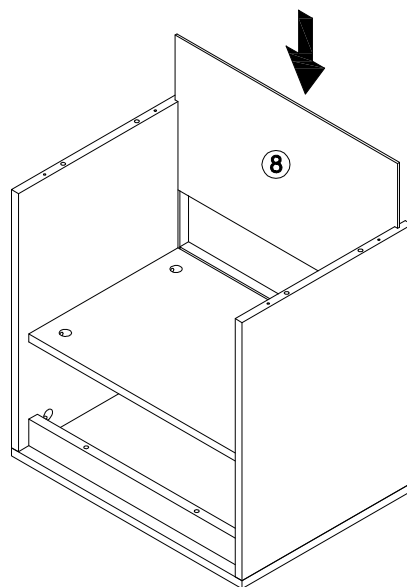


STEP 7:






STEP 8:

  
 C x 4
 D x 4

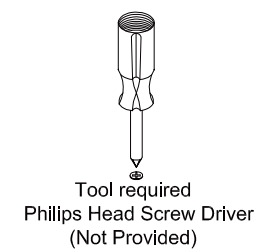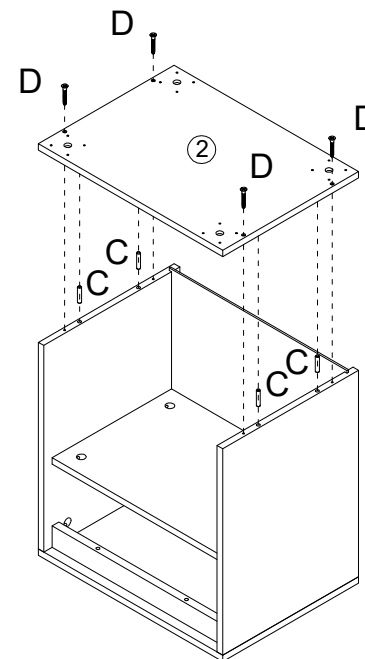



 
 
 
STEP 9:

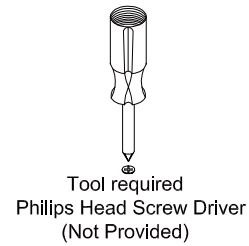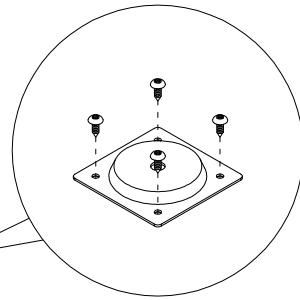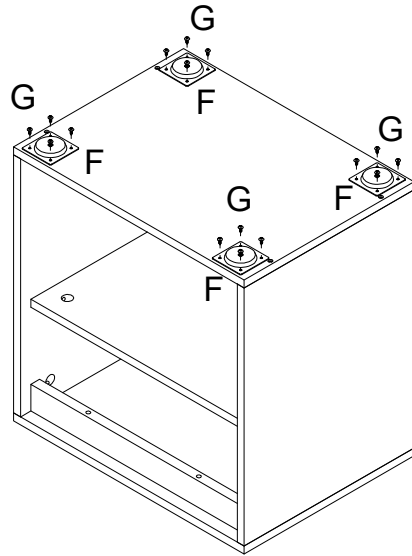


 
STEP 10:

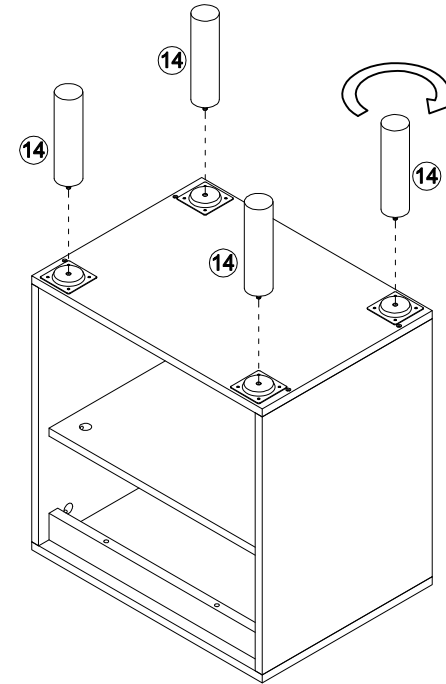

    
 
STEP 11:

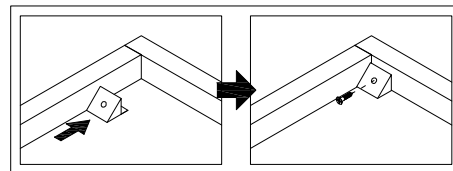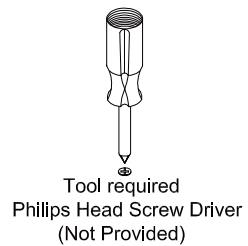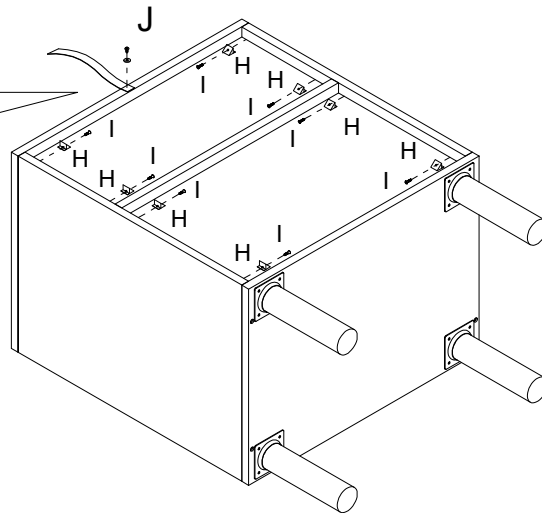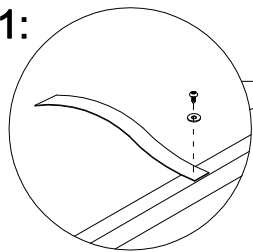

  
STEP 12:

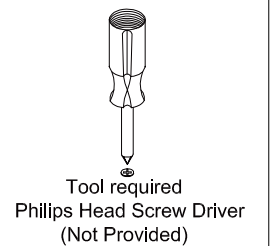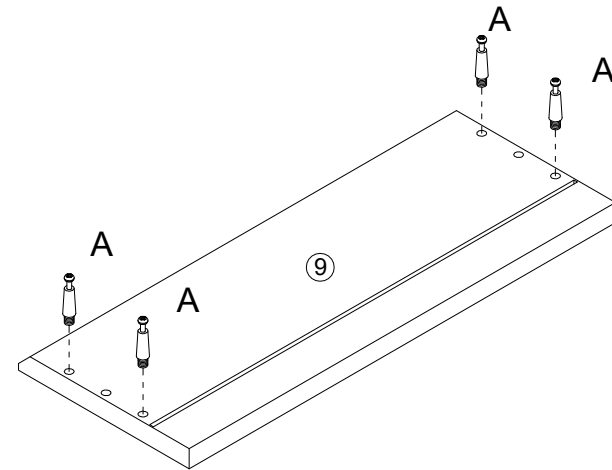

 
 
STEP 13:

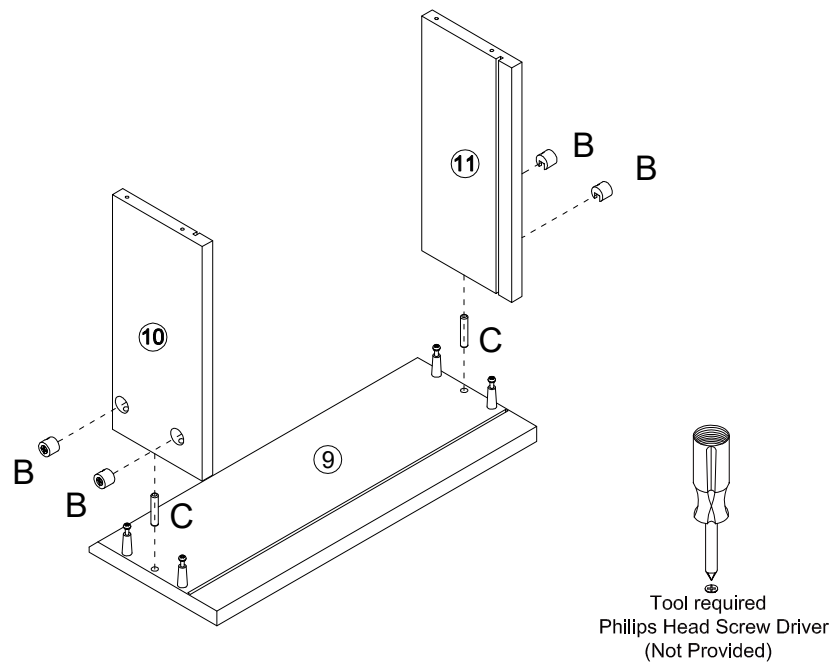

 
STEP 14:

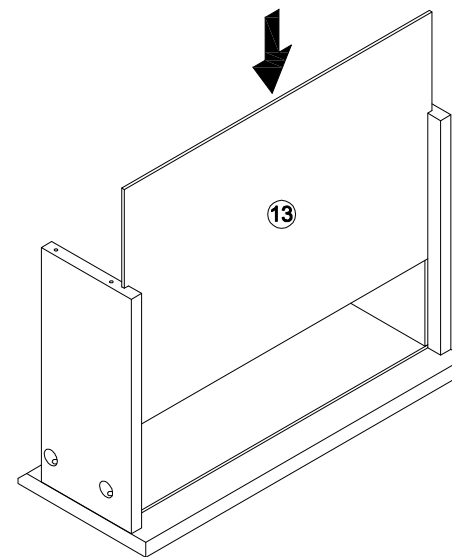

  STEP 15:

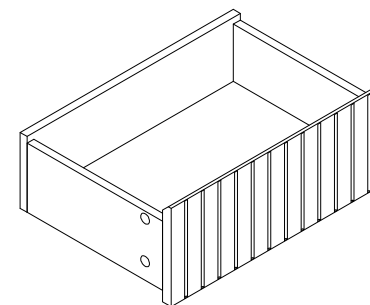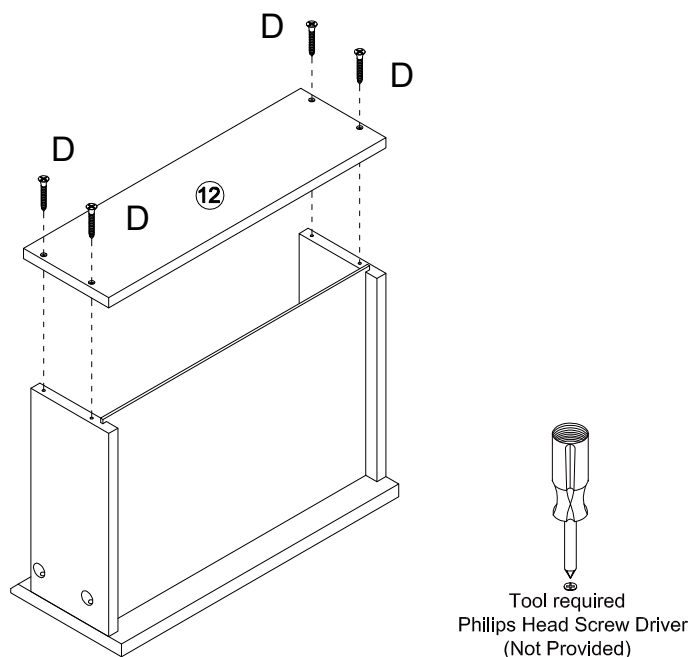


 
STEP 16:

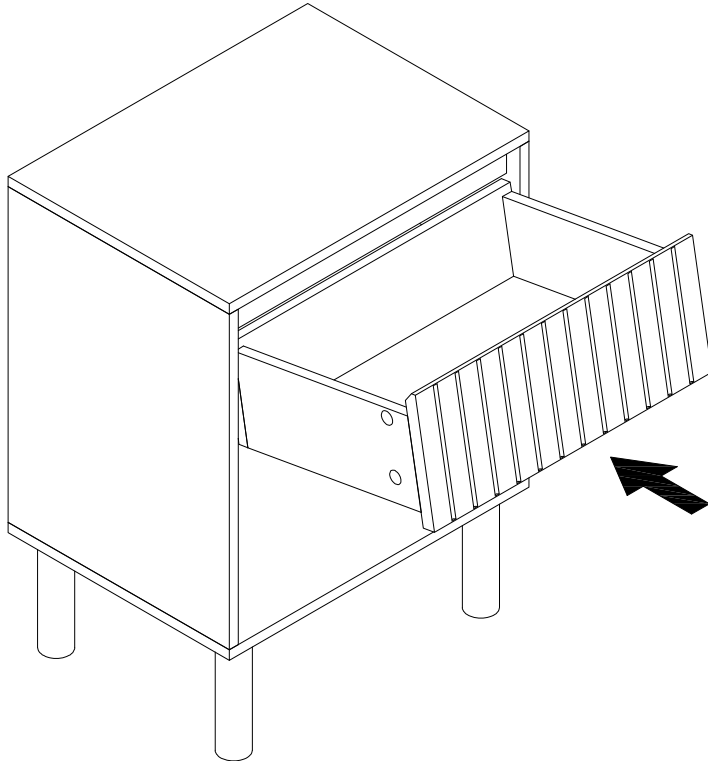

STEP 17:

  E x 1

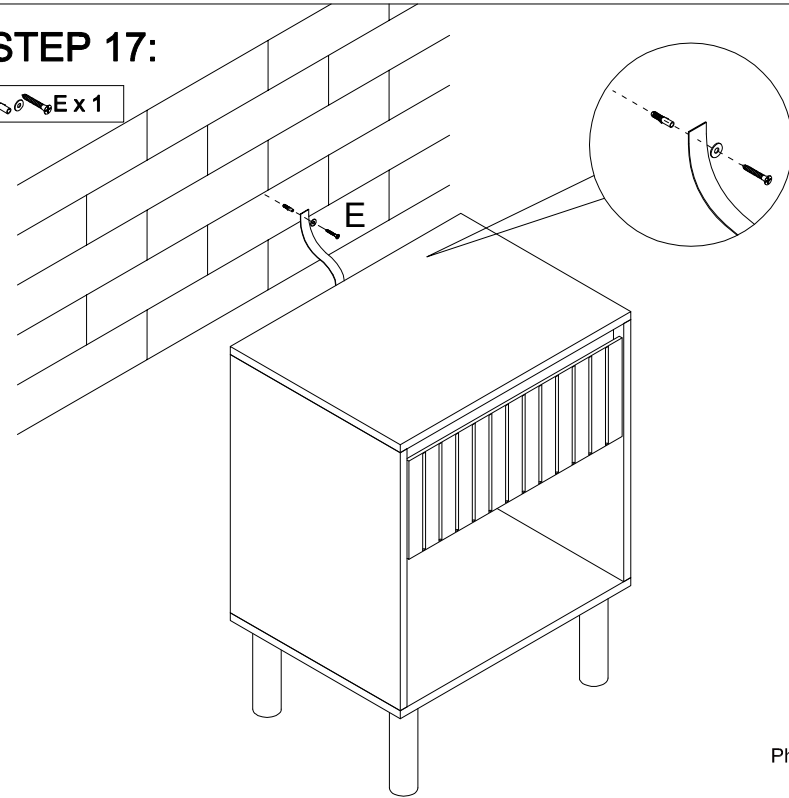


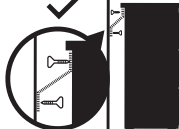 


Tool required
Phillips Head Screw Driver
(Not Provided)

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**

⚠ WARNING	
	
<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none"> • ALWAYS secure it with an anchor device. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heavy items down low. • Furniture type is at risk of toppling over. 	
<p>NEVER put a TV on this furniture </p> <p>This is a permanent label. Do not remove!</p>	



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

