

Assembly Instructions






 



43541621 5 Tier Lozenge Bookshelf oak look oo

WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.







CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

MAXIMUM SAFE LOAD: SHELF: 10KG/LAYER.


1 Hardware List

	A	M7x50mm	20pcs		B		20pcs		C		20pcs
	D	M4x35mm	2pcs		E	M4x12mm	2pcs		F		2pcs
	G		2pcs		H	M4mm	1PC		I	Ø30mm	6pcs

     2 Parts List

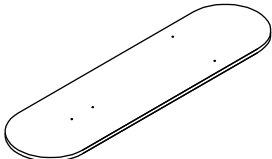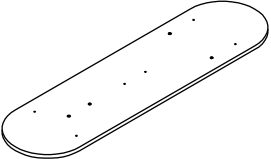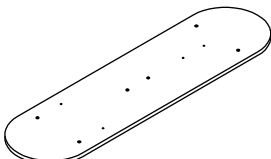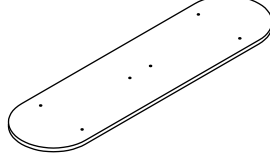
							
①	1pc	②	2pcs	③	1pc	④	1pc
							
⑤	6 pcs	⑥	4 pcs				


 
3

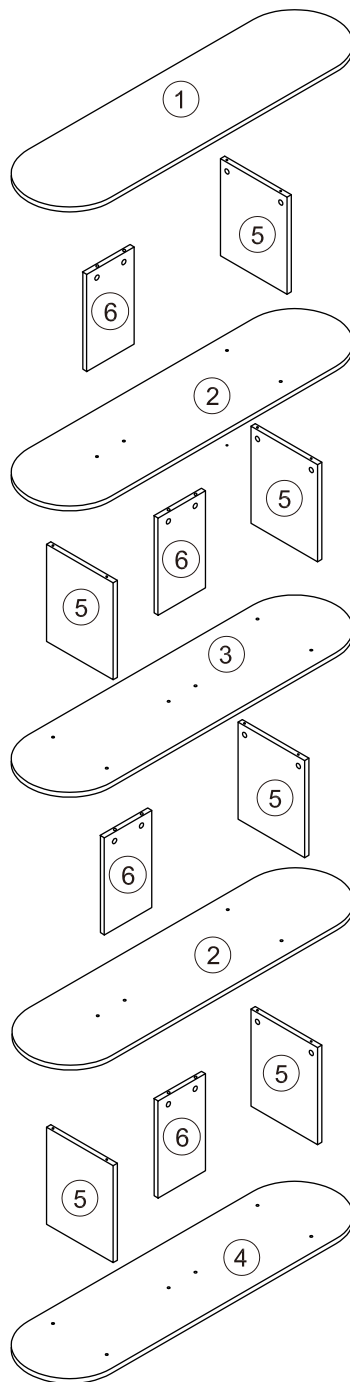

Step:1


B -  **x8**

  
Tool required
Philips Head Screw Driver
(Not Provided)

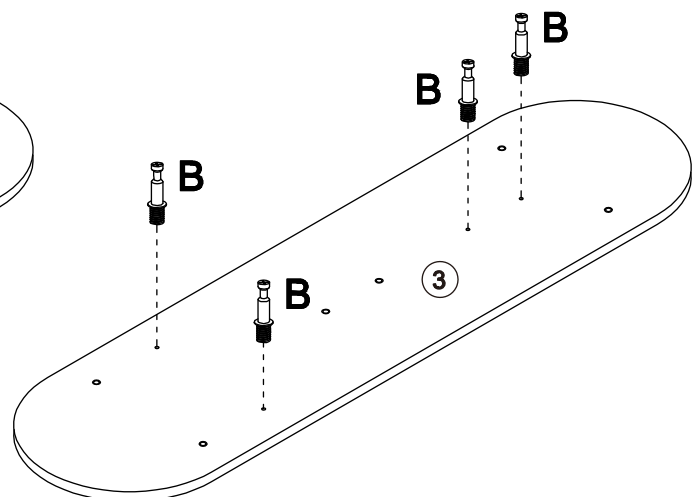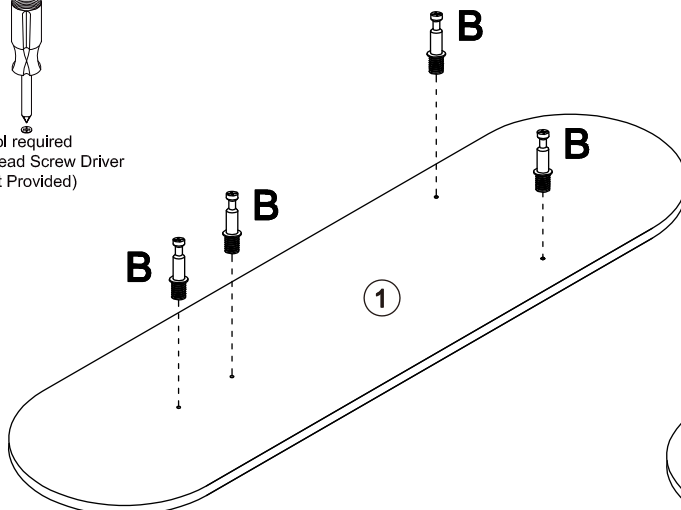

Step:2

 B -  x12

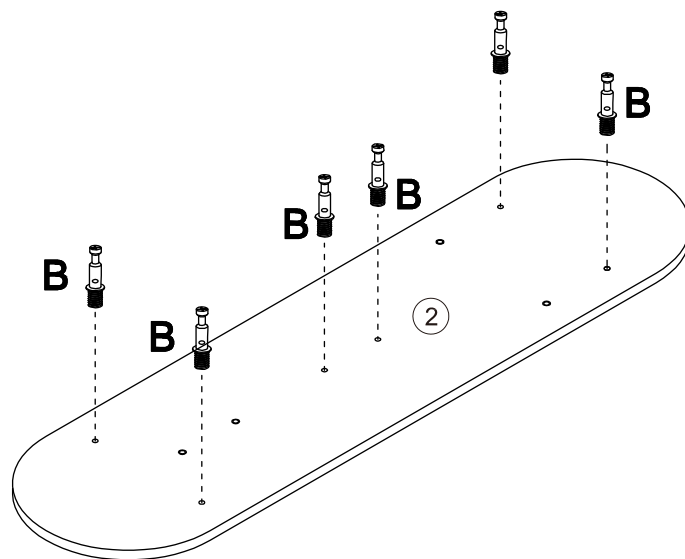


X2



Tool required
Philips Head Screw Driver
(Not Provided)


Step:3

 
C -  x4

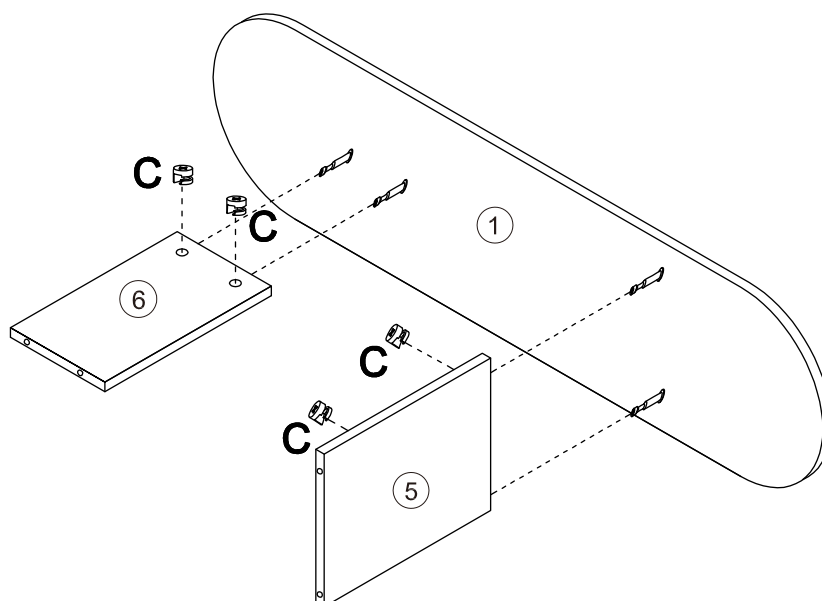


Tool required
Philips Head Screw Driver
(Not Provided)


Step:4

 A -  x4

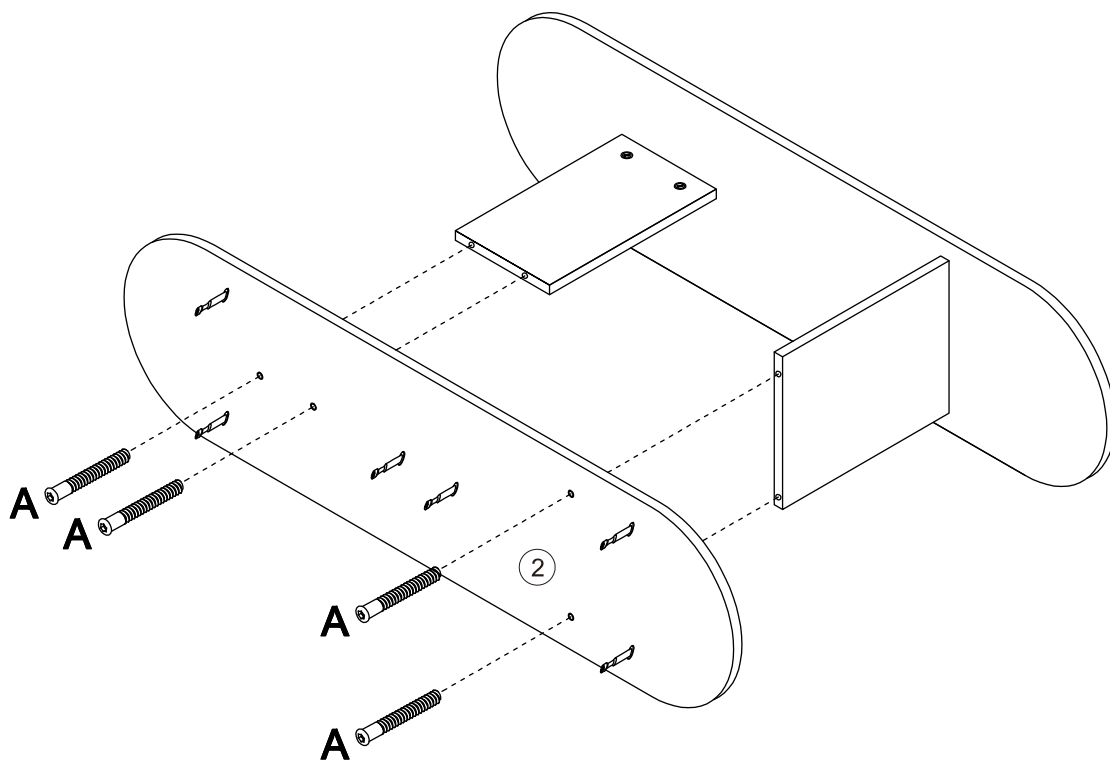


Step:5

 
C -  x6

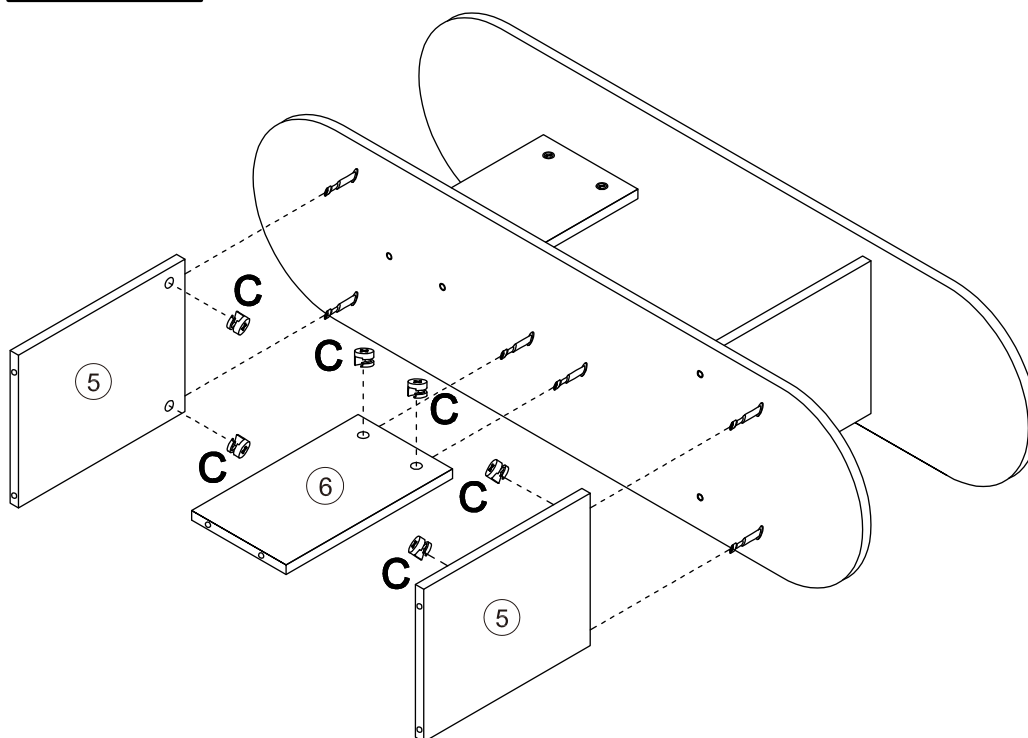


Tool required
Philips Head Screw Driver
(Not Provided)


Step:6

 A -  x6

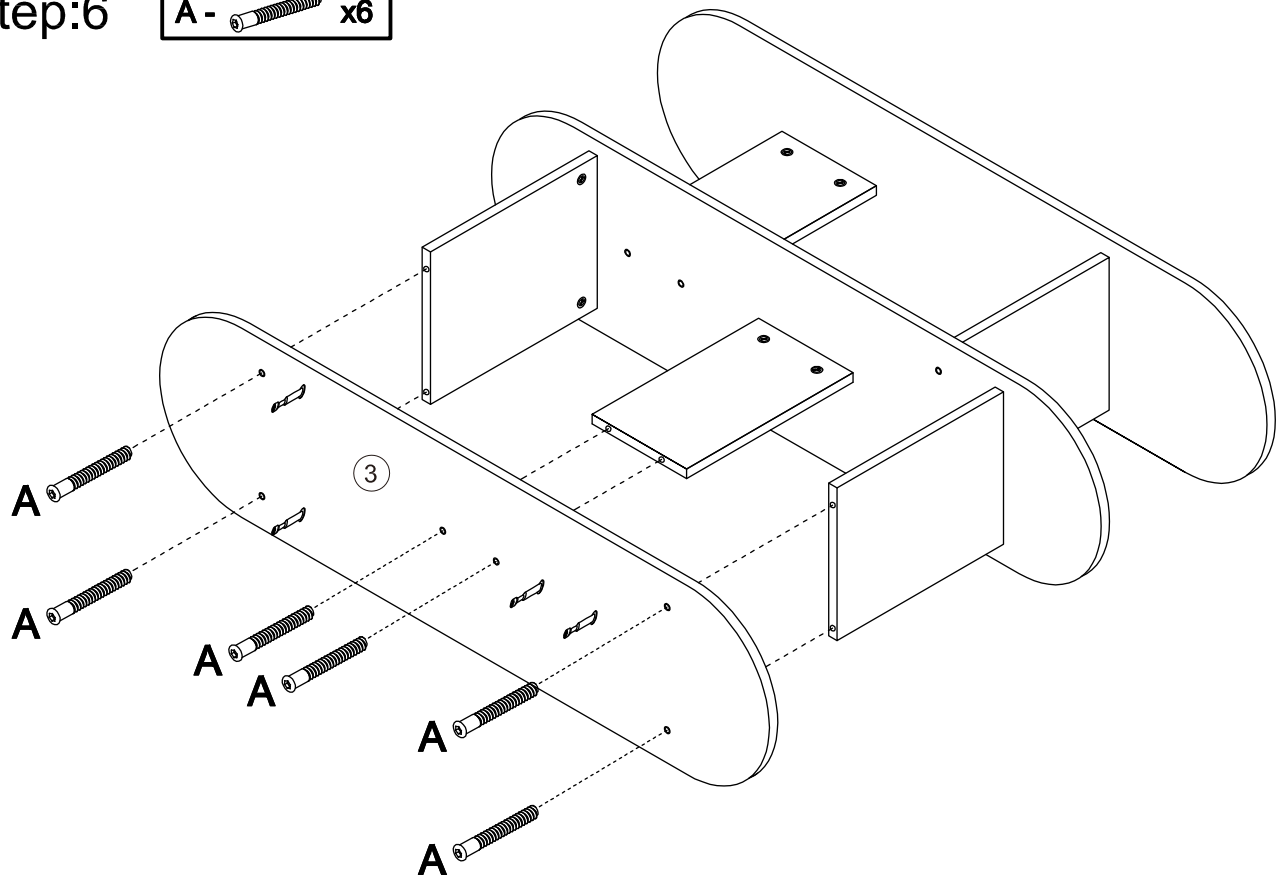


Step:7

 
C -  x4

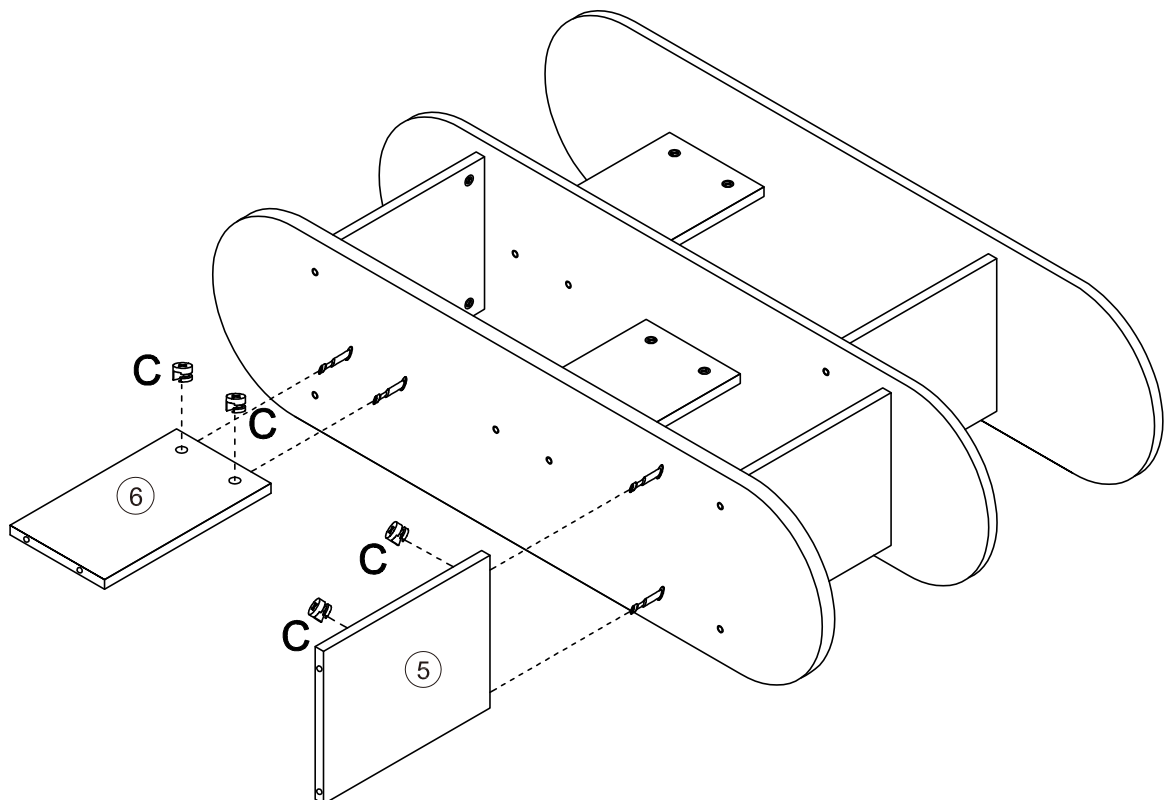


Tool required
Philips Head Screw Driver
(Not Provided)


 
Step:8

A -  x4

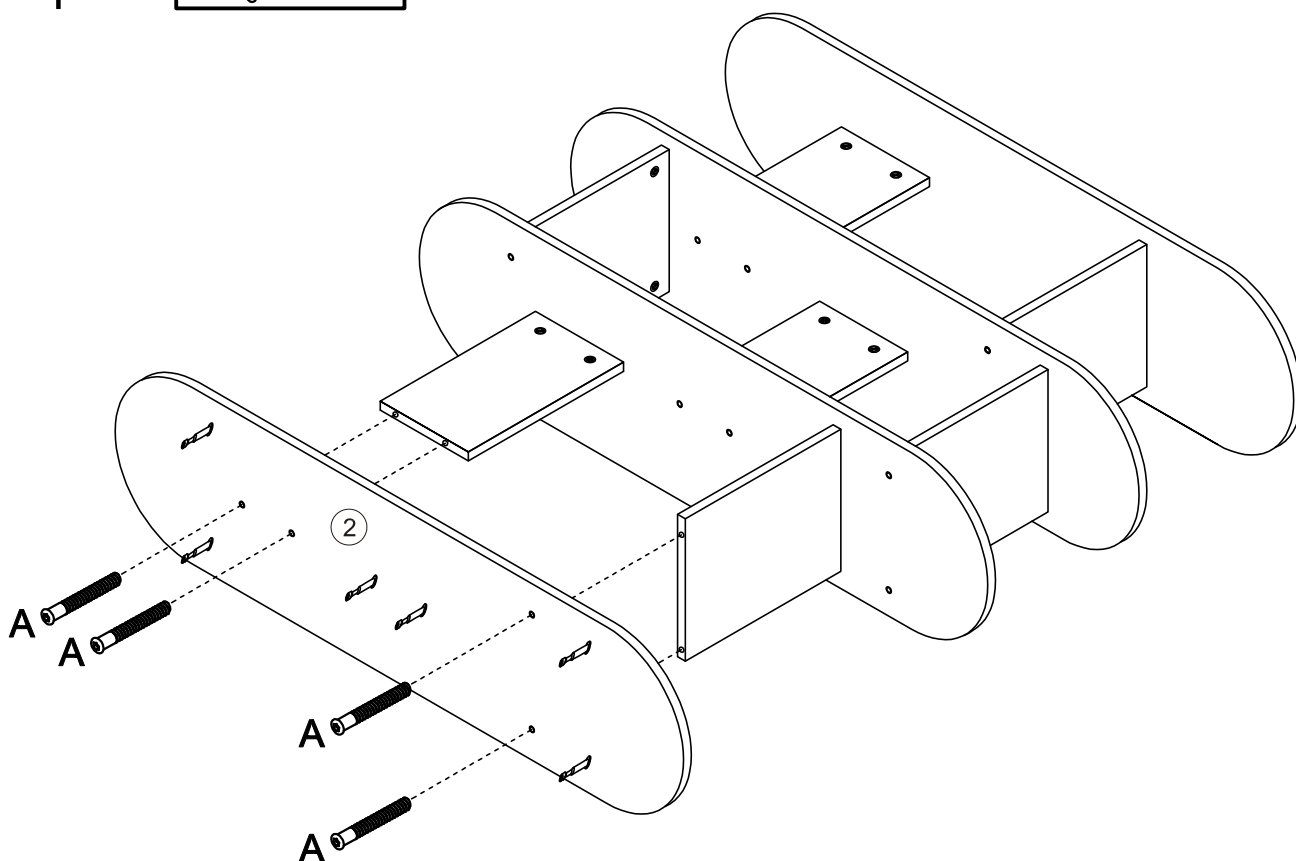 




Step:9

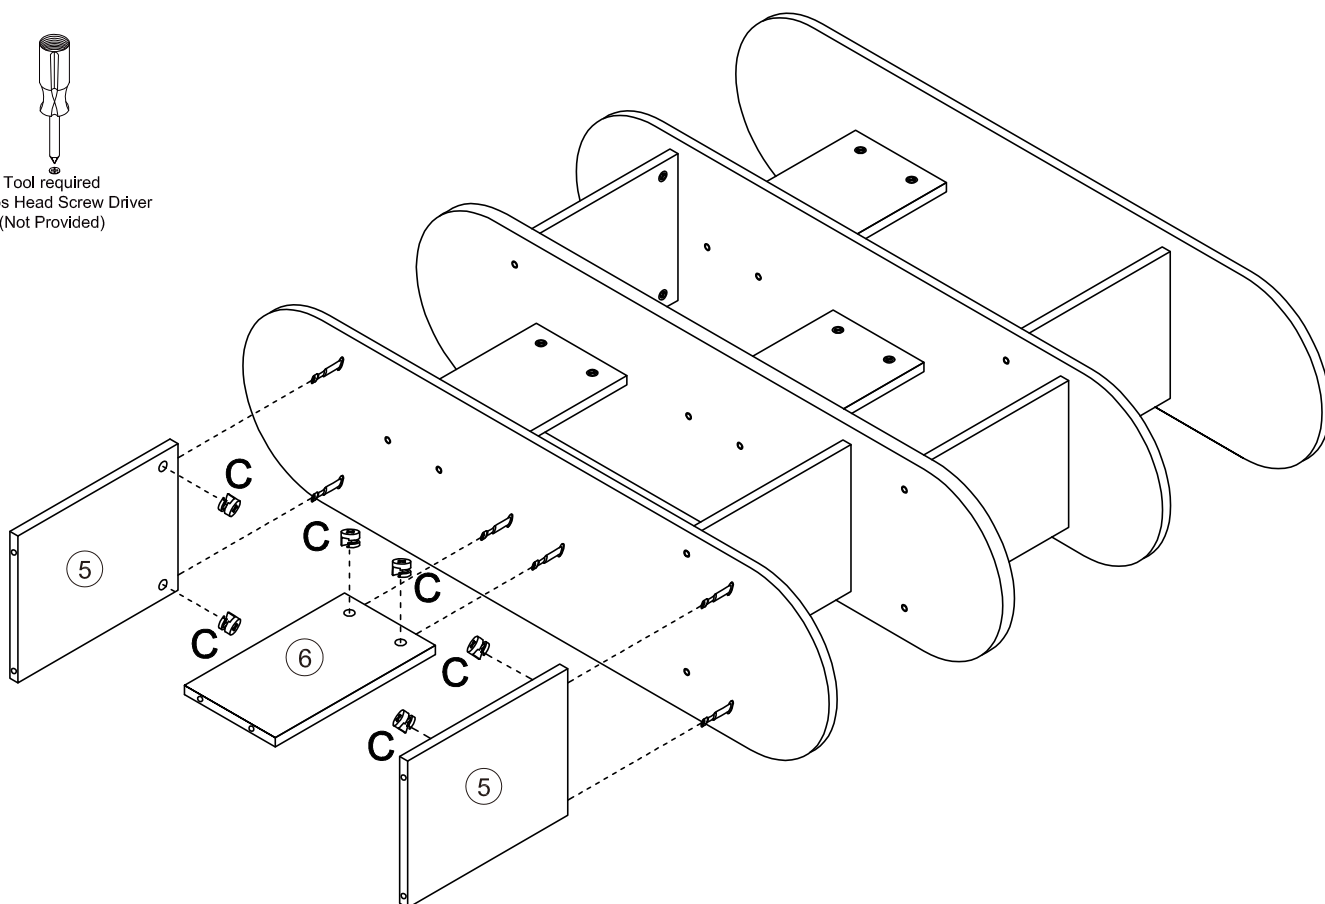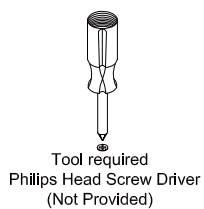  C -  x6

 
 







Step:10

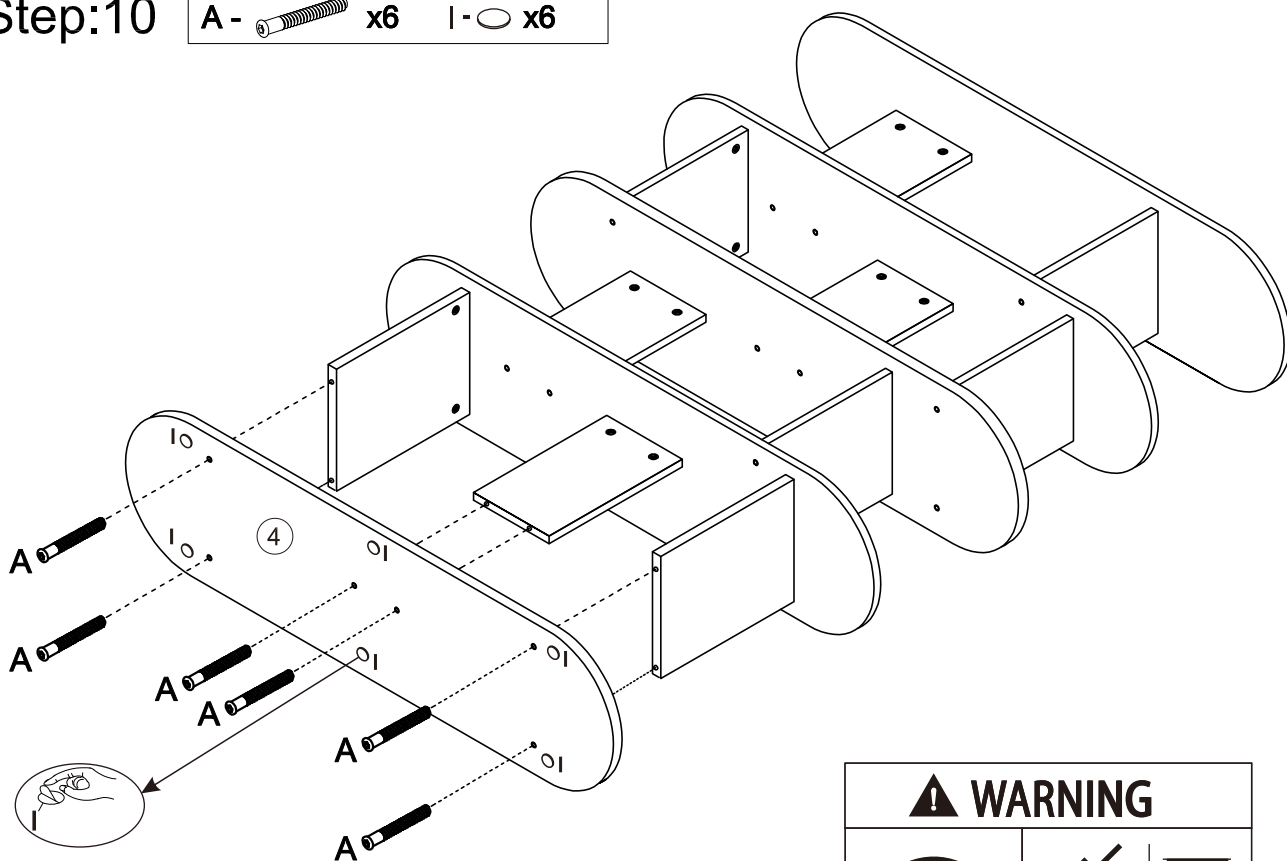A -  x6 I -  x6



Step:11

   
D -  x 2 E -  x 2 F -  x 2 G -  x 2

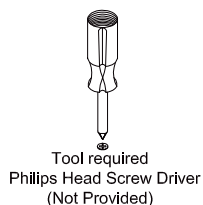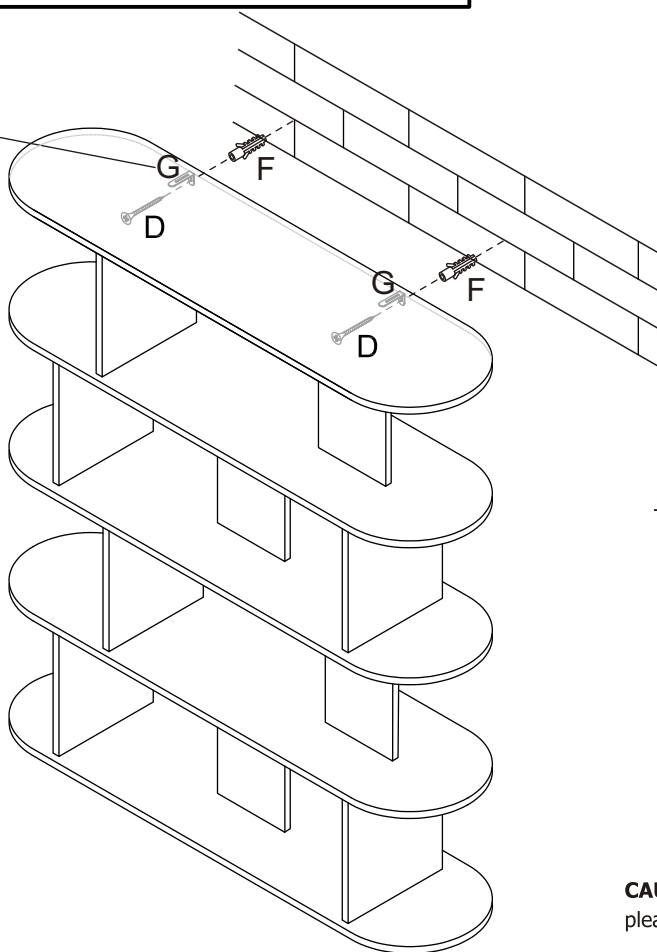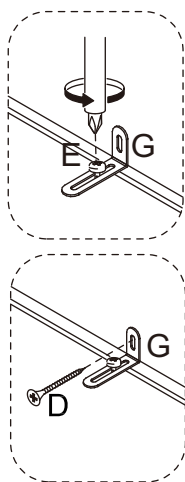

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



 WARNING

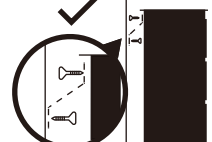

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).