



**Popcorn Maker**  
**PM-220B**  
**User Manual**



PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE

## IMPORTANT SAFEGUARDS


**When using any electrical product, always follow these basic safety precautions:**



### **READ ALL INSTRUCTIONS BEFORE USE.**


Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental liabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if damaged or malfunctions.
- **Do not touch hot surfaces. Only use the handle.**
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**

- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not damage the non-stick coating on the heating plates.
-  **Caution, hot surface. Care must be taken. The surfaces will get hot during and immediately after use.**
- For cleaning cooking surface, please refer to section “Cleaning and Maintenance”.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## KNOW YOUR POPCORN MAKER

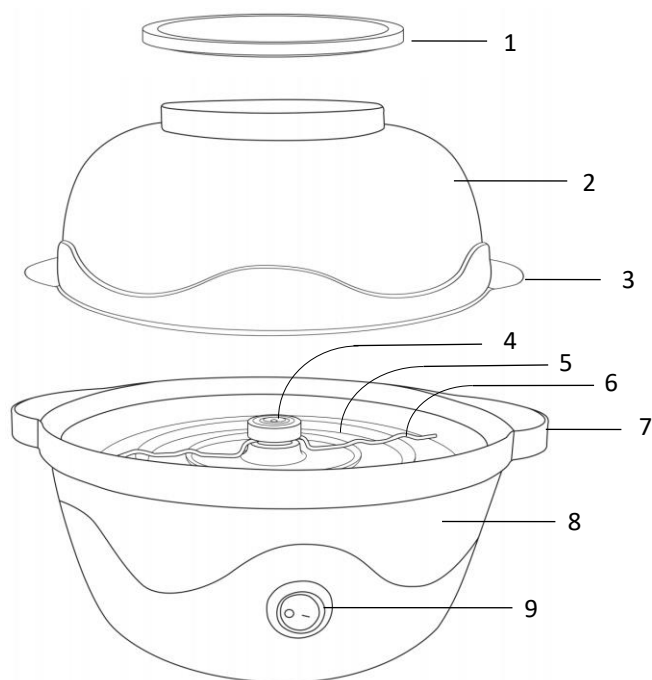

1. Measuring cup
2. Lid
3. Bowl handle
4. Nut
5. Cooking surface
6. Stirring arm
7. Handle
8. Main unit
9. On/Off switch

### BEFORE FIRST USE

**IMPORTANT!** Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.

**IMPORTANT!** Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.

- Unpack the appliance and check if all parts are there and undamaged. In case of shipping damage or incomplete package, return the product to place purchase for replacement.
- Clean the main unit with a damp cloth or sponge. Wipe dry with a soft dry cloth.

**WARNING!** Do not immerse the main unit in water or any other liquid to clean.

- Wash the bowl and lid with soapy water. Dry all components thoroughly before use.

## HOW TO USE YOUR POPCORN MAKER

1. Place the appliance on a flat, solid, clean, dry and heat-resistant surface.
2. Take off the measuring cup and lid. Connect the appliance to the mains power outlet socket. Ensure that the power supply is consistent with the rating plate.
3. Turn on the appliance, the On/Off switch lights up in red and the stirring arms start running. It will take approximately 2 minutes to reach the recommended cooking temperature.
4. Put 15g of oil, 30g of sugar and 1 measuring cup of corn onto the cooking surface. Assemble the measuring cup to the lid and cover main unit with the lid. The corn will start to pop in approx. 1.5 minutes and finish popping in approx. 3 minutes.

Note:

- You can also cook without oil and sugar. If cooking without any oil, the popping time be a little bit longer.
  - If butter is used instead of oil, put the butter on the cooking surface before turning on the appliance.
5. Turn off the appliance and disconnect the appliance from the mains power outlet socket.
  6. Grasp the handles of the lid and main unit on both sides, lift and flip the appliance upside down to make it stand on the lid, and carefully take off the main unit.

**CAUTION! The appliance gets extremely hot during and immediately after cooking, always use oven mitts when handling the popcorn maker.**

7. Toss the lid to loosen the popcorn and filter the unpopped corn down to the measuring cup.

### **WARNING!**

- Never use sharp utensils on the cooking surface as this would damage the non-stick coating. Use only heat-resistant plastic or wood utensils only if necessary.
- Always unplug the appliance from the power outlet socket when not in use.

## CLEANING AND MAINTENANCE

This appliance should be cleaned after each use.

**CAUTION: Do not immerse the main unit in water or any other liquids!**

- Always unplug your appliance from the mains power supply before cleaning or during maintenance.
- Ensure that your appliance has completely cooled down before cleaning, as it gets very hot during use.
- Wash the lid, measuring cup, stirring arm and nut with soapy water.

Note: To detach the stirring arm, unscrew the nut counterclockwise. To install do it in reverse order.

- Clean the main unit with a damp cloth or soft brush. Wipe dry with a soft dry cloth. Do not use anything abrasive that can scratch or damage the appliance.
- Air-dry all the parts thoroughly before storage.

## STORAGE

1. Unplug the appliance from mains power.
2. Allow the appliance to cool down completely.
3. Clean and dry the appliance.
4. Store the appliance in a clean dry location and out of the reach of children.

## TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 480W

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>