



**Frozen Drink Maker**

**SBL-1208A**

**User Manual**



PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE

## IMPORTANT PRECAUTIONS

1. NEVER immerse the FROZEN DRINK MAKER motor housing, cord or plug in water or any other liquid.
2. NEVER use near water or use it outdoors.
3. NEVER leave the unit unattended if used near children.
4. NEVER use a scouring pad on the appliance when cleaning.
5. NEVER use an abrasive sponge or harsh cleaning products on the appliance.
6. NEVER use for anything other than making frozen drinks.
7. Avoid contact with moving parts during use.
8. DO NOT operate this appliance with a damaged cord or plug, or if the product is damaged.
9. DO NOT place motor base in the dishwasher.
10. The appliance is for use with food and liquids only.
11. Keep out of reach of children.
12. Unplug the appliance from electrical outlet when not in use, before putting on or removing parts, and before cleaning. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the unit.
13. This appliance is NOT A TOY. DO NOT allow children to play with the appliance.

**WARNING: To prevent damage to the electric motor, the continuous operating time is 2 minutes. Allow the appliance to rest at least 1 minute between each cycle.**

When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions before operating this appliance.
2. NEVER put fingers or utensils into feed or discharge areas.
3. Keep hands away from blade mechanism. Blades are sharp. DO NOT touch.
4. Keep hands and utensils out of container while blending to reduce the risk of severe personal injury or damage to the appliance.
5. To protect against electrical shock do not immerse cord, plug or main unit in water or other liquids.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised and are given instructions concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT! Unplug from mains power outlet when not in use and before attaching or removing parts for cleaning.**

8. Switch off the appliance and disconnect from mains power before removing accessories or approaching parts that move in use.
9. If the supply cord is damaged, DO NOT use. For electrical safety, any repairs to the product should only be carried out by a qualified electrical person only or the product must be disposed of.
10. The use of attachments not supplied with the product may cause a risk of injury to persons.
11. Do not use outdoors. FOR HOUSEHOLD USE ONLY NOT FOR COMMERCIAL USE.
12. DO NOT use if shaving blade is loose, cracked, bent or damaged.
13. DO NOT let the cord touch hot surfaces.

14. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
15. Extreme caution must be used when moving this appliance with liquids inside.
16. This appliance must be on a level surface to operate properly.
17. DO NOT use this appliance for other than its intended use.
18. DO NOT leave the appliance unattended while in use or when plugged into mains power.
19. Check the inside of the ice shaving chamber for foreign objects prior to use.
20. A short power supply cord is provided to reduce the risk of becoming entangled or tripping over a long cord.
21. For cleaning, please refer to “CLEANING & MAINTAINANCE” section.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## KNOW YOUR FROZEN DRINK MAKER



1. Motor housing

4. chamber lock

7. Pitcher

2. Selector knob

5. Lid

8. Base

3. Ice shaving chamber

6. Mixing paddle

## INTRODUCTION

This all-in-one frozen drink maker will make perfect slush drinks, margaritas, daiquiris, smoothies and more every time! The two ice shaving options allow you to choose a fine or coarse shaved ice texture. Making one or multiple servings is easy, with the serving sizes indicated right on the pitcher. Use the included recipes to make delicious drinks or create your own. With the frozen drink maker, creating refreshing icy drinks is fun and easy!

## BEFORE FIRST USE

**CAUTION:** The frozen drink maker has a sharp stainless steel blade that can cut and cause injury. Use **EXTREME CAUTION** when handling the appliance. Keep fingers clear from blade and avoid contact at all times when using and cleaning.

**Note:** When using the appliance for the first time, carefully remove all internal and external packaging, protective film and accessories.

- ◆ Before first use, thoroughly wash the ice shaving chamber lid, pitcher and mixing paddle in warm, soapy water with a non-abrasive sponge or cloth. Dry thoroughly. **IMPORTANT! DO NOT put the motor housing or base in water.**
- ◆ Wipe clean the exterior motor housing, base and inside of the unit with a non-abrasive moist sponge or a damp cloth followed by a non-abrasive dry towel.
- ◆ After cleaning the inside, put the ice shaving chamber into the motor housing so it is seated on the shaft. Twist the chamber lock in the direction of the arrow to lock into position.
- ◆ Insert the mixing paddle into the slot in the center of the pitcher.
- ◆ Now the frozen drink maker is ready for use.

## OPERATION

1. Place the appliance on a flat stable, water-resistant surface near an electrical outlet before starting. Make sure the cord is away from any water source. It is acceptable to use an extension cord if needed. **DO NOT** plug in the appliance into mains power at this time.

2. Place the ice shaving chamber into the motor housing so it is seated on the shaft. Twist the chamber lock in the direction of the arrow to lock into position. Make sure that the ice shaving chamber is free from any foreign objects.
3. Insert the mixing paddle into the slot in the center of the pitcher.
4. Fill the pitcher with your favorite beverage, liquor, juice or drink mix.

NOTE: Use the lines indicated on the side of the pitcher as a guide for how much liquid to add. You may choose to make a small or large serving.

5. Slide pitcher into place on base and turn clockwise until it stops. This will allow the mixing paddle to mix ice and ingredients once the operation begins.
6. Turn the selector knob to the desired setting. SLUSH produces a finely shaved ice; SNOW produces a coarser textured ice.
7. Place ice in ice shaving chamber. Add enough ice cubes, but not above the top of ice shaving chamber.



**BE CAREFUL when placing ice cubes in ice shaving chamber. The blade is very sharp.**

8. Plug cord into a mains power outlet.
9. When you are ready to start making your frozen drink, place the lid on the appliance and turn counter-clockwise to engage the interlock switch (to turn power ON/OFF).

**WARNING: The continuous operating time is 2 minutes. Please rest at least 1 minute between each cycle to prevent the appliance from overheating.**

10. The unit will immediately start and begin shaving ice.

Note: it may be necessary to remove the lid during shaving to redistribute the ice.

11. Turn lid clockwise to stop the frozen drink maker from shaving ice. Stop unit when shaved ice reaches desired shaved ice level indicated on the pitcher. DO NOT shave ice above max line.
12. To remove pitcher, turn counter-clockwise, slide out and serve your frozen drink.

By following these simple instructions, you can use your frozen drink maker to make delightful treats for family and friends!

## HELPFUL TIPS

1. Ice cubes should sit a short while before putting them in the ice shaving chamber. If ice has a frosty appearance, it is too hard to shave. Let the ice sit until it is translucent and wet to the touch. Then it is ready to put in the ice shaving chamber.

2. If ice is not shaving, try one of the following:

Turn the appliance off by removing the lid. Redistribute the ice in the ice shaving chamber. BE CAREFUL to avoid contact with the shaving blade.

Make sure the lid is properly locked to activate the interlock switch to start the unit.


3. If the mixing paddle is not turning, make sure the pitcher has been turned clockwise on the base until it stops. The mixing paddle must be properly affixed to the bottom of the pitcher and the top of the appliance in order to mix ice and ingredients.

4. It may appear that your frozen drink maker is leaking when unshaven ice melts and drips onto the base. This is normal. Wipe the base dry with a soft cloth.

**IMPORTANT! To prevent water damage to the bench top, ensure the frozen drink maker is placed on a water-resistant surface.**



## CLEANING & MAINTENANCE

1. After using your frozen drink maker, disconnect from electrical power outlet. Remove plug by gripping the plug body and pulling out of the outlet. Never yank or twist cord to unplug the appliance.
2. Thoroughly wash the lid, ice shaving chamber, mixing paddle and pitcher in warm, soapy water. Rinse and dry thoroughly. **DO NOT place the appliance or any parts in a dishwasher.**  
 Use EXTREME CAUTION when handling the appliance. Keep fingers clear from blade and avoid contact at all times when using and cleaning.
3. Use a damp, non-abrasive cloth to wipe exterior motor housing, base and inside of the appliance. Dry with non-abrasive towel. DO NOT put the motor housing or base in water or other liquid.
4. Once washing and drying is complete, reassemble your frozen drink maker. Place the appliance in a clean, dry place.

## RECIPES

DRINKS	OPERATION
<p><b>BASIC MARGARITA</b></p> <ul style="list-style-type: none"> <li>● 2 shots tequila</li> <li>● 1 shot triple sec</li> <li>● 350ml margarita mix</li> <li>● 1 shot freshly squeezed lime juice</li> <li>● Salt &amp; lime wedge for garnish</li> <li>● Ice</li> </ul>	<ul style="list-style-type: none"> <li>● Place all ingredients in pitcher with mixing paddle, except salt, lime wedge and ice.</li> <li>● Shave ice on SLUSH setting. Refer to OPERATION section for complete instructions.</li> <li>● Serves one</li> </ul>
<p><b>STRAWBERRY MANGO MAGRARITA</b></p> <ul style="list-style-type: none"> <li>● 1 shot tequila</li> <li>● 240ml mango juice</li> <li>● 3 large fresh strawberries, chopped</li> <li>● Salt for rimming glass (optional)</li> <li>● Ice</li> </ul>	<ul style="list-style-type: none"> <li>● Place all ingredients in pitcher with mixing paddle, except salt, lime wedge and ice.</li> <li>● Shave ice on SLUSH setting. Refer to OPERATION section for complete instructions.</li> <li>● Serves one</li> </ul>

<p>APRICOT SMOOTHIE</p> <ul style="list-style-type: none"> <li>● 700ml apricot juice</li> <li>● 60ml cream</li> <li>● Ice</li> </ul>	<ul style="list-style-type: none"> <li>● Place all ingredients except ice in pitcher with mixing paddle.</li> <li>● Shave ice on SNOW setting. Refer to OPERATION section for complete instructions.</li> <li>● Serves two</li> </ul>
<p>KAHLUA COLADA</p> <ul style="list-style-type: none"> <li>● 45ml kahlua</li> <li>● 15ml rum</li> <li>● 70ml coconut cream</li> <li>● 70ml pineapple juice</li> <li>● 15ml cream</li> <li>● Ice</li> </ul>	<ul style="list-style-type: none"> <li>● Place all ingredients except ice in pitcher with mixing paddle.</li> <li>● Shave ice on SNOW setting. Refer to OPERATION section for complete instructions.</li> <li>● Serves one</li> </ul>
<p>FROZEN VANILLA LATTE</p> <ul style="list-style-type: none"> <li>● 120ml vanilla syrup</li> <li>● 240ml strong coffee, chilled</li> <li>● ice</li> </ul>	<ul style="list-style-type: none"> <li>● Place all ingredients except ice in pitcher with mixing paddle.</li> <li>● Shave ice on SLUSH setting. Refer to OPERATION section for complete instructions.</li> <li>● Serves one</li> </ul>
<p>POMEGRANATE SLUSH</p>	

<ul style="list-style-type: none"> <li>● 180ml pomegranate juice</li> <li>● 60ml red raspberry syrup</li> <li>● 60ml blue raspberry syrup</li> <li>● Fresh mint for garnish</li> <li>● ice</li> </ul>	<ul style="list-style-type: none"> <li>● Place all ingredients except fresh mint and ice in pitcher with mixing paddle.</li> <li>● Shave ice on SLUSH setting. Refer to OPERATION section for complete instructions.</li> <li>● Garnish with fresh mint.</li> <li>● Serves two</li> </ul>
<p>TIE-DYE SLUSH</p> <ul style="list-style-type: none"> <li>● 120ml blue raspberry syrup</li> <li>● 120ml red raspberry syrup</li> <li>● ice</li> </ul>	<ul style="list-style-type: none"> <li>● Pour blue raspberry syrup in pitcher with mixing paddle.</li> <li>● Shave desired amount of ice on SLUSH setting. Refer to OPERATION section for complete instructions.</li> <li>● Pour into glass, leaving at least two inches at the top of glass.</li> <li>● Rinse pitcher and mixing paddle.</li> <li>● Pour red raspberry syrup in pitcher and repeat.</li> <li>● Add 60ml of red raspberry slush to glass. Stir slightly for tie-dye effect.</li> <li>● Serves four</li> </ul>

## TECHNICAL SPECIFICATIONS

Voltage: 220-240Va.c. 50-60Hz

Power: 30W

**12 Month Warranty**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
-----------------------------	------------------------------

<p>Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a></p>	<p>Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a></p>
--	---