

 




 
## BATTERY INSTALLATION:

- 1-Open the battery compartment. 2-Insert batteries into the correct + and polarities. 3-Close the cover.











## HOW TO ASSEMBLE THE LIZARD'S TAIL:

 

## HOW TO USE:

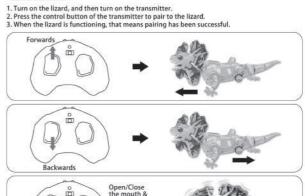



Press and hold the right control button for about 3 seconds, the lizard will shake its frill and make a shrieking sound.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -).

DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES.

NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE
BATTERIES ARE ONLY TO BE CHARGED UDIES OF ADULT SUPPEYINSION. RECHARGEABLE
BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.

THE SUPPLY TERMINALS ARE NOT TO BE SHOTH-CHICQUITER. BERMOVE BATTERIES
FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES
BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE
OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS. REMOVE
TAGS. LABELS AND THE TOY FOR CHILD.

WARNING: TOR CHICKING MARKED.

WARNING: TOR CHOKING HAZARD

WARNING: TOR CHOKING HAZARD

WARNING: TOR CHOKING HAZARD

WARNING: CHOKING

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

ADULT ASSEMBLY REQUIRED.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PLEASE KEEP THE PACKAGING AND INSTRUCTION MANUAL FOR FUTURE REFERENCE.



K: 43-542-222 T: 70-989-670