

# Assembly Instructions

K:43546527 | T:70979503 ISLA STORAGE UNIT

## CARE INSTRUCTIONS:









 
 



Wipe clean with a dry cloth. Never use scourers, abrasives or chemical solvents. Keep away from moisture and direct sunlight. Store in a dry place, for indoor use only.

## WARNING:


 
 







Do not stand, sit, or lean on the unit. Ensure this unit is used only on a flat surface. Do not use this unit unless all bolts and screws are securely fastened. Do not place hot objects, such as coffee cups, directly on the surface of this furniture item. This item is for storage purposes only. It contains small parts, should be properly fastened, and must be assembled by an adult. Failure to follow these warnings could result in serious injury.

**MAXIMUM SAFE LOAD: 5kg for top, 5kg for shelf, 3kg for each drawer.**

  
## 1 Hardware List

	A	6x35mm	8pcs		B	15x10mm	8pcs
	C	M6x35mm	8pcs		D	M6x25mm	4pcs
	E	5x38mm	12pcs		F	3.5x12mm	6pcs
	G		2pcs		H		2pcs
	I	M4x35mm	10pcs		J		2pcs
	K	6x30mm	2pcs		L	M3mm	1pc
	M	M4mm	1pc				

## 2




		
① 1pc	② 2pcs	③ 1pc
		
④ 2pcs	⑤ 4pcs	⑥ 2pcs
		
⑦ 2pcs	⑧ 2pcs	⑨ 2pcs
		
⑩ 2pcs		

 3

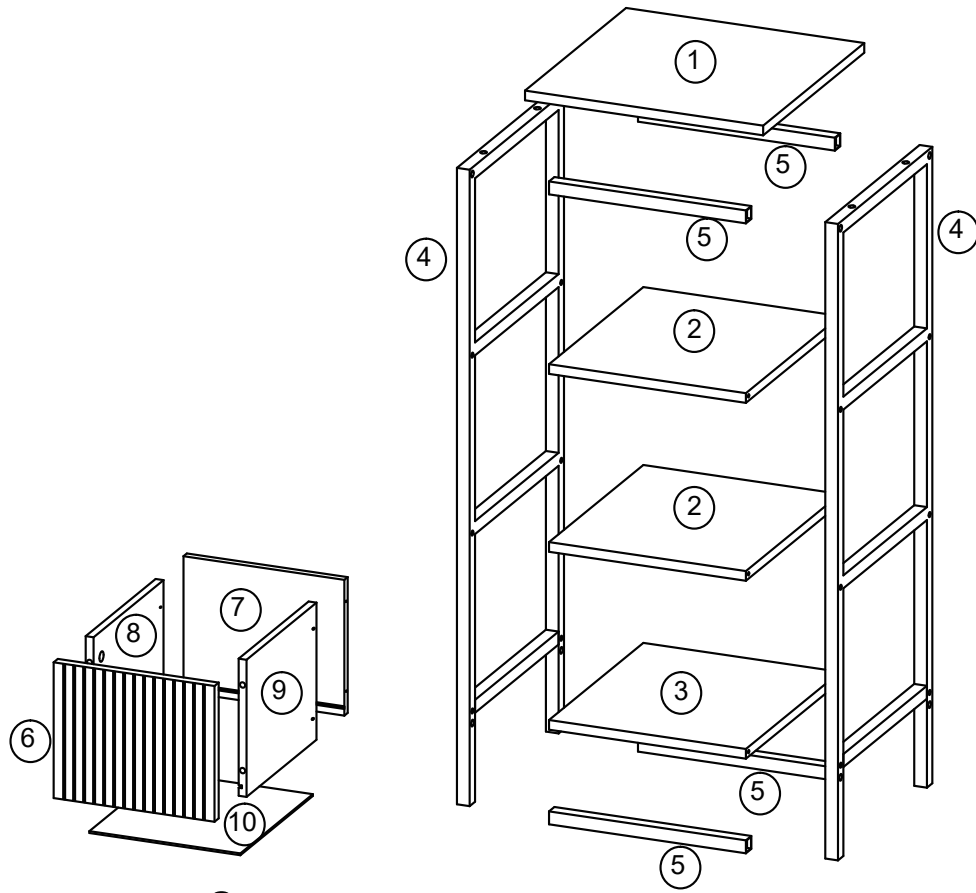



x2

   STEP 1  A×8  B×8

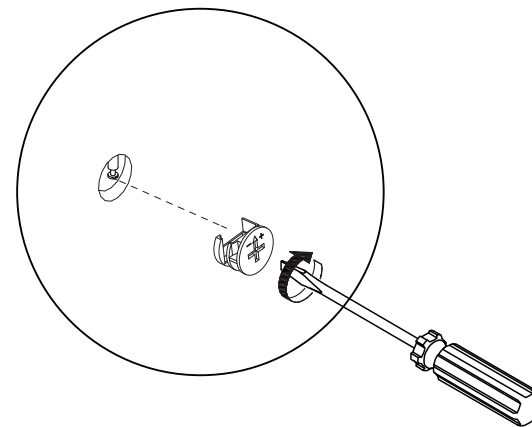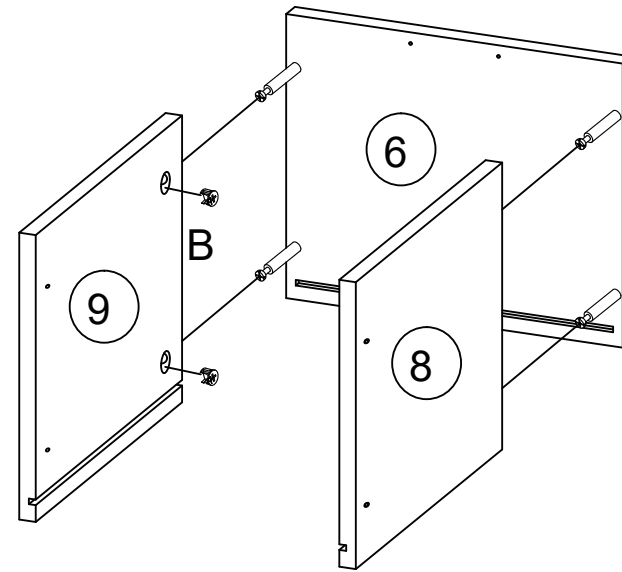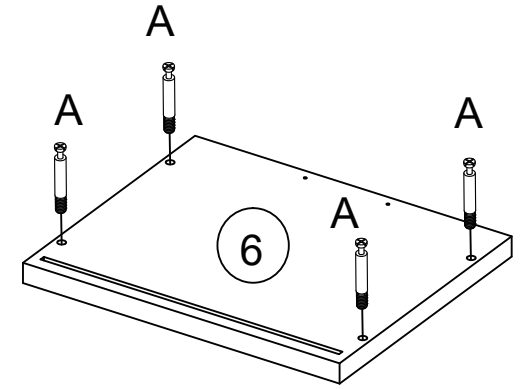


x2

  STEP 2

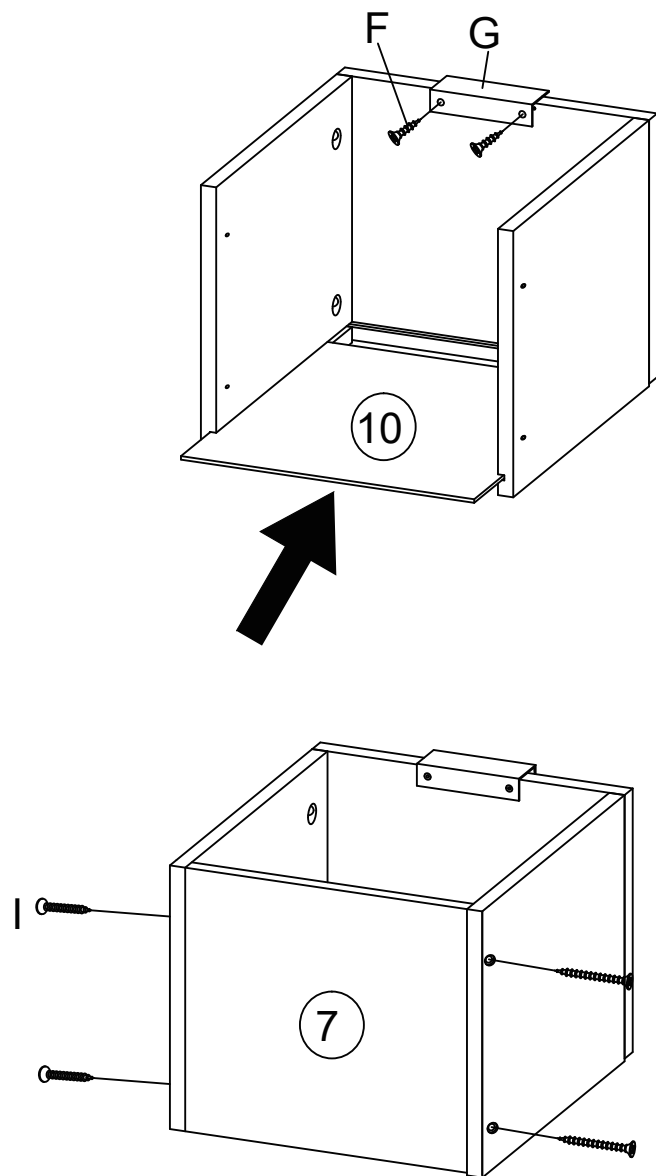



x2


 
STEP 3




Flip panel

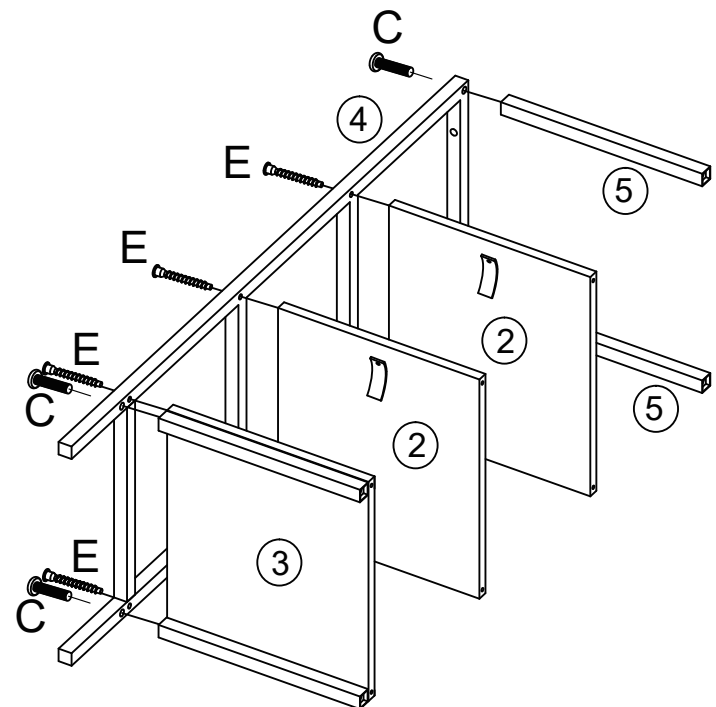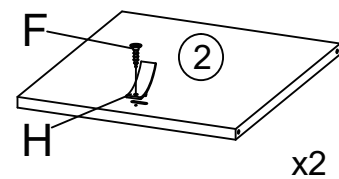  

  
STEP 4

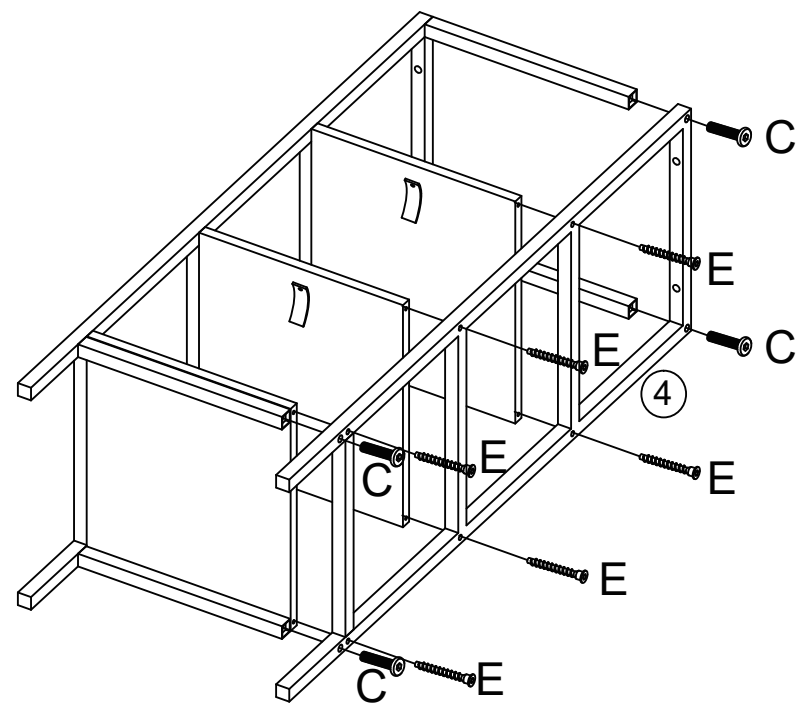

 STEP 5


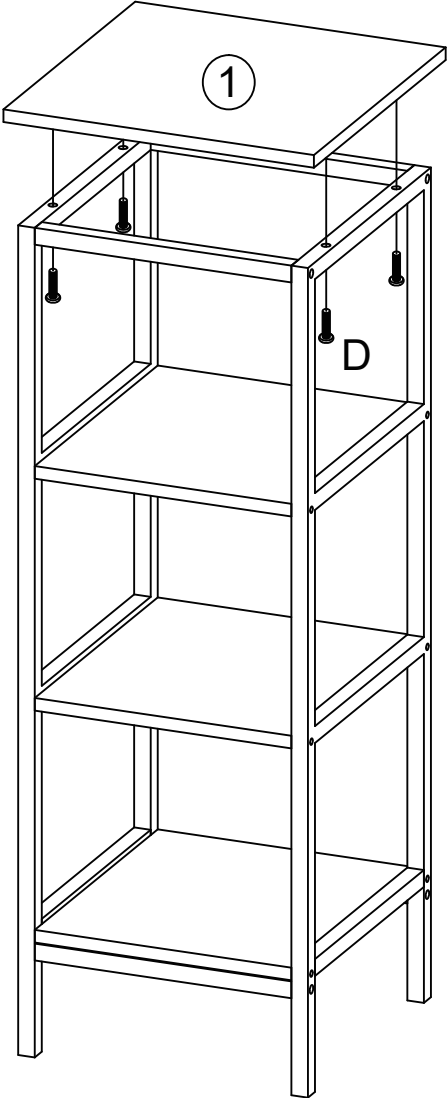


## STEP 6

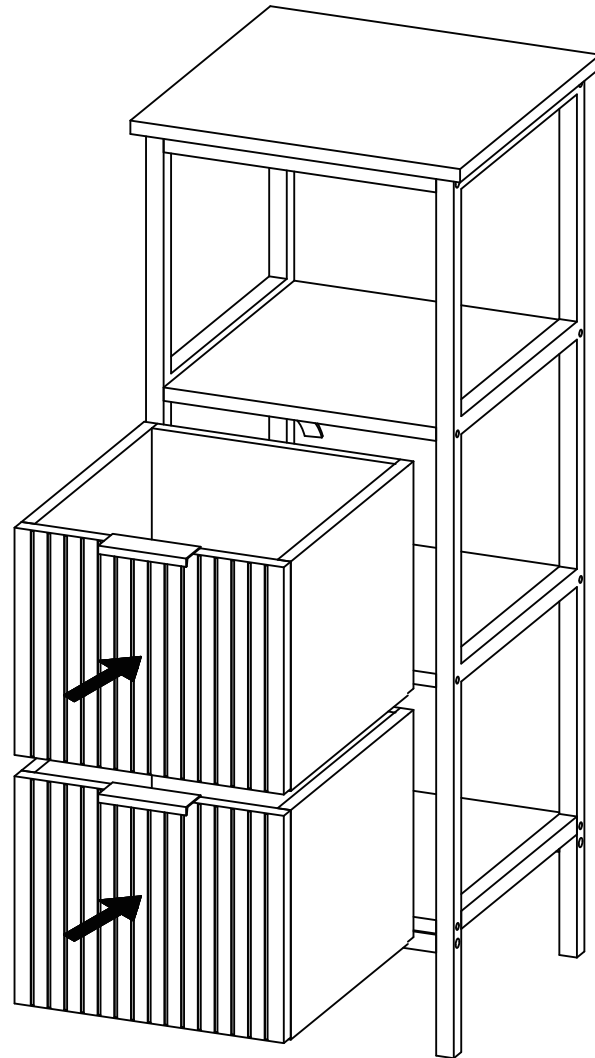 


## STEP 7

  — I×2    — J×2    — K×2

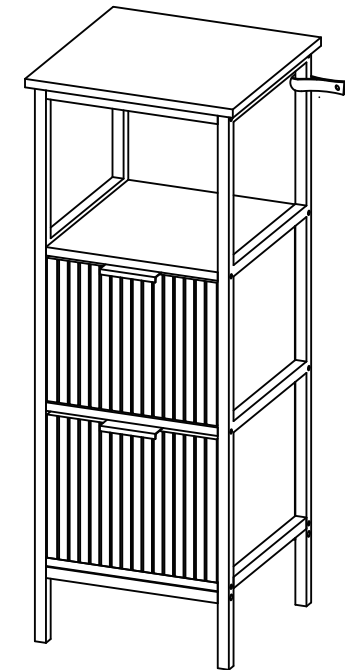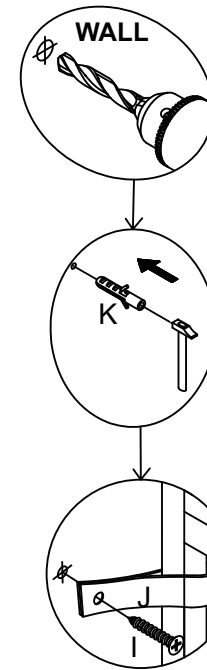

### ⚠ WARNING

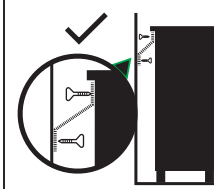 

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



TOPPLING HAZARD

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

