 



# Wooden Cubby Instruction Manual

2+  
years


## Parts List

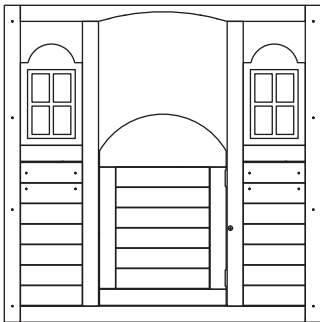

 
A. Front Panel  
x 1pc

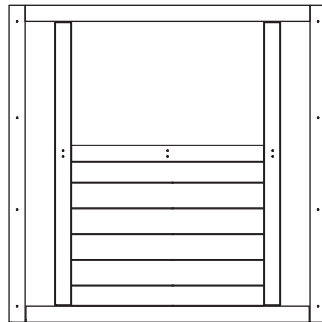

 
B. Back Panel  
x 1pc

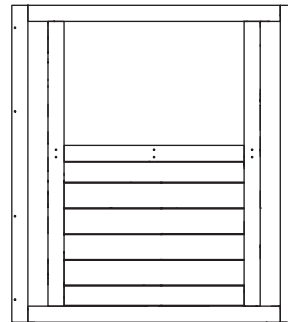

 C. Side Panel  
x 2pcs

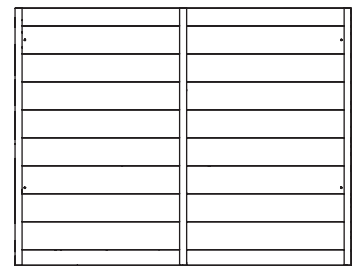

 
D. Roof Panel  
x 2pcs

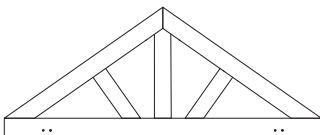

E. Top Gable  
x 2pcs



 F. Corner Strip  
x 4pcs

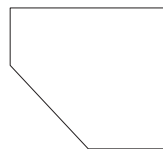


G. Shelf Support  
x 9pcs




H1. Wider Top Strip  
x 1pc



 H2. Narrower Top Strip  
x 1pc




I1. Back Shelf  
x 1pc

 


I2. Side Shelf  
x 2pcs



 J. Metal Plate  
x 4pcs

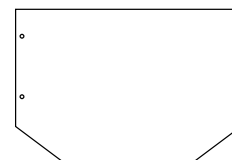

K1. Front Panel of Tray  
x 2pcs

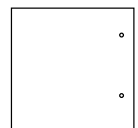 

K2. Side Panel of Tray  
x 4pcs



K3. Bottom Panel of Tray  
x 2pcs



L1. Self Tapping Screw-ST4x30  
x 89pcs




L2. Self Tapping Screw-ST3x20  
x 14pcs



L3. Self Tapping Screw-ST3.5x13  
x 16pcs

## Safe Play Area


 
The safe play area refers to the zone extending 2m around the toys on all sides and 2.5m above the toy. The safe play area must be free from all obstacles.

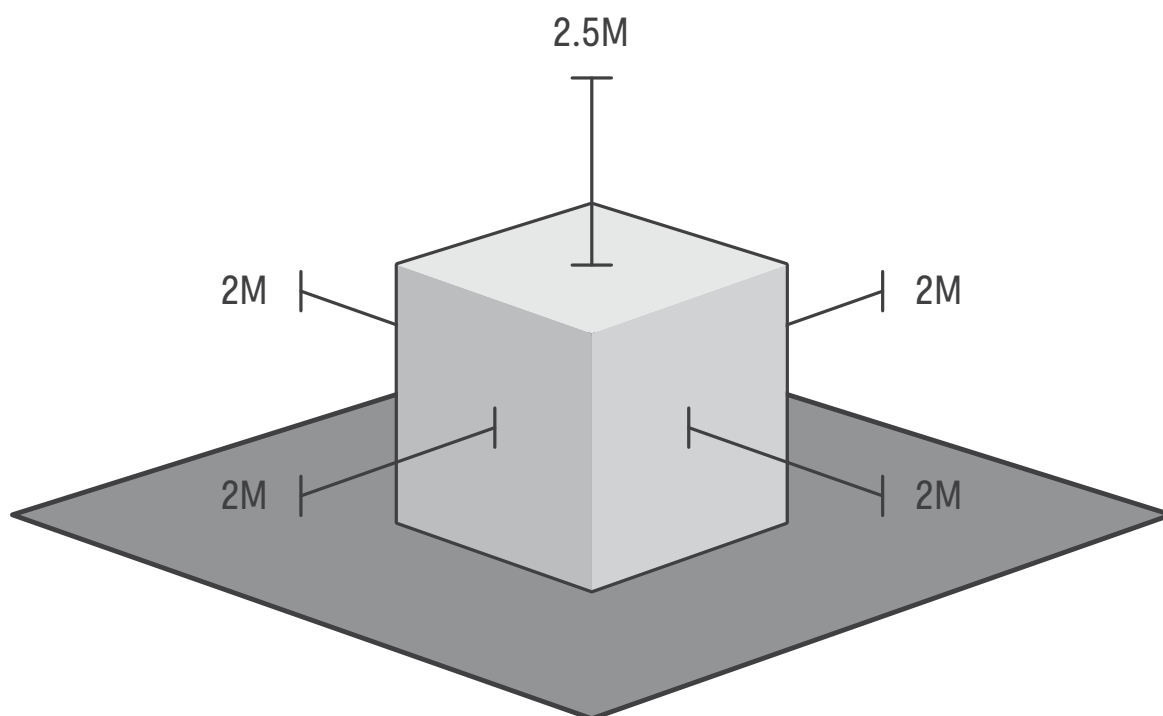

## Wood Treatment

**Wood treatment not supplied.**

  
**Important Warning!** - It is essential that this product has an application of a suitable child/environmentally friendly wood treatment before being assembled. Treat all panels - on all sides.

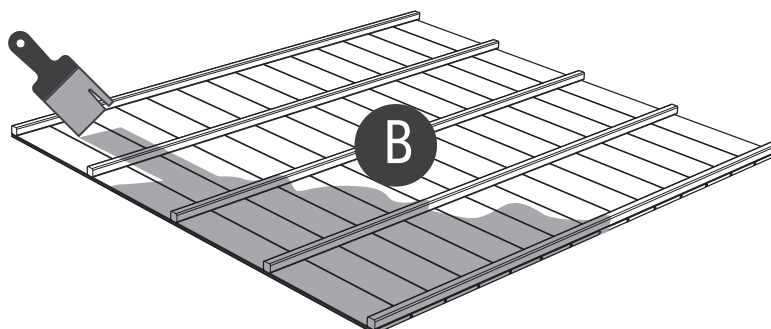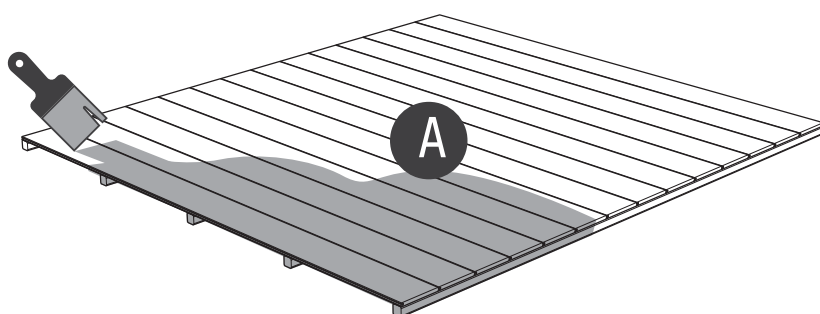

## Assembly Instruction


### Step 1:

 Connect the side panels(Part C) and the corner strips(Part F) together, secure them with 16pcs self-tapping screws(Part L1) by screw-driver(not included). Please refer to right image to assemble each part in their position.

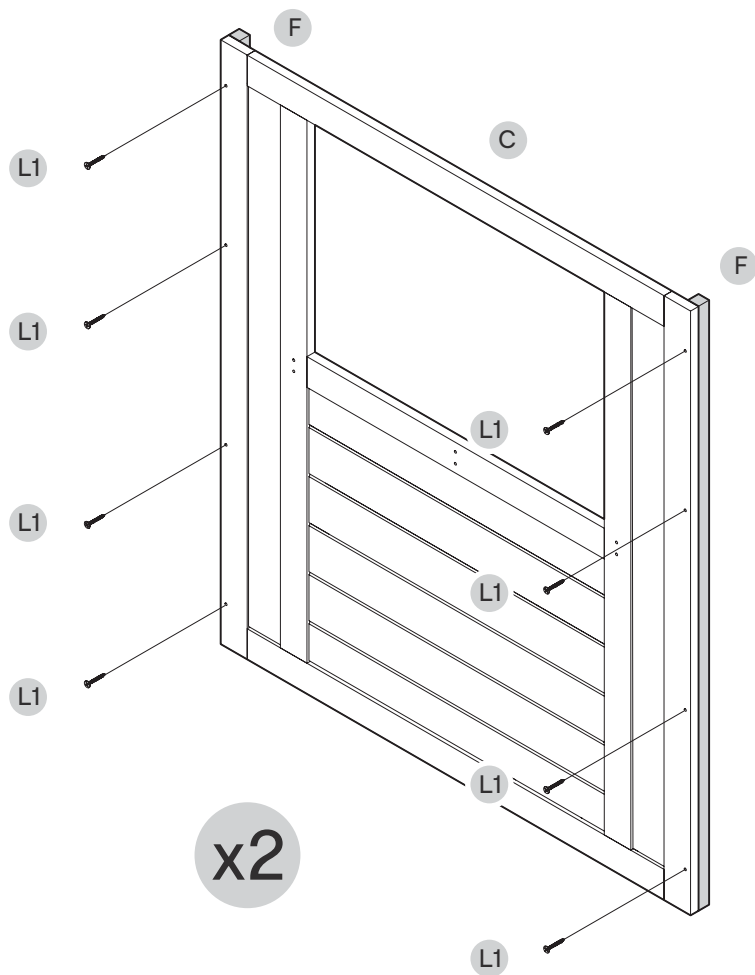


### Step 2:

 Connect the front panel(Part A) and the corner strips(Part F) together, secure them with 8pcs self-tapping screws(Part L1) by screwdriver(not included). Please refer to right image to assemble each part in their position.

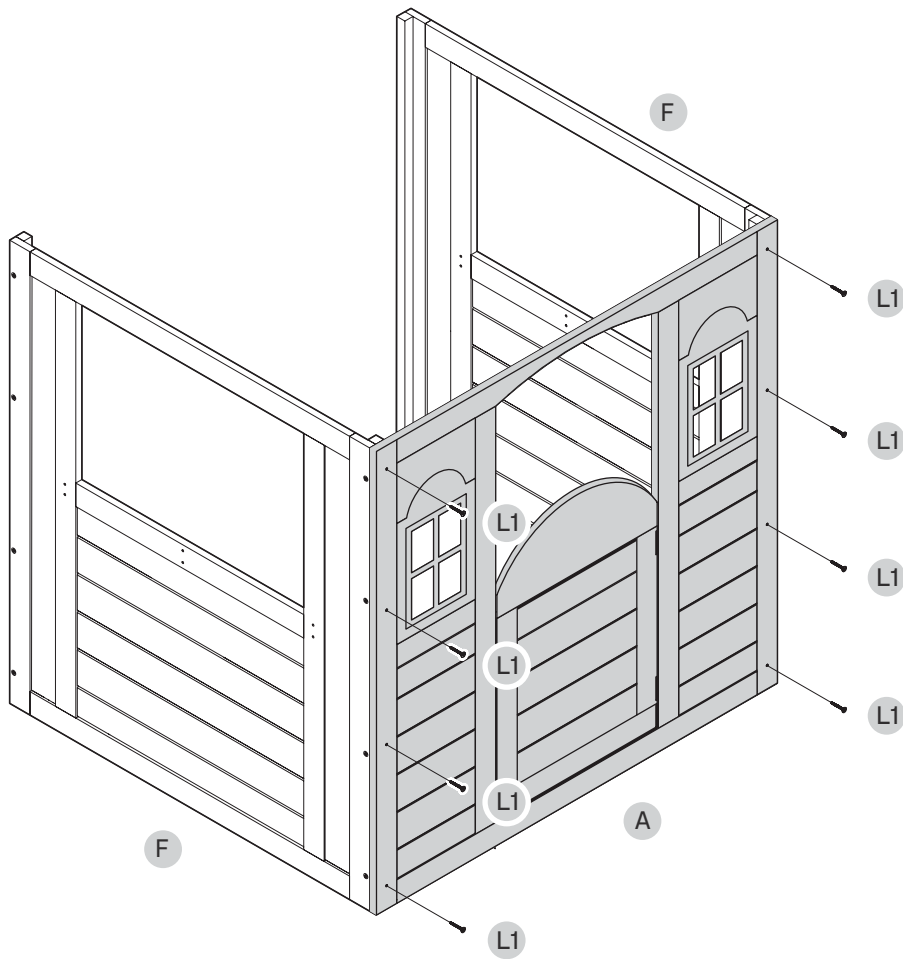


**Step 3:**

 Connect the back panel(Part B) and the corner strips(Part F) together, secure them with 8pcs self-tapping screws(Part L1) by screwdriver(not included). Please refer to right image to assemble each part in their position.

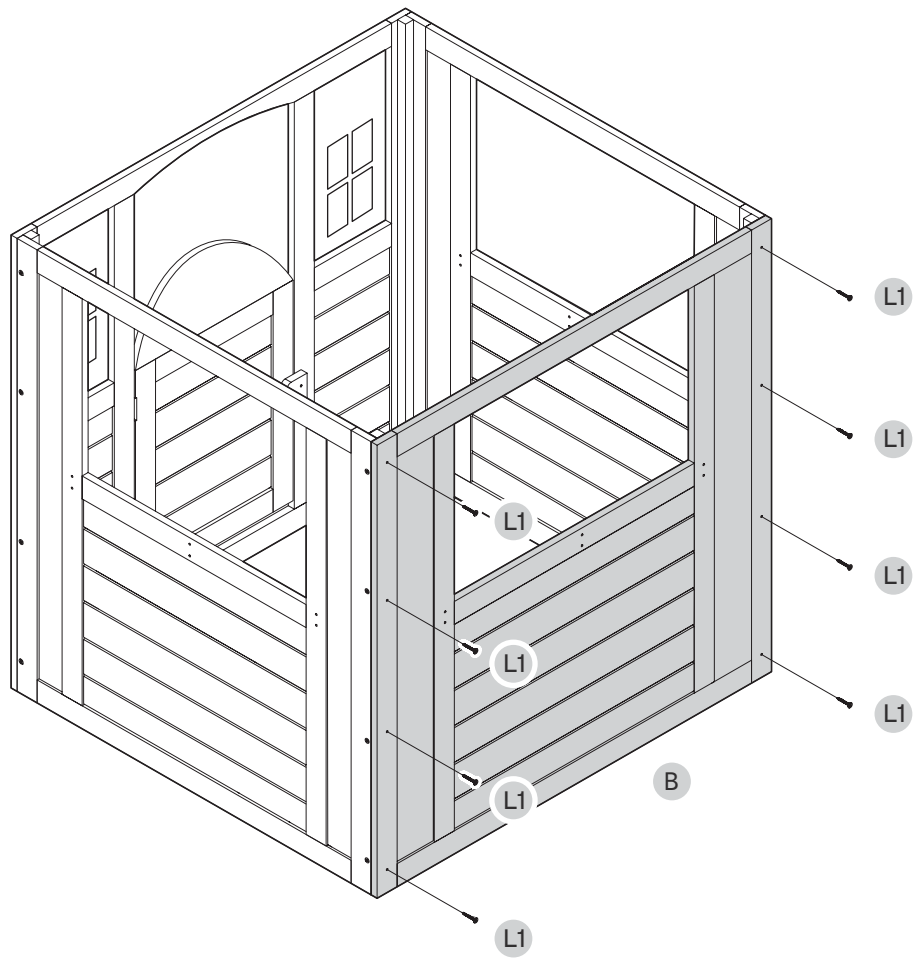


**Step 4:**

 Put the top gable(Part E) on the top surface of the back panel(Part B), then connect them by 2pcs metal plates(Part J), and secure them with 8pcs self-tapping screws(Part L3). Please refer to right image to assemble each part in their position.

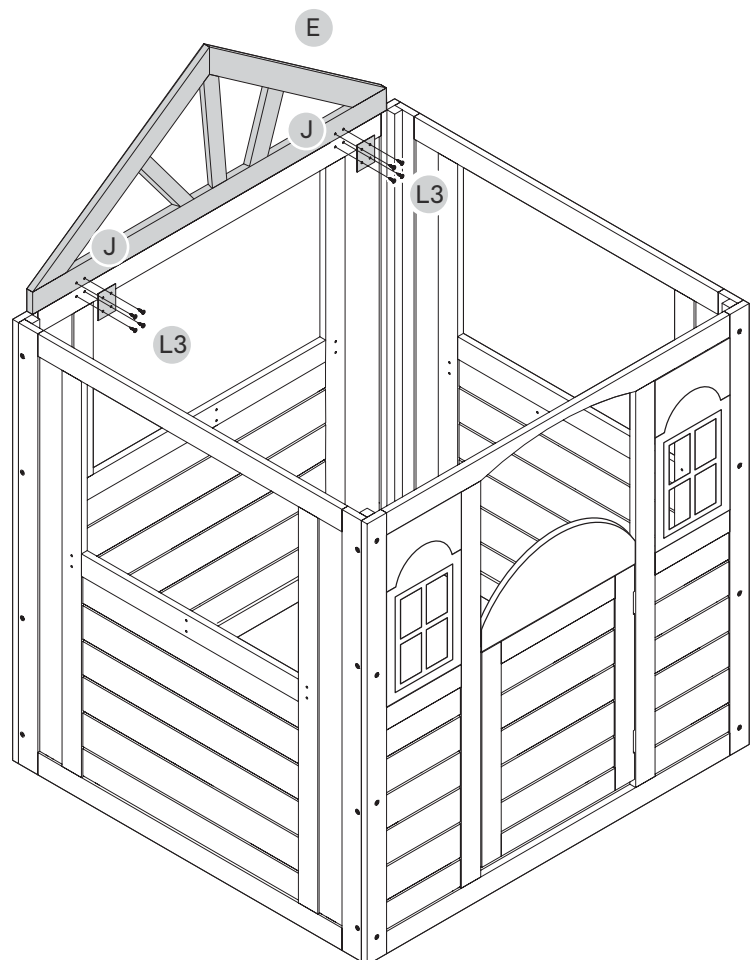


**Step 5:**

 Put the top gable(Part E) on the top surface of the front panel(Part A), then connect them by 2pcs metal plates(Part J), and secure them with 8pcs self-tapping screws(Part L3). Please refer to right image to assemble each part in their position.

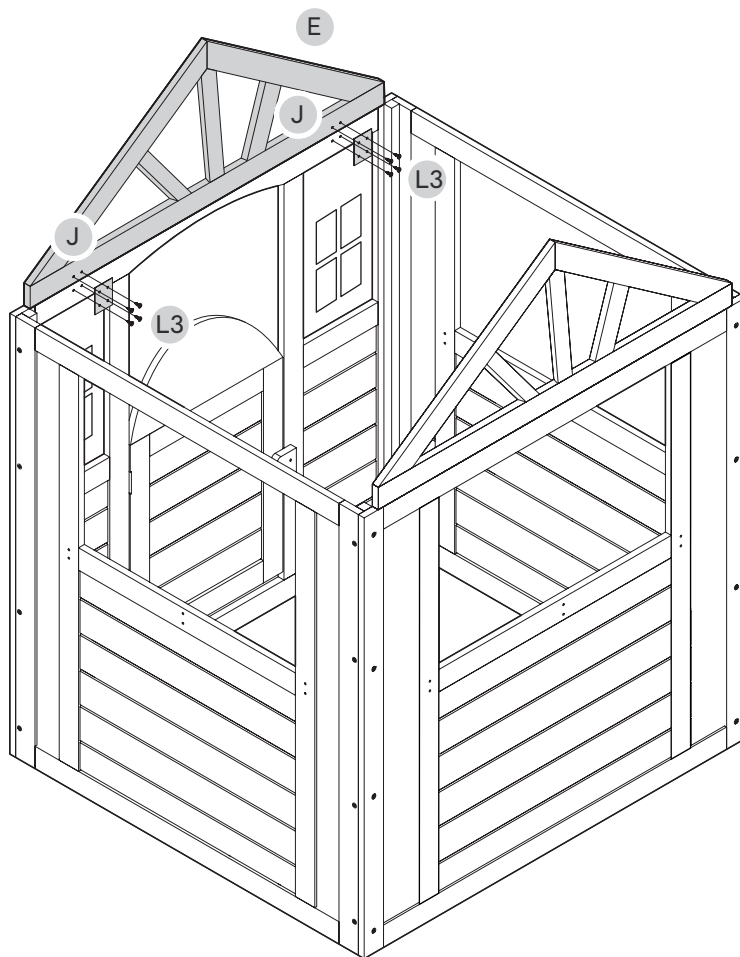


**Step 6:**

 
Connect the roof panel(Part D) and the top gables(Part E) on the left side together, secure them with 4pcs self-tapping screws(Part L2). Please refer to right image to assemble each part in their position.

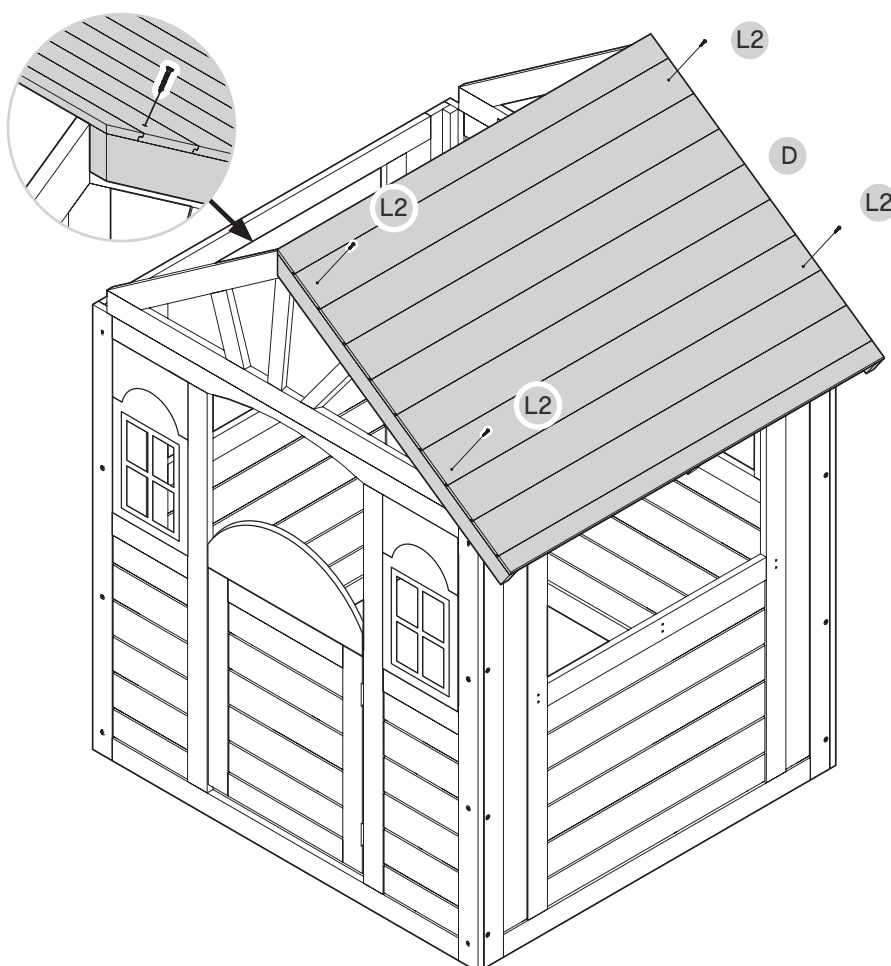

 Step 7:  
Connect the roof panel(Part D) and the top gables(Part E) on the right side together, secure them with 4pcs self-tapping screws(Part L2). Please refer to right image to assemble each part in their position.

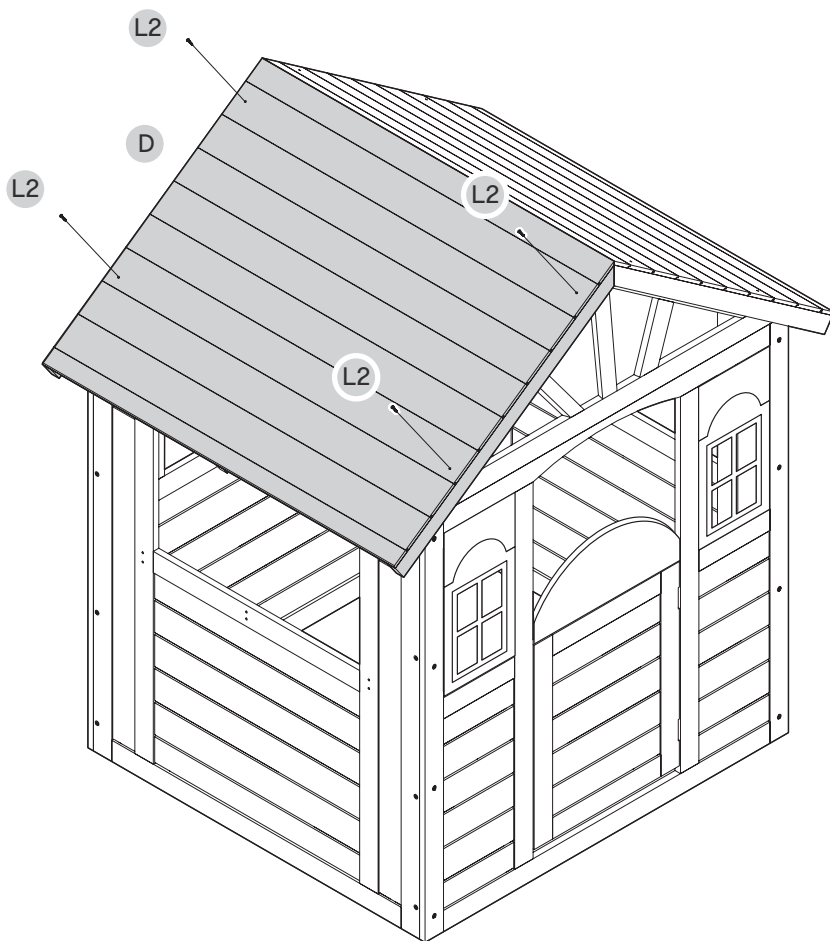


 Step 8:  
Put the wider top strip(Part H1)/the narrower top strip(Part H2) on the joint of the roof panels(Part D), secure them with 6pcs self-tapping screws(Part L2). Please refer to right image to assemble each part in their position.

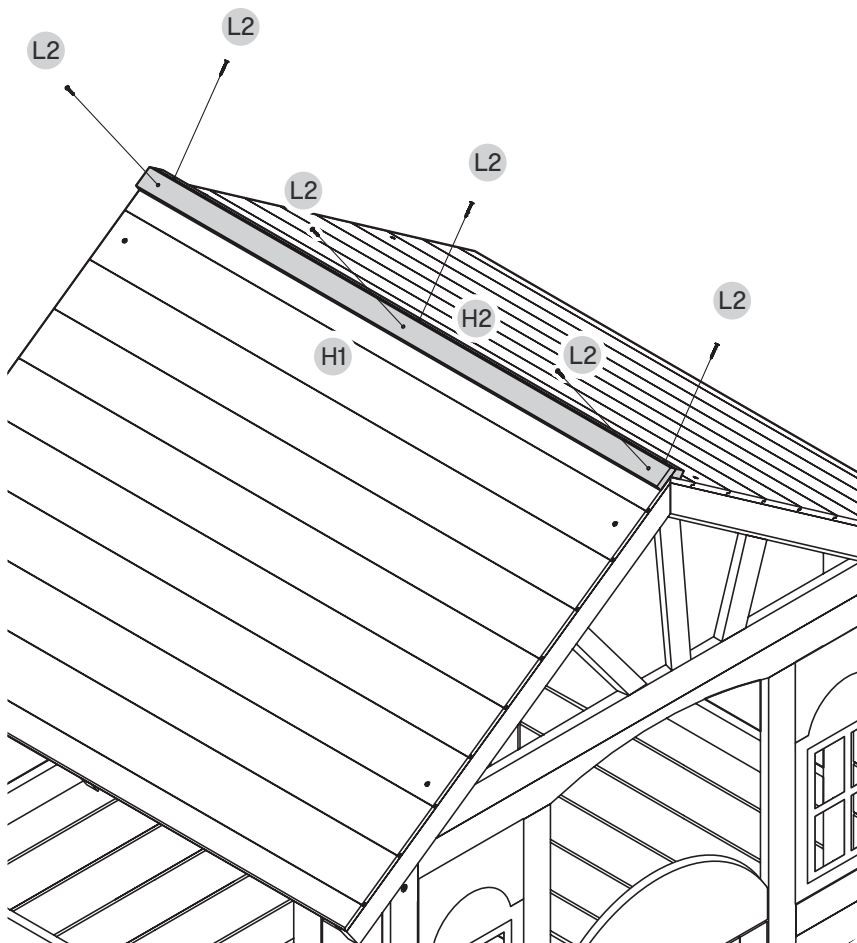


**Step 9-1:**

 Connect 4pcs side panels of tray(Part K2) and the front panel(Part A) together, secure them with 8pcs self-tapping screws(Part L1). Please refer to right image to assemble each part in their position.

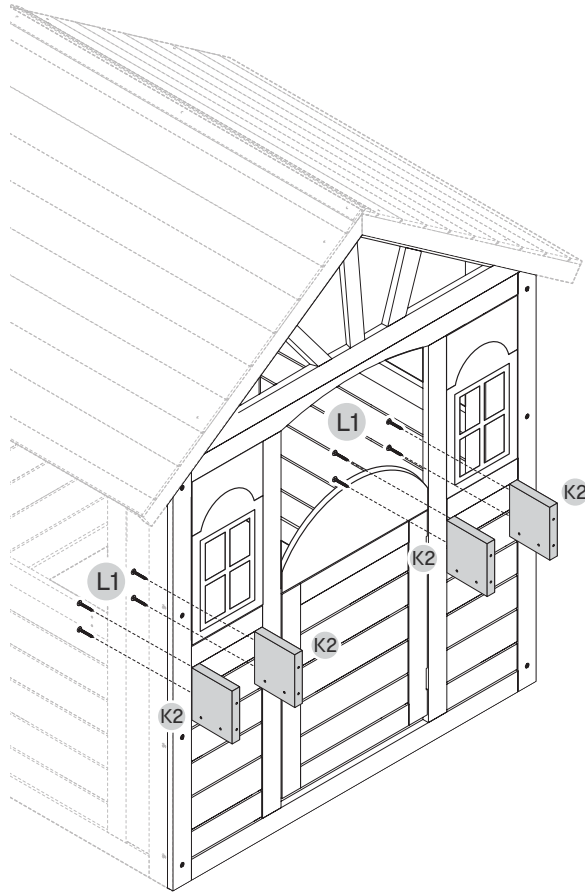


**Step 9-2:**

 Connect 4pcs side panels of tray(Part K2) and 2pcs bottom panels of tray(Part K3) together, secure them with 8pcs self-tapping screws(Part L1). Please refer to right image to assemble each part in their position.

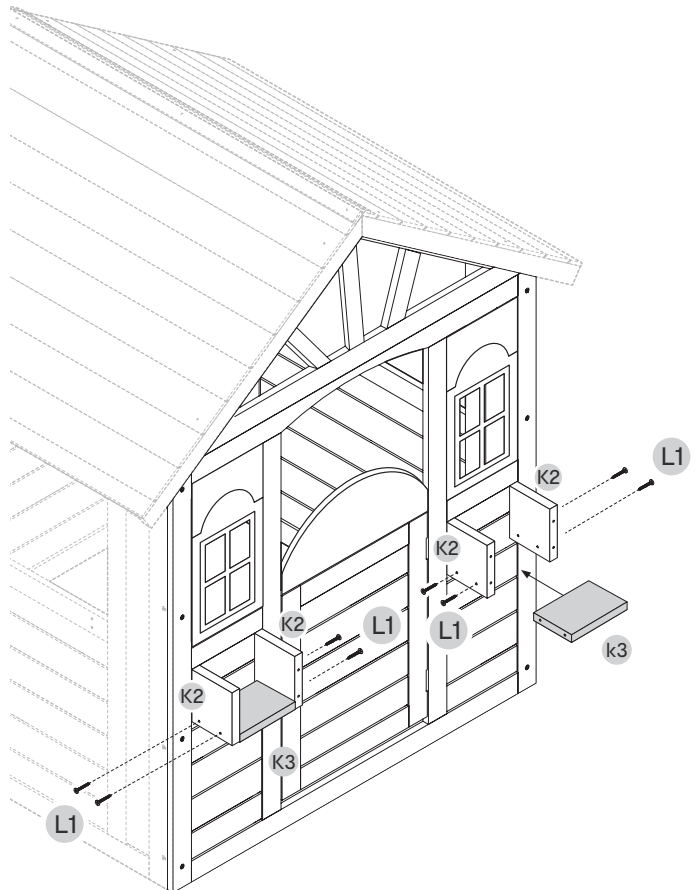


**Step 9-3:**

 Connect 4pcs side panels of tray(Part K2) and 2pcs front panels of tray(Part K1) together, secure them with 8pcs self-tapping screws(Part L1). Please refer to right image to assemble each part in their position.

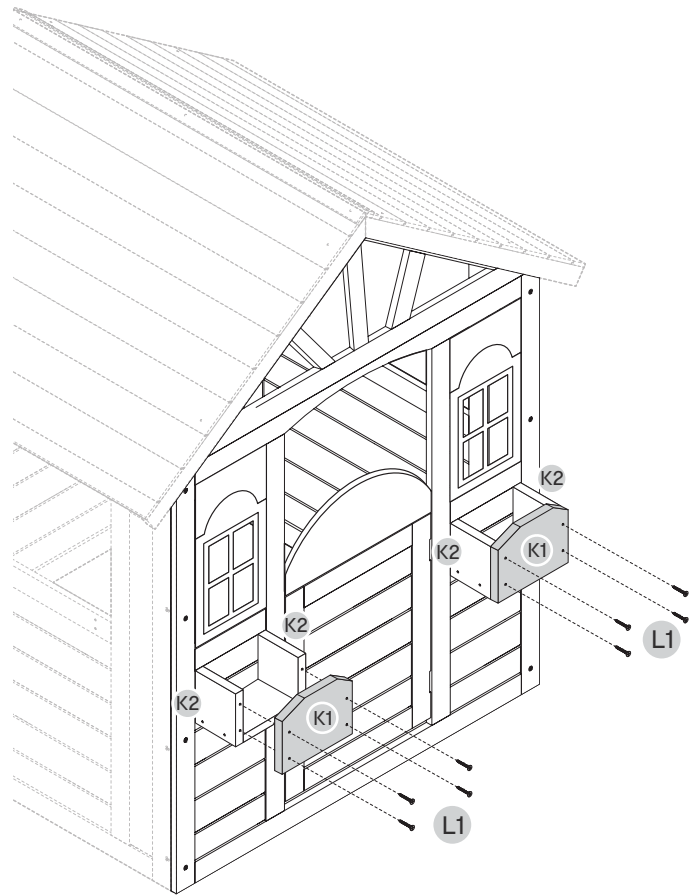

**Step 10-1:**

 
Connect 6pcs shelf supports(Part G) and the back panel(Part B)/the side panel(Part C) together, secure them with 12pcs self-tapping screws(Part L1). Please refer to right image to assemble each part in their position.

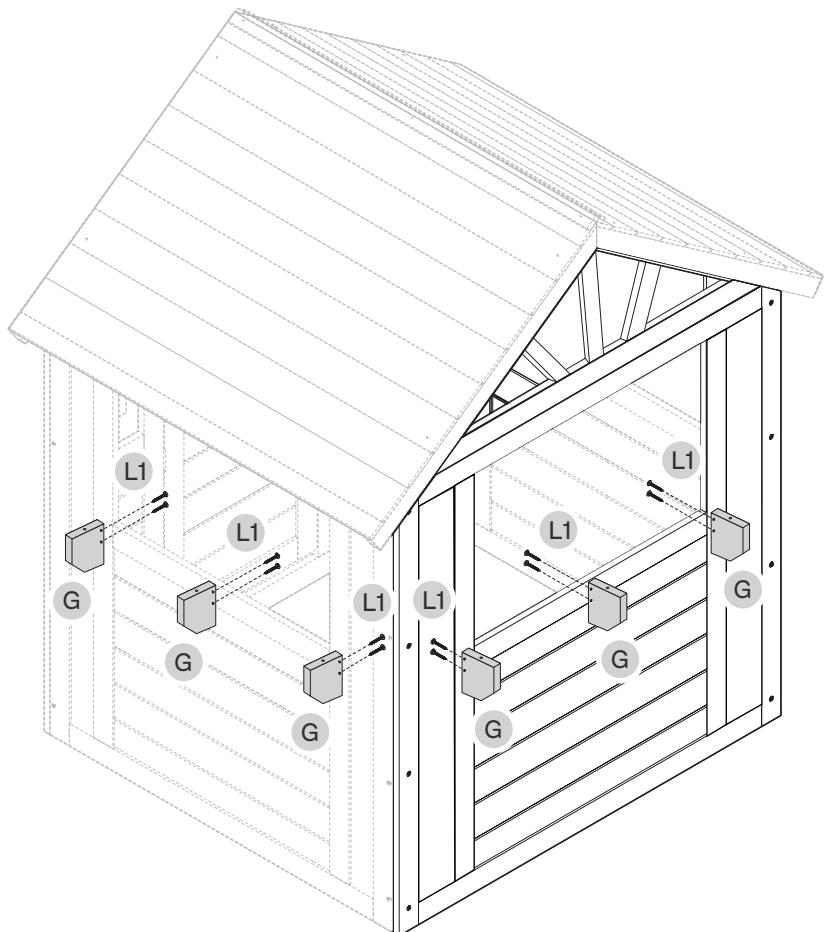




**Step 10-2:**

 Connect 3pcs shelf supports(Part G) and the other side panel(Part C) together, secure them with 6pcs self-tapping screws(Part L1). Please refer to right image to assemble each part in their position.

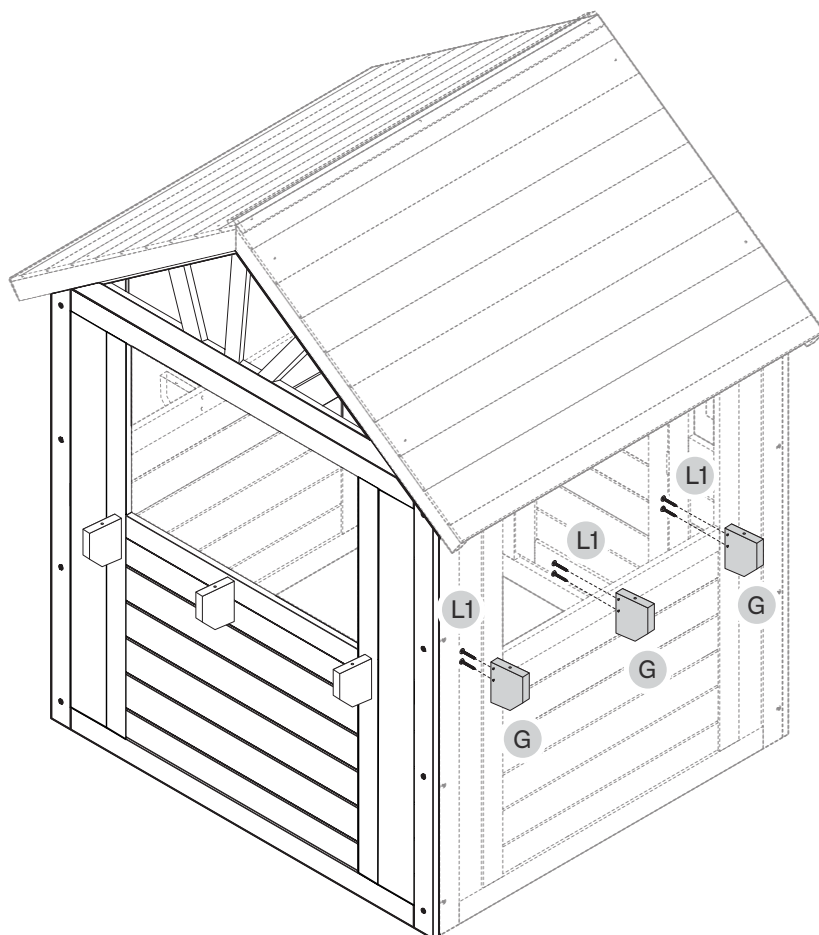


**Step 11-1:**

 Put the back shelf(Part I1)/the side shelf(Part I2) on the shelf supports(Part G), secure them with 10pcs self-tapping screws(Part L1). Please refer to right image to assemble each part in their position.

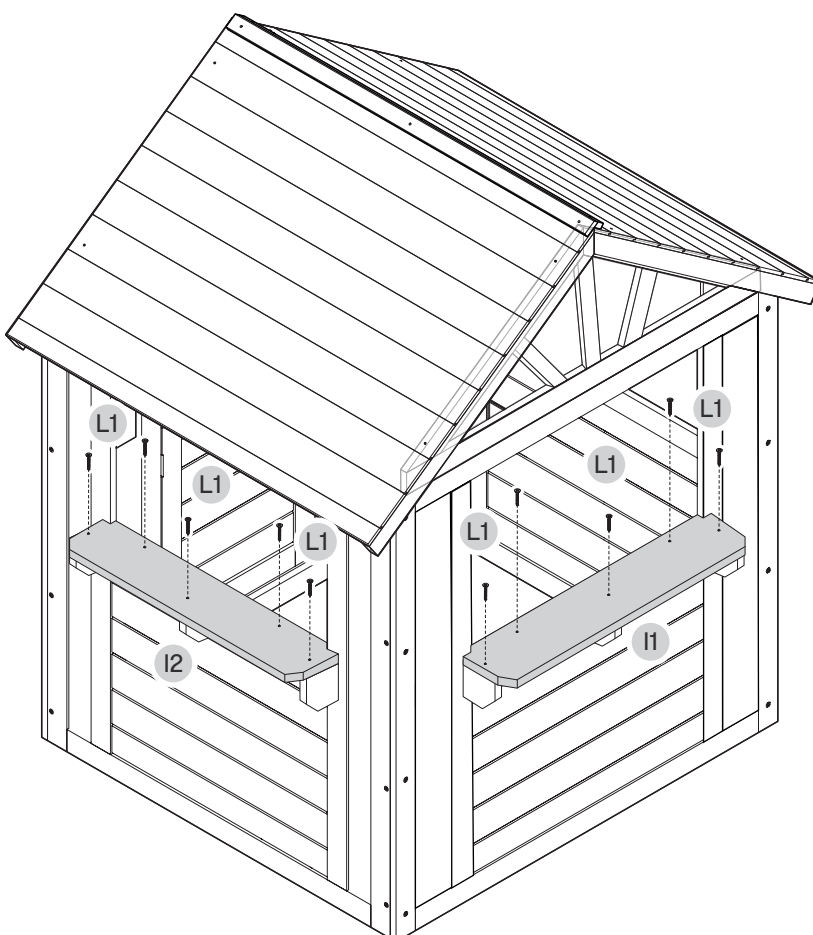


**Step 11-2:**

 Put the other side shelf(Part I2) on the shelf supports(Part G), secure them with 5pcs self-tapping screws(Part L1). Please refer to right image to assemble each part in their position.

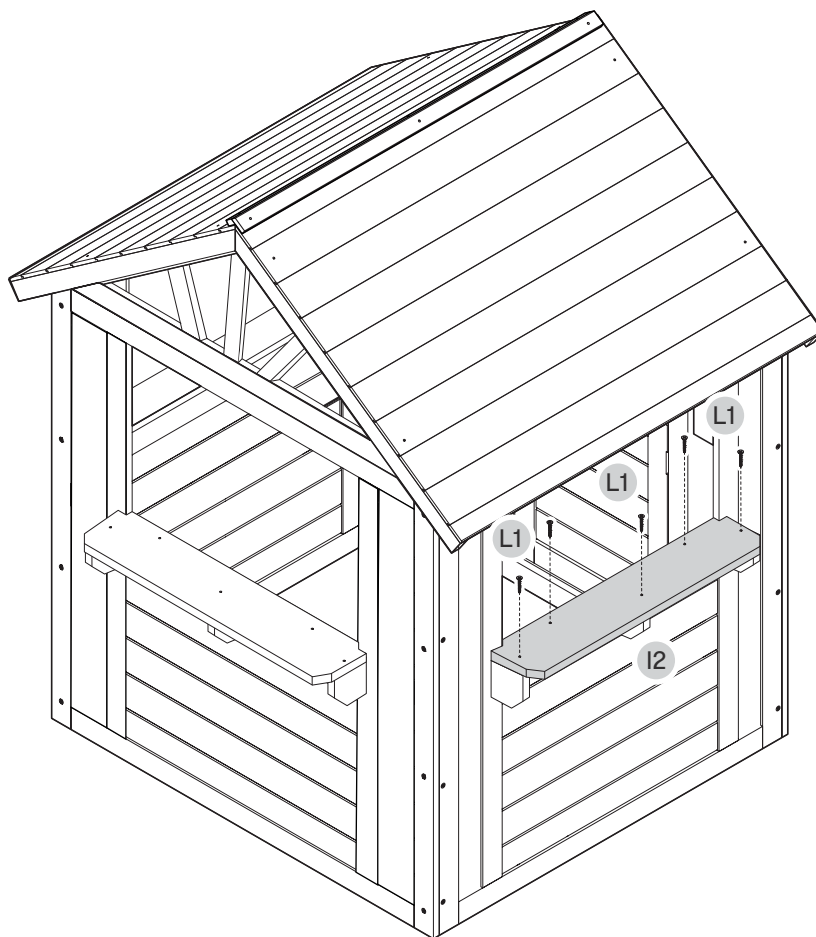

**Step 12:**

 Assembly is completed. Please refer to right image.

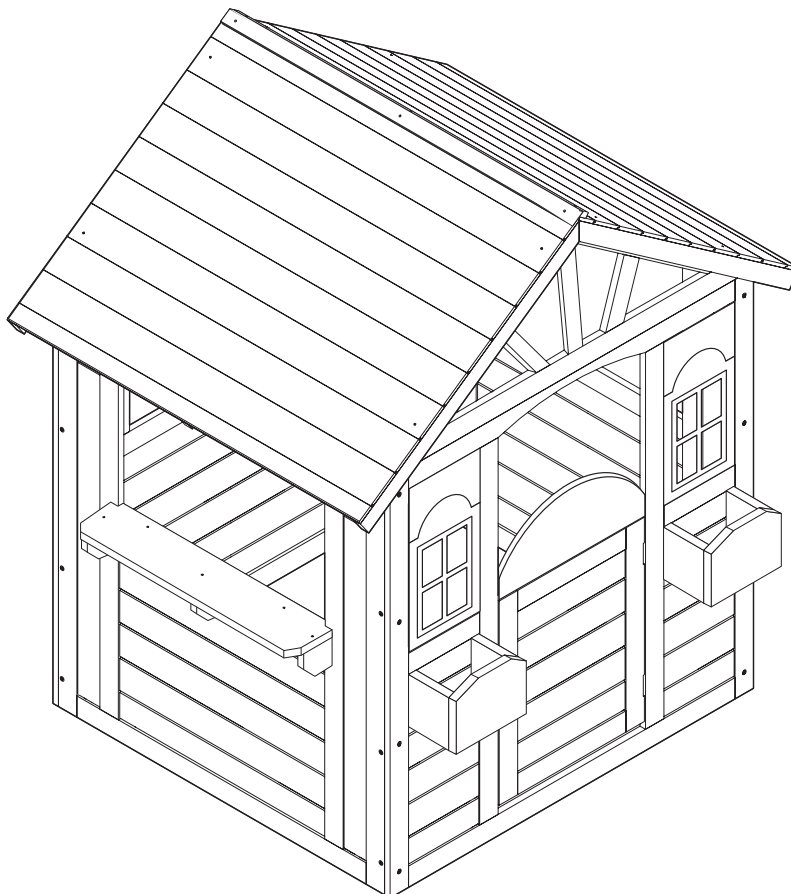

**INSTRUCTIONS FOR ASSEMBLY, MAINTENANCE AND SAFE USE.  
PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.**

1. The cubby house must be assembled by two adults before use exactly in accordance with the instructions.
2. Children must not use this product until properly installed.
3. Check all parts are present before you start to assemble the product. Place small parts on a tray or similar to ensure they are not lost. The manufacturing process can very occasionally result in sharp edges/waste material so please take care when assembling this product.
4. If any parts are missing do not use the product until the replacement parts are fitted.
5. A recommendation to place the activity toy on a level surface at least 1.8m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
6. Ensure your product is located on a soft impact surface like grass. Never locate your product on hard surfaces like concrete.
7. Avoid locating this product in full sun.
8. Remove all packaging before giving to your children.
9. Equipment should be checked by an adult at the beginning of each season and at regular intervals during the usage season to ensure it is safe. Pay special attention to all connections and fastening.
10. Parts may need to be replaced if they show signs of wear and tear. Replace any defective parts in accordance with these instructions.
11. Due to the natural characteristics of timber, it is vital to check your product regularly for splintering, lifting of surface layers of wood or exposure of rough wood. Affected areas must be rubbed down using coarse sandpaper to restore a smooth, safe surface.
12. Any changes to this toy eg changing or adding an accessory, must be done in accordance with our instructions. Failure to do this will render your guarantee null and void and may make your product unsafe.
13. Ensure children's clothing is appropriate for the play activity.
14. Never place toys near a fire.
15. In high winds, ensure outdoor toys are moved to a sheltered position and/or securely staked down.
16. The age recommendation for this product is clearly stated on the packaging and in these instructions. Please adhere to it at all times. Adult supervision is required at all times to ensure children play safely.
17. When you dispose of this equipment please do so responsibly.

## **Warning**

1. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS. IT IS NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS UNTIL FULLY ASSEMBLED.
2. THIS PRODUCT IS INTENDED FOR USE BY CHILDREN AGED 2+ YEARS.
3. ONLY FOR DOMESTIC USE. FOR OUTDOOR USE ONLY.
4. TOY MUST BE ASSEMBLED BY TWO ADULTS BEFORE USE.
5. CHILDREN MUST NOT USE THIS PRODUCT UNTIL PROPERLY INSTALLED.
6. ADULT SUPERVISION REQUIRED.
7. REMOVE ALL PACKAGING BEFORE GIVING TO YOUR CHILDREN.
8. RETAIN PACKAGING FOR FUTURE REFERENCE.
9. PLEASE RETAIN INSTRUCTIONS AS IT CONTAINS IMPORTANT SAFETY INFORMATION.
10. MAXIMUM USERS:2.
11. 30KGS FOR 1 USER, TOTAL WEIGHT 60KGS FOR USERS.
12. DO NOT SIT ON, OR OVERLOAD THE SHELF.

KEYCODE: 43-547-388

**MADE IN VIETNAM**

**CUSTOMER SERVICE:**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567