

Assembly Instructions

K: 43547531 | T: 70978025 LEON 3 TIER SHOE CABINET





 





 
WARNING:

THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES. **C MAX SAFE LOADING: FOR TOP: 10KGS FOR DRAWER: 5 KGS.**
IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.










IT IS RECOMMENDED FOR 2 PEOPLE TO ASSEMBLE/MOVE THIS ITEM TO AVOID ANY POTENTIAL INJURY AND/OR DAMAGE.

CARE INSTRUCTION: WIPE CLEAN WITH A SOFT DRY OR DAMP CLOTH. CHECK AND TIGHTEN ALL PARTS REGULARLY.


1 Hardware List

	a	6x35mm	24pcs		g		3pcs
	b	15x9.5mm	24pcs		h	M4x14mm	24pcs
	c	6x30mm	6pcs		i		6pcs
	d	M4x20mm	6pcs		k	M4x25mm	18pcs
	e		6pcs		l	Ø6x30mm Ø4x50mm	2pcs
	f		3pcs				

         2

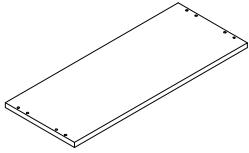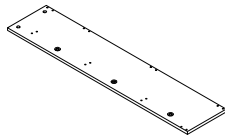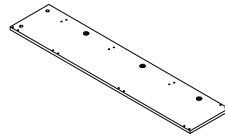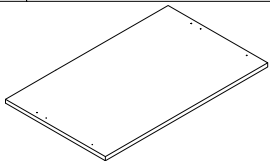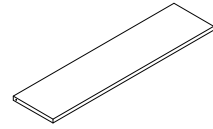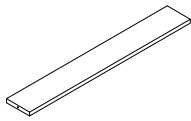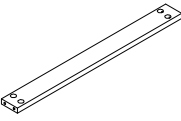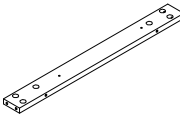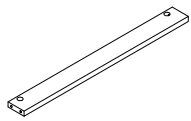
		
① 1PC	② 1PC	③ 1PC
		
④ 3PCS	⑤ 6PCS	⑥ 3PCS
		
⑦ 3PCS	⑧ 1PC	⑨ 1PC

 3

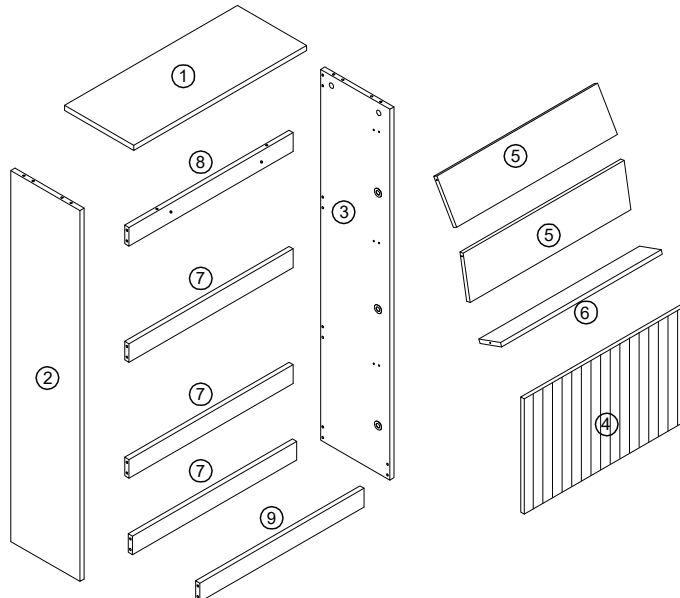


Tool Recommended:
Philips Head Screwdriver
(Not Included)

 Step 1

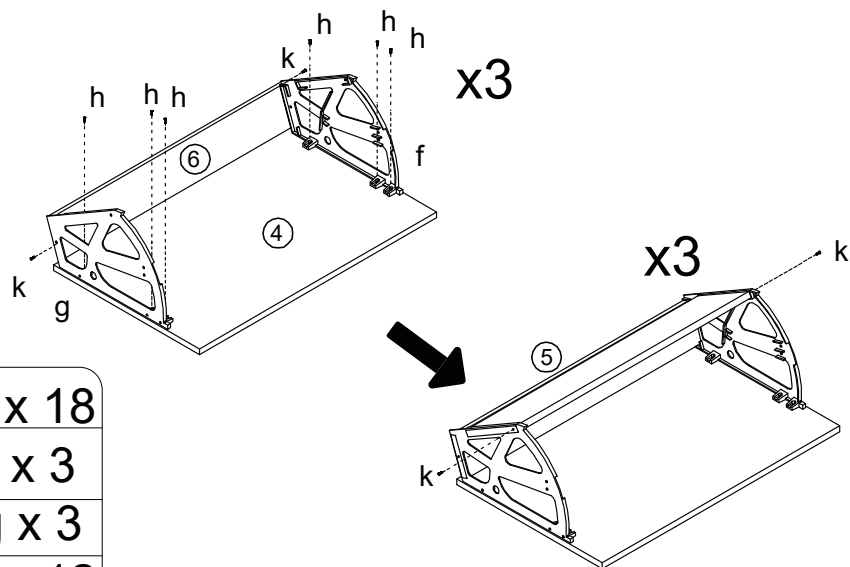

	h x 18
	f x 3
	g x 3
	k x 12

 Step 2

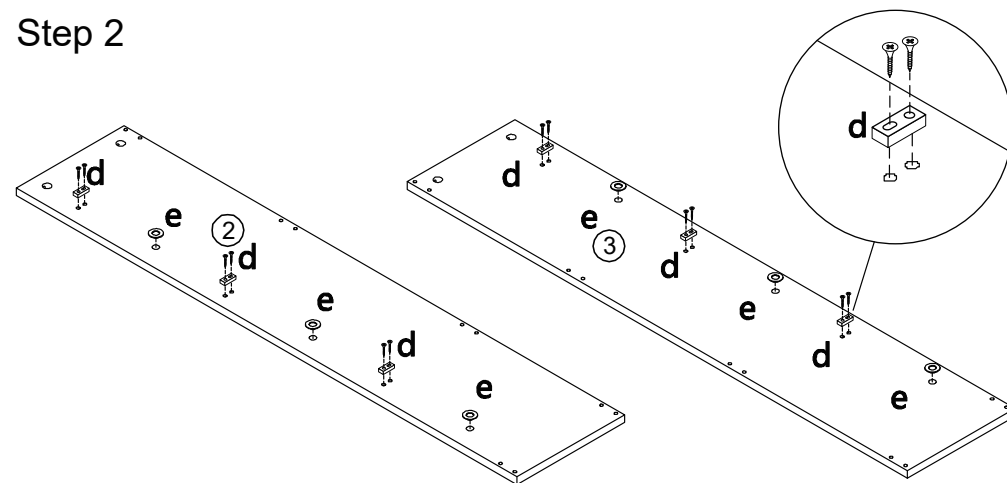


	d x 6
	e x 6




HAMMER REQUIRED
(NOT PROVIDED)

 Step 3

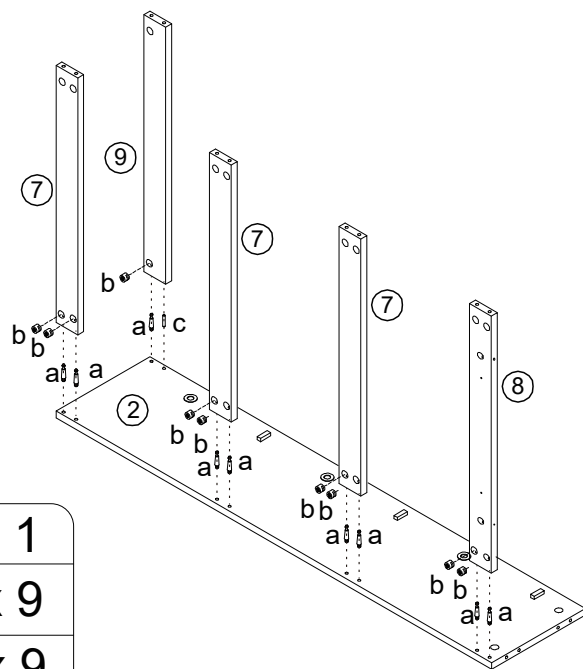


	c x 1
	a x 9
	b x 9

 Step 4

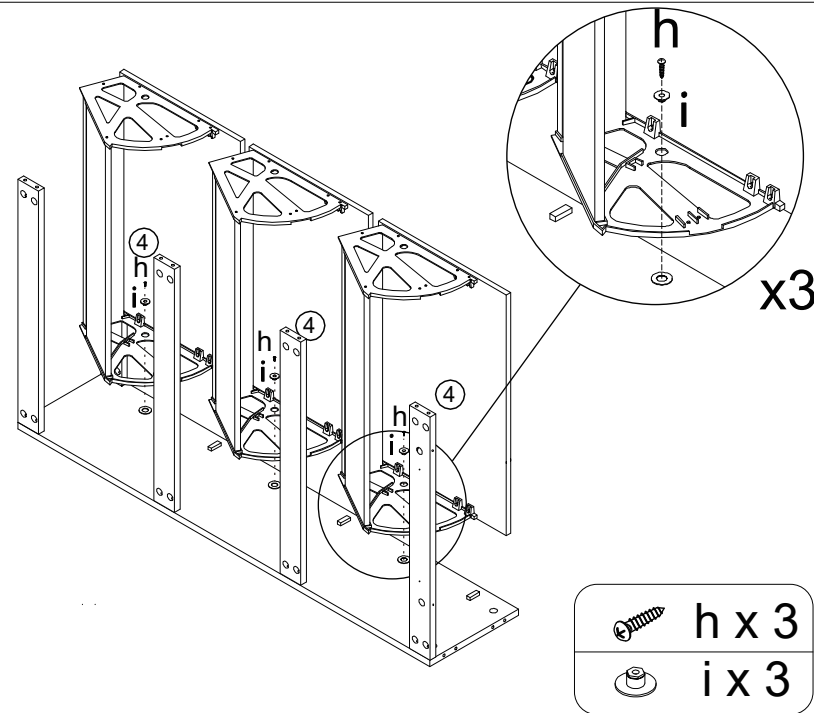


	h x 3
	i x 3

 Step 5

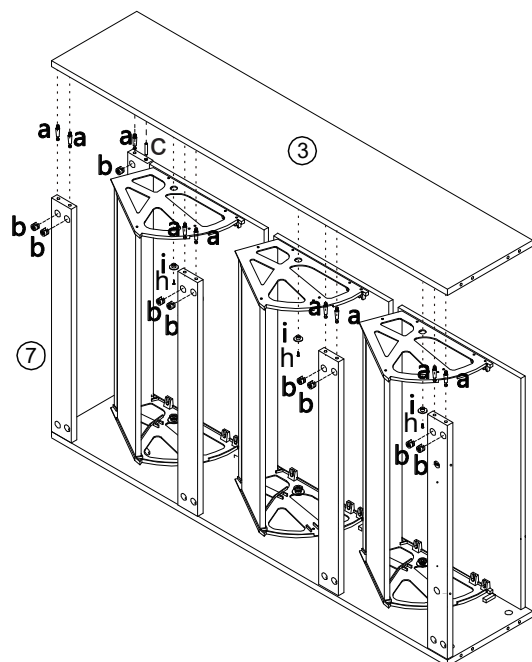


	h x 3
	i x 3
	c x 1
	a x 9
	b x 9

 Step 6

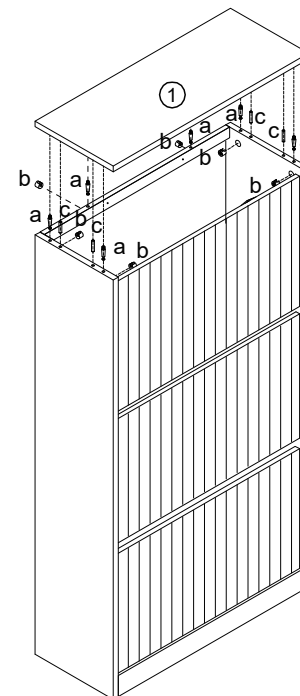

	a x 6
	b x 6
	c x 4

 WARNING

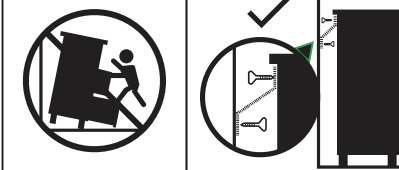

Children have died from furniture tipover.

 
- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

Step 7

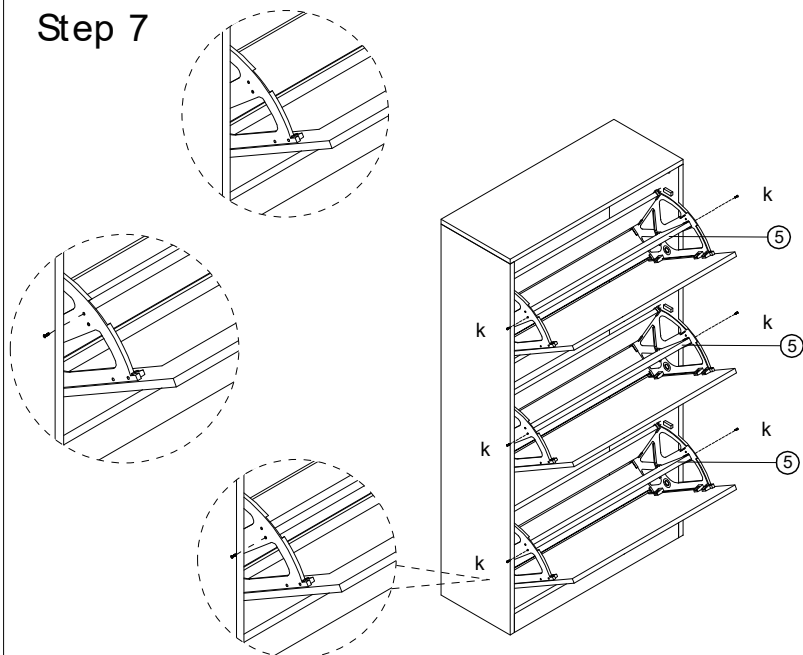


NOTE: Board ⑤ is adjustable or removable to fit different shoes sizes.

	k x 6
--	-------

Step 8

 FIX ON WALL

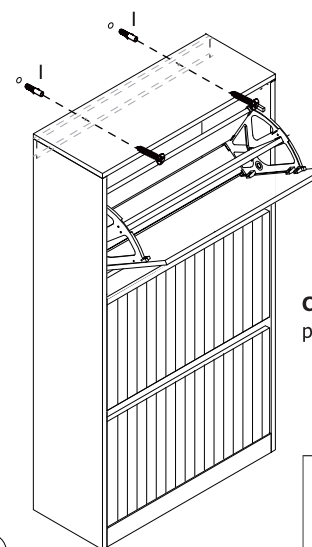

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).

HAMMER REQUIRED
(NOT PROVIDED)

	l x 2
--	-------



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

