



**5 Station Buffet  
XY1451A  
User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFEGUARDS


**When using any electrical product, always follow these basic safety precautions:**



### **READ ALL INSTRUCTIONS BEFORE USE.**


Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against risk of electrical hazards, do not immerse the main unit, power cord or plug in water or any other liquid.
- For electrical safety, if the supply cord or the main unit is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.
- Use of accessories not provided by manufacturer may cause injury.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if damaged or malfunctions.
- Do not touch hot surfaces. Only use the handle.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**

- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside cabinet or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Dishes placed in the buffet server must be thoroughly cooked first. Do not place raw dishes in the buffet server.
- The temperature of accessible surfaces may be high when the appliance is operating.
-  **Caution, hot surface. Care must be taken. The accessible surfaces (metal holder for container, front metal enclosure and rear metal enclosure) will get hot during and immediately after use.**
- Never put food directly on Warming tray without any vessel / container.
- For cleaning cooking surface, please refer to section “Cleaning and Maintenance”.

**SAVE THESE INSTRUCTIONS  
FOR FUTURE REFERENCE**

## KNOW YOUR 5 STATION BUFFET

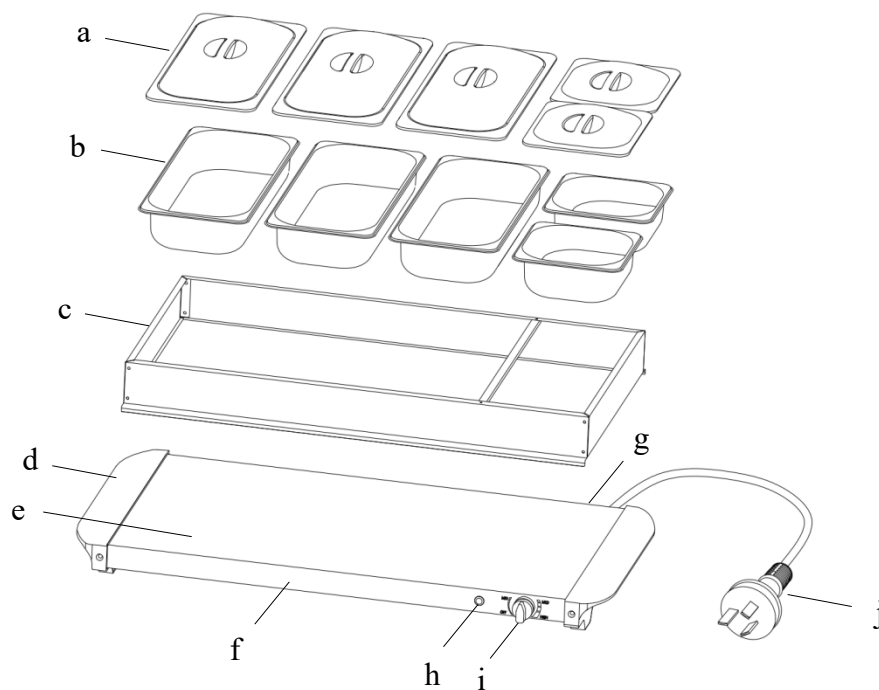

- a Lids (3 large, 2 small)
- b Warming containers (3 large, 2 small)
- c Metal holder for container
- d Handle
- e Warming tray

- f Front metal enclosure
- g Rear metal enclosure
- h Heating indicator
- i Temperature control knob
- j Power plug and cord

### BEFORE FIRST USE

**IMPORTANT!** Always place and operate the appliance on a flat, solid, clean, dry and heat-resistant surface.

**IMPORTANT!** Place the appliance on a heat resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.

- Unpack the appliance and check to ensure no parts are missing and the appliance is undamaged.
- Clean the inside and outside of the appliance with a damp cloth or sponge. Wipe dry with a soft dry cloth.

**WARNING!** Do not immerse the main unit in water or any other liquid to clean.

- Place the appliance on a flat, heat-resistant stable surface and ensure a minimum of 10cm free space around the appliance. Do not operate your appliance inside a cabinet or directly under a wall cabinet.


## HOW TO USE YOUR 5 STATION BUFFET

- Plug the appliance into an electrical power outlet.

Note: Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. Rated voltage: 220-240V~ 50-60Hz.

- Rotate the temperature control knob to “HIGH” position. The red heating indicator light will light up indicating that the appliance is now heating up.
- Place food in the warming containers and put on the lid. The red heating indicator will switch off and the appliance will stop heating when the appliance reaches the desired temperature. The appliance will heat in cycles to keep the desired temperature. The red indicator light will switch ON and OFF maintaining the set heat temperature, this is normal.

- WARNING! Do not put the lid directly on the warming tray.**
  - CAUTION! Hot surface. Care must be taken. The surfaces will get hot during use. Always use handles on the product and oven mitts.**
  - Note: If you need to put vessels of food directly on the warming tray, make sure that the vessels used are with good thermal conductivity and high temperature resistance.**
- Adjust the temperature control knob to your desired temperature between “MIN”; “MED” and “HIGH” setting.

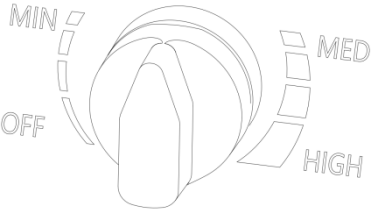	Temperature setting	Warming container temperature; without food (Approx. °C)
	MIN	40°C
	MED	95°C
	HIGH	120°C

- Rotate the temperature control knob to OFF position after using the appliance.

Note: It is recommended to keep food in the buffet warmer no longer than 3 hours.

- Disconnect the power plug from the mains power outlet socket.
- Remove the left food and clean the appliance after usage.

**WARNING! Allow the appliance to cool down before removing the warming container or container frame.**

## CLEANING AND MAINTENANCE

This appliance should be cleaned after each use.

**CAUTION: Do not immerse the main unit in water or any other liquid or in a dishwasher!**

- Always unplug the appliance from the mains power outlet socket before cleaning or during maintenance.
- Ensure that the appliance has completely cooled down before cleaning, as it gets very hot during use.
- Clean the main unit and container frame with a damp cloth.
- For electrical safety, Do Not wash the main unit and frame in water or any other liquid.
- Do not use anything abrasive that can scratch or damage the appliance
- Clean the warming containers and lids with soapy water or wash in a dishwasher.
- Dry all parts of the appliance thoroughly and reassemble the appliance.
- Store the appliance in a clean dry location and out of the reach of children.

## TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 400W

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>