

4+
YEARS


Neon ARCADE ICE HOCKEY



SET UP:



INSTALLING BATTERIES:

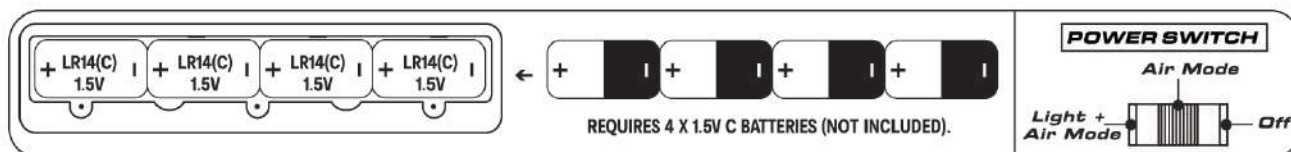

HOW TO PLAY / GAME RULES:

1. Before starting, turn on the fan switch at the bottom.
2. Pick up the first Hockey Puck, place it in your area, and try to score it into the opponent's goal with the paddle.
3. Do not touch the puck with any part of your body; otherwise, it's a foul, and the opponent gets possession.
4. Do not cross the middle line to touch the puck; otherwise, it's a foul, and the opponent gets possession.
5. Scoring a goal by pushing the puck into the opponent's goal earns 1 point.
6. The first player to accumulate 9 points wins the game.
7. After each game, players change sides of the hockey table.
8. When the game ends, turn off the fan.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.



ADULT ASSEMBLY REQUIRED.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.