 



6+
YEARS

Neon ARCADE PINBALL

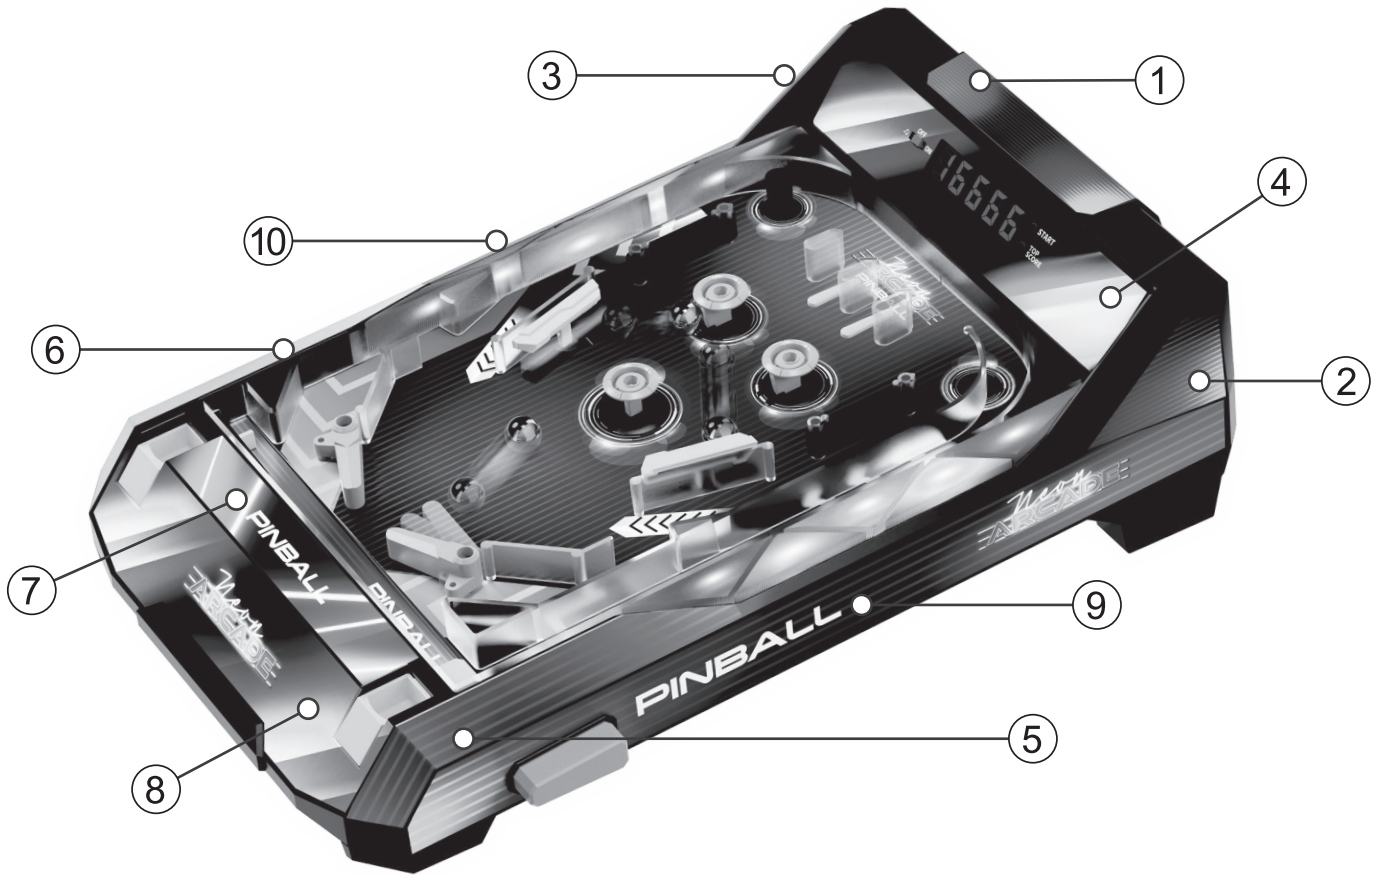


CONTENTS

 1 X Pinball machine, 4 Table feet,
1 X Sticker sheet

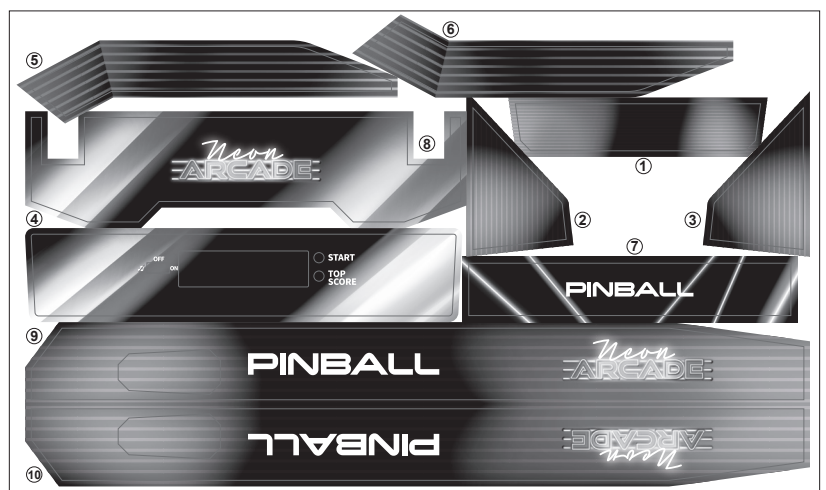


INSTALLING BATTERIES

 - 1 - Open the battery compartment.
- 2 - Insert 4 x 1.5V AA batteries with the correct + and - polarities.
- 3 - Close the cover.

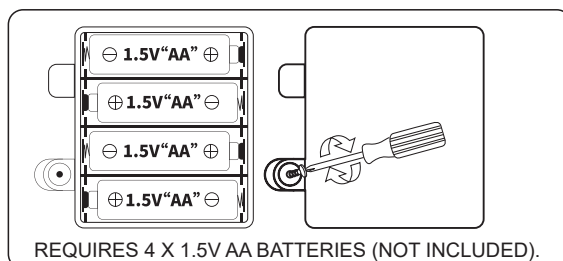

SET UP

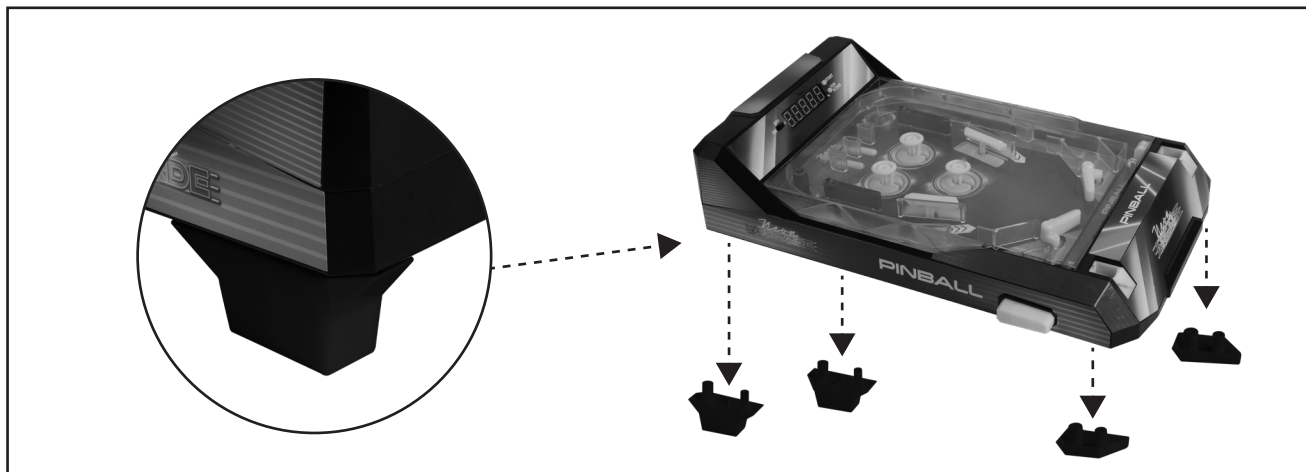 

Attach the two taller feet to the back and the two shorter feet to the front underside of the pinball machine.

HOW TO PLAY



Power - On

After power - on, the scoreboard displays the highest score recorded on the pinball machine. All lights flash and then remain lit, and it enters standby.

Game Start

If the ball is in the storage compartment (see Diagram 1), release it by pulling the left trigger backward and it will roll to the right trigger.



Diagram 1



Diagram 2

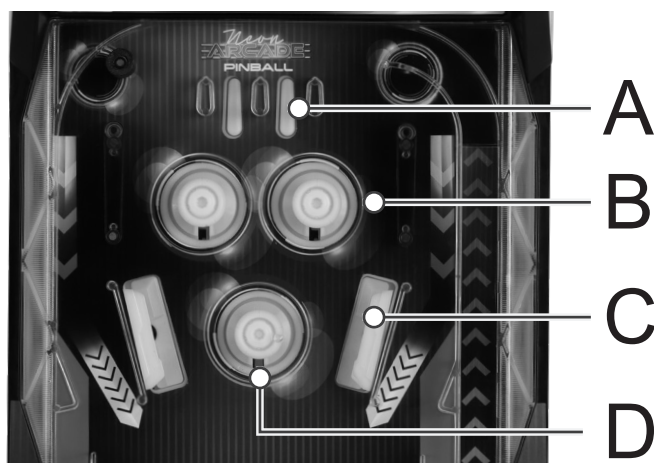 


Diagram 3

Press the Start button. The scoreboard starts a 3 second countdown. After the countdown, the scoring function activates.
Pull back the right trigger to move the ball to the launch area (see Diagram 2), then release to launch the ball (see Diagram 3).

Scoring Rules

Each player has 5 turns to score points.
Score by hitting the steel ball into:
A (20 points), B (50 points), C (20 points),
and D (30 points).
Note: There is no time limit



 
Auto - Shutdown

When you do not operate the pinball machine for about 2 minutes, it will enter sleep mode, you can restart by switching the ON / OFF button to resume use.

Game Rounds

When the ball drops into the bottom hole, the current round ends. The scoreboard shows "BALL2" for the 2nd round, "BALL5" for the final round. After "BALL5", the scoreboard shows "YOUR SCORE" (total points of the round). The player with the highest total wins.

Top Score Button

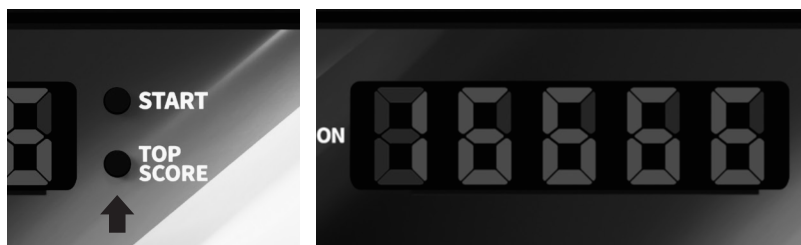

Short - press: The scoreboard shows the Pinball Machine's highest score.
Long - press (about 3 seconds) : Delete the highest score.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

ADULT ASSEMBLY REQUIRED.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.

