


# DANCE MACHINE

## INSTRUCTIONS

### SET UP




### INSTALLING BATTERIES

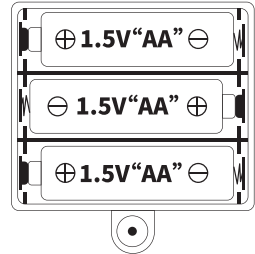

REQUIRES  
3 X 1.5V AA BATTERIES  
(NOT INCLUDED).



### HOW TO PLAY

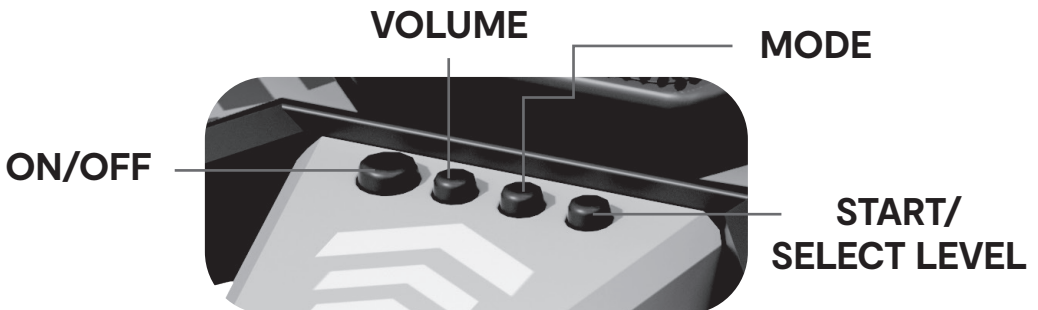

#### ON/OFF BUTTON

When the dance machine is powered on, the player has 2 seconds to choose the game mode and level, if the player does not operate after 2 seconds, it will automatically enter the first level of mode 1.

## VOLUME

There are four levels of volume: high (default volume), medium, low, and silent.

## MODE SELECT

There are two modes available, after each mode select, the game will automatically start from the first level of the current mode.

### Mode 1: Elimination mode

The coloured buttons will play a sound and light up randomly, players need to quickly press the corresponding buttons to eliminate the lights within the time limit (about 7 seconds). There are 3 chances at each level. If it fails 3 times, the game is over. Please press the start button to restart the game.

### Mode 2: Memory mode

1. The coloured buttons will play a sound and light up randomly, and there will be a prompt sound effect after the demonstration is completed.
2. Follow the correct order and press the relevant button accordingly. You have 1 minute to complete the game.
3. If the coloured button is selected in the incorrect sequence or not played in the required time then the player will receive a warning sign and the game is over.
4. Press the start button to commence a new game as required

## START/SELECT LEVEL

Press the select level button to choose a level, directly select the number of ten levels each time. If triggered on failure, it will restart based on the initial number of levels in the current level.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

**WARNING:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

**WARNING: CHOKING HAZARD**  
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

ADULT ASSEMBLY REQUIRED.  
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.  
PLEASE KEEP PACKAGING FOR FUTURE REFERENCE.