

Assembly Instruction

K: 43552221 | K: 43552238 WAVY BEDSIDE TABLE

CARE INSTRUCTIONS:
WIPE CLEAN WITH A SOFT DAMP CLOTH.DO NOT USE ABRASIVE MATERIALS AND SOLVENTS.CHECK AND TIGHTEN ALL SCREWS REGULARLY. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE.KEEP AWAY FROM WATER AND DIRECT SUNLIGHT.STORE IN A DRY PLACE.FOR DOMESTIC USE ONLY.FOR INDOOR USE ONLY.A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON.SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE.




WARNING:
DO NOT STAND OR SIT ON THIS UNIT.DO NOT USE THIS UNIT UNLESS ALL SCREWS ARE FIRMLY SECURED.DO NOT KNOCK OR DRAG THIS UNIT. USE ONLY ON A FLAT SURFACE. LOAD DRAWER EVENLY TO PREVENT FROM TIPPING OVER.THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS.KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.


MAXIMUM SAFE LOAD:5KGS FOR TOP, 3KGS FOR DRAWER.

Hardware List

	A	1pc		B	1pc		C	2pcs		D	1pc		E	1pc
---	---	-----	---	---	-----	---	---	------	---	---	-----	---	---	-----

Step 1:  Ax1  Bx1  Cx1

Step 2:  Cx1  Dx1  Ex1

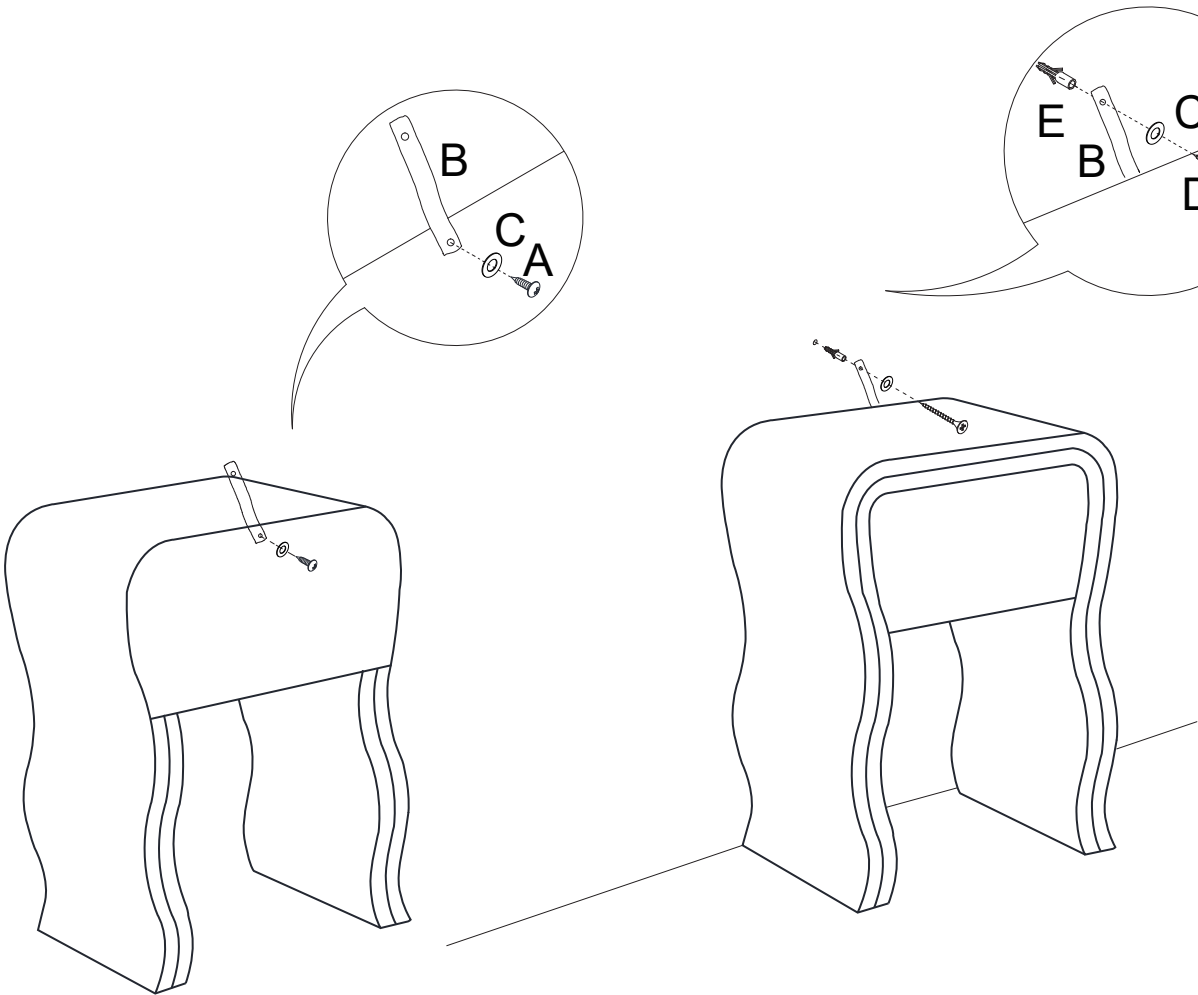

TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture.

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



**WARNING**



Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!