

anko

## Portable Bottle Warmer Instruction Manual



The illustrations shown in this manual are for reference only. Actual product may vary slightly. The manufacturer reserves the right to change any specification or feature without prior notice.

**IMPORTANT! PLEASE READ CAREFULLY BEFORE USE  
AND KEEP FOR FUTURE REFERENCE.**


### Warning:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
2. For adult use only. Keep out of reach of children.
3. Before each use, clean the product according to care instructions and carefully follow instructions for use.
4. Working environment: Please use this product within the room temperature range of 5°C - 35°C.
5. Do not turn on the bottle warmer if there is no milk in the milk bottle. The bottle warmer is set with dry water protection, and it will automatically shut down if no milk is detected in the milk bottle. Turn off the bottle warmer immediately after each use.
6. Ensure the charging port is closed when not charging.
7. Avoid placing this bottle warmer in direct sunlight, near a heat source or in disinfectant solution for a long time, otherwise it may reduce product utility.
8. Please charge the product with a certified power adapter (5V=2A) to avoid any potential accident or damage.
9. This item has a built-in lithium-ion rechargeable battery. It is prohibited for use with strong static electricity or magnetic field. Do not place this product in a microwave oven or in cabinets containing hazardous goods as damage and injury may occur.
10. Please unplug the USB charging cable after fully charged. Long-time charging may cause fire and other safety accidents.
11. In case of product quality problems, please contact the relevant Customer Service Centre as shown in this instruction manual. Do not attempt to disassemble or repair this product. In doing so, you will void the warranty (if applicable).
12. This appliance contains a non-replaceable battery.
13. For your child's safety and health, always check the temperature of the feed before feeding your baby.
14. Before each use, inspect the product. Throw away at the first sign of damage or weakness.
15. This appliance is intended to be used in households and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments.
  - farm houses.
  - by clients in hotels, motels and other residential type environments.
  - bed and breakfast type environments.
16. Do not spill any liquids on the connector or charging port. Moisture may cause electric shock, fire, or product malfunction.


### Caution:

To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.  
The surface of the heating element may remain hot after use. Do not touch the heating surface immediately after operation to avoid burns.

### Product components:

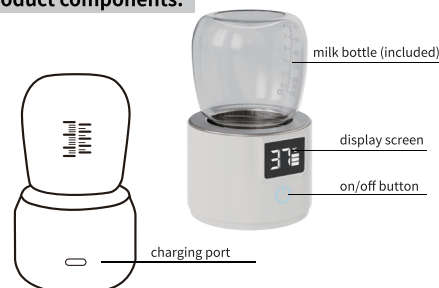

### Parts list:

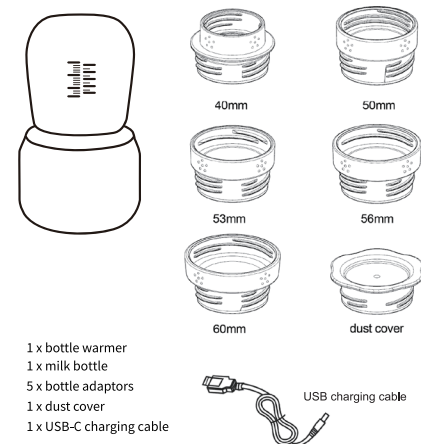

### Product specifications:

Input: 5V=2A

Rechargeable lithium-ion battery capacity: 2500mAh (non-replaceable)

### Instructions for use:

1. Pour milk at room temperature into milk bottle. The required minimum liquid capacity is 30ml to operate the unit.
2. Choose an adaptor that fits your bottle and screw the adaptor tightly. If you use the bottle provided with this warmer, an adaptor is not required.
3. Avoid touching the on/off button when holding the warmer. Hold the warmer and invert it upside down, then screw the milk bottle to the warmer. Ensure the milk bottle is tightly secured to prevent leakage.
4. With the milk bottle connected to the warmer, turn the unit the correct way up and place on your bench. The bottle warmer is now ready for use.
5. Press and hold the on/off button for 3 seconds to turn on the unit. The default temperature setting is at 37°C as per digital display screen. There are 3 further temperature selections. To increase the temperature setting, press the on/off button once for 40°C, twice for 45°C or 3 times for 50°C. After selecting the temperature, the bottle warmer will start heating automatically.  
**Note:** The display screen will flash 3 times to confirm that the unit is set at the displayed temperature.
6. The product will emit 1 beep when the bottle warmer has reached the selected temperature. The warmed up milk will be kept to the selected temperature if the on/off button is not pressed. To remove the heated milk bottle from the warmer, press the on/off button to turn off the unit. Avoid touching the on/off button, hold and invert the warmer upside down, then unscrew the milk bottle from the bottle warmer. Safely place the unit the correct way up on your bench.  
**Note:** Ensure to check temperature of the feed before feeding your baby.

## Care instructions:

### Heating plate:

Ensure the USB charging port cover is closed.  
Wipe the heating plate with a soft damp cloth using a small amount of mild detergent. Only rinse the heating plate with small amounts of tap water for each rinse. Dry thoroughly.  
Do not clean or allow to come into contact with solvents or harsh chemicals. Do not use abrasive pads or cleaners. Do not immerse in water. Damage may result.

**Note:** Silicone ring must be removed from the heating plate. Wash in warm water with mild detergent. Rinse thoroughly. Dry thoroughly before reuse or storage. Do not clean or allow to come into contact with solvents or harsh chemicals. Do not use abrasive pads or cleaners. Damage may result.

**Note:** Do not clean whilst hot. Allow the heating plate to cool down before cleaning.

### Surface of bottle warmer:

Ensure the USB charging port cover is closed. Surface clean only. Wipe clean with a slightly damp cloth only. Dry thoroughly.  
Do not clean or allow to come into contact with solvents or harsh chemicals. Do not use abrasive pads or cleaners. Do not immerse in water. Damage may result.

### Adaptors and dust cover:

Dishwasher safe (top shelf only); or  
Wash in warm water with mild detergent. Rinse thoroughly.  
Dry thoroughly before reuse or storage.  
Do not clean or allow to come into contact with solvents or harsh chemicals. Do not use abrasive pads or cleaners. Damage may result.

### Milk bottle:

Wash and sterilise before first use and each subsequent use.  
Wash in warm mild soapy water by using bottle brush, then rinse thoroughly.  
Dishwasher safe (top shelf only).  
Do not clean or allow to come into contact with solvents or harsh detergents. Do not use abrasive pads or cleaners. Damage may result.  
Air dry thoroughly before reuse or storage.  
To prevent lint residue, do not use a cloth or paper towel to wipe dry the inside of the milk bottle.

### Milk bottle sterilisation:

Suitable for steam sterilisation, UV sterilisation, or boiling.  
Do not sterilise in boiling water for more than 5 minutes.  
Avoid using harsh sterilising agents. Damage may result.

### Storage:

Store in a clean, dry place.  
Keep away from direct sunlight or high temperatures to prevent deformation.

### Battery Charge Status:

The meaning of the bars at side display:

 


#### 4 battery status':

- 3 bars (full charge)
- 2 bars
- 1 bars
- 1 bar flashing (low charge)

Note: The number of bars on display correspond to the above battery status.

Product will emit a beep sound and automatically turn off when the battery is low.  
If trying to turn on the product when battery is low, the digital display on the unit will display as per below image. Turn off the power and fully recharge the unit.



## Trouble shooting

Problem	Possible solution
Unable to charge	Check whether the charger, charging cable or charging port is damaged.
Unable to heat the milk	Ensure that the milk inside the bottle meets the minimum liquid capacity of 30ml. Ensure that the temperature has been selected and is set, and that the unit has enough power to operate.
Dry burning function	If no or minimal liquid is detected in the bottle, the conductor will detect possibility of dry burning and automatically shut off the unit.
Product error reporting function	When the product displays "E1", it indicates that the sensor is faulty. Please contact the retailer from which you purchased the item for repair if it falls within the warranty period.

### 12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity from which you purchased this item, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

K: 43552283 | T: 70995046 (MODEL: JLR-80403)

### MADE IN CHINA

#### CUSTOMER SERVICE:

KMART AU: 1800 124 125  
KMART NZ: 0800 945 995  
TARGET AU: 1300 753 567