

 
Verve Urban Stroller

Instruction Manual

0+
months

22
kg

MAXIMUM WEIGHT
OF CHILD

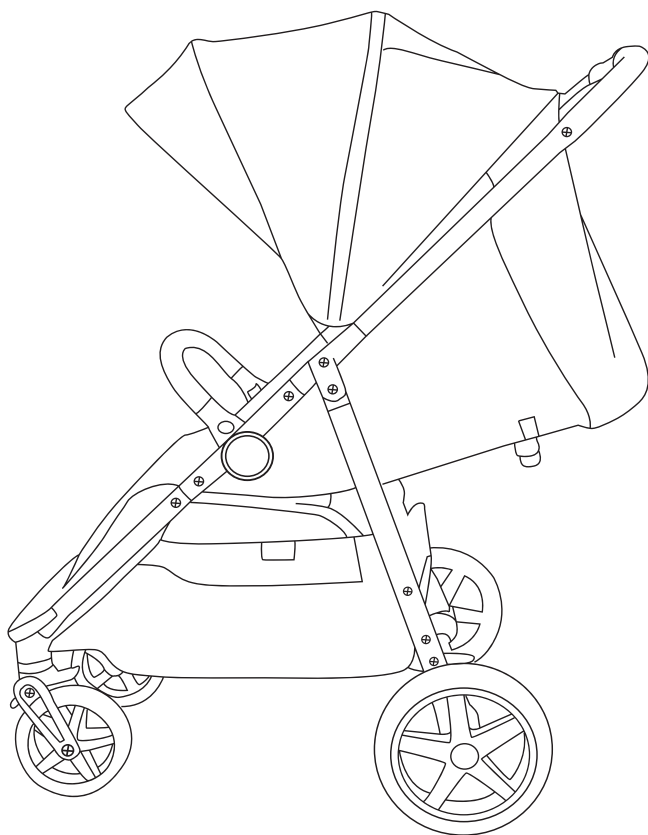

The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

THIS PAGE HAS BEEN PURPOSELY LEFT BLANK.

Safety instructions

IMPORTANT! READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE. KEEP FOR FUTURE REFERENCE. THE CHILD MAY BE HURT IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.

- › **WARNING!** This stroller is intended for one child from birth (0 months) and up to the weight of 22kg or 4 years, whichever comes first.
- › **WARNING!** Never leave the child unattended.




- › **WARNING!** Ensure that all locking devices are engaged before use.
- › **WARNING!** To avoid injury, ensure that your child is kept away when unfolding and folding this product.
- › **WARNING!** Do not let your child play with this product.
- › **WARNING!** ALWAYS USE THE HARNESS RESTRAINT SYSTEM.
- › **WARNING!** Always use the crotch strap in combination with the waist belt section of the harness.
- › **WARNING!** This product is not suitable for running or skating.
- › **WARNING!** Use the most reclined position for newborn babies.
- › **WARNING!** Any load attached to the handlebar affects the stability of the stroller.
- › **YOUR CHILD'S SAFETY IS YOUR RESPONSIBILITY.**
- › **WARNING!** Never leave the harness buckled when not fitted to a child. Doing so may create loops that pose a risk of strangulation.
- › **WARNING!** Use only on flat or gently sloping surfaces. Using the stroller on steep or uneven terrain may cause it to become unstable and tip over.
- › **WARNING!** Take care when folding or unfolding the stroller. Fingers, hands, or other body parts can be injured if caught in moving parts.
- › **WARNING!** Not for use as an unsupervised sleeping environment. Always supervise your child when in the stroller or pram.
- › **WARNING!** Do not carry extra children or attach bags to the stroller. This may cause the stroller to become unstable and tip.
- › **WARNING!** Use the safety wrist strap at all times. This helps prevent the stroller from rolling away unexpectedly.
- › **WARNING!** Do not use this product for unsupervised sleeping.
- › **WARNING!** Do not let children play with or hang from the stroller.
- › **WARNING!** Do not overload this stroller with additional children, goods or accessories.
- › **WARNING!** Always apply the parking brake when the stroller is stationary.

Safety instructions


- › Bags and other items should not be hung from the handlebar as this can affect the stability of the stroller.
- › Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this stroller.
- › Do not use parts or accessories which are not approved by the manufacturer.
- › Ensure the parking brake is engaged during the loading and unloading of children.
- › Do not allow your child to climb into the stroller.
- › Never leave a raincover (not included) or footmuff (not included) on indoors, in a hot environment or near a heat source as your child might overheat.
- › Be careful when going up or down kerbs.
- › Remove your child and fold the stroller when going up or down escalators.
- › If your stroller is used by someone unfamiliar with it e.g. Grandparents, always show them how it works.
- › Do not use this stroller near an open fire or exposed flame.
- › Take care in windy conditions.
- › To prevent damage, always remove the raincover before folding the stroller (if applicable).
- › Do not place anything on top of raincover (if applicable).
- › To prevent your child from overheating, always fold or remove raincover when indoors or in warm environments (if applicable).
- › Maximum weight for the storage basket is 5kg of items evenly distributed.

Parts List


A Stroller x 1

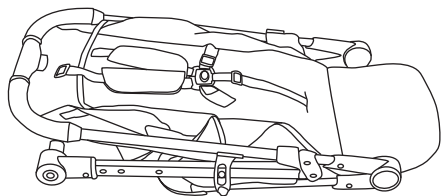

B Front wheel x 2

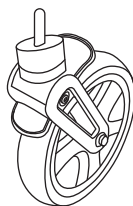

C Rear wheel x 2

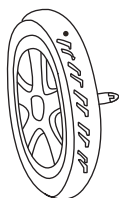

D Bumper bar x 1



E Canopy x 1





Assembly

1. Release the stroller (A) from the locked position by lifting the locking catch from over the locking rivet on the frame.

Note: You may have to squeeze the legs of the frame and the handlebar together first so as to release the tension on the rivet.


Standing behind the stroller and holding it by the handlebar, lift the handlebar upward to unfold the stroller.

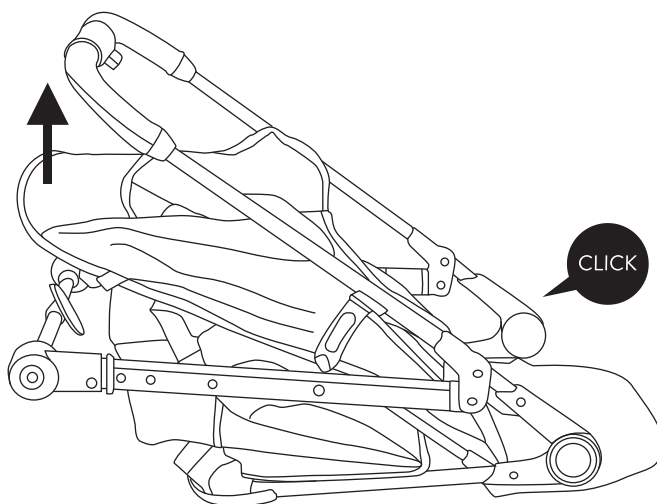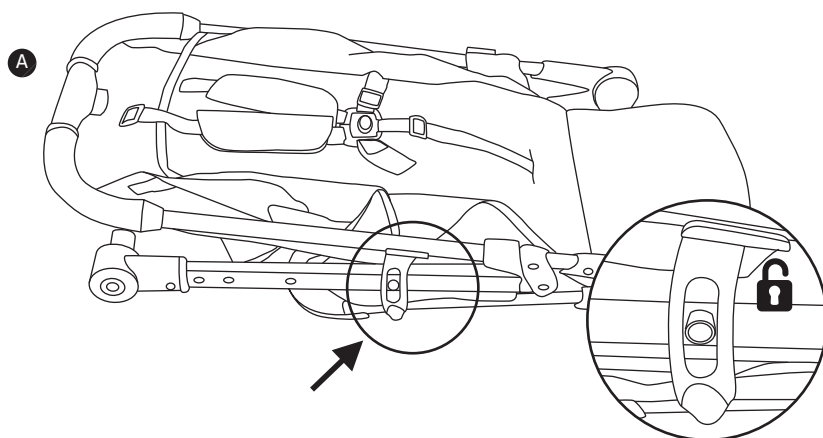


Assembly

2. Lean the stroller forward and press the rear wheel (C) pin into the rear frame hub until it “clicks” into place. Repeat for the other side.

Note: Pull on the rear wheels to ensure they are securely attached to the stroller.

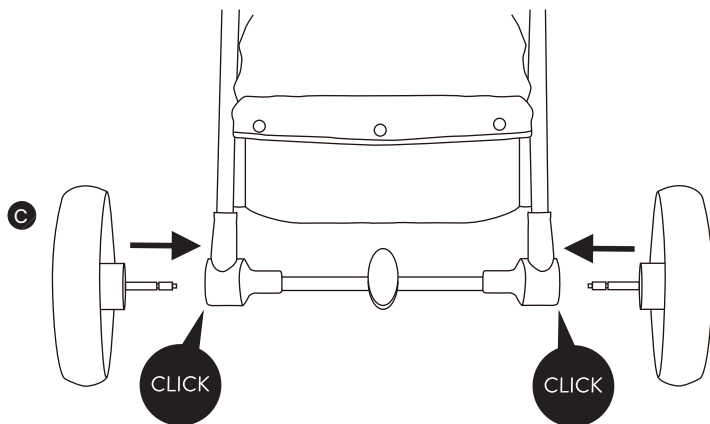


Note: When required to remove, push release button and pull wheel from hub.

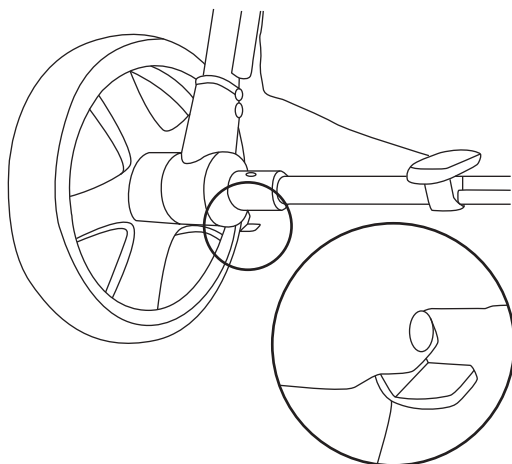


Assembly

3. Attach the front wheels (B). Insert wheel housing onto the front leg and push upward until you hear it "click" into position. Repeat for other side.

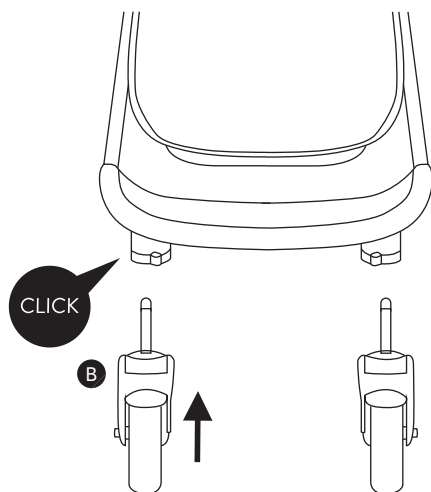


Note: When required to remove, push release button and pull wheel from hub.

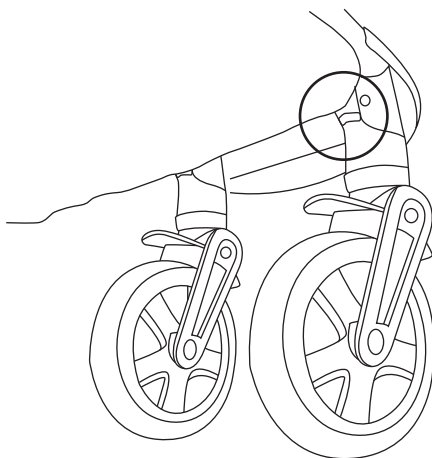


Assembly

- 4a. Insert the canopy (E) clips into the slot located on each side of the seat unit and fasten the grip-fastening tabs on both sides.

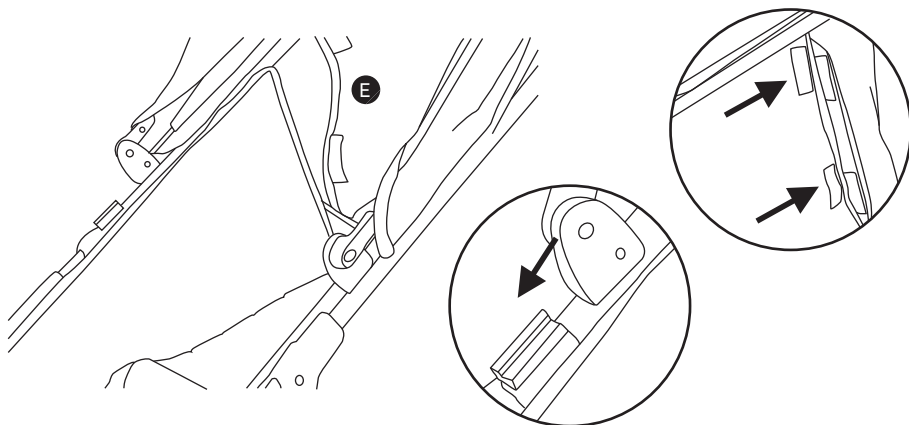

- 4b. Open the zip on the canopy to release hidden extendable panel.

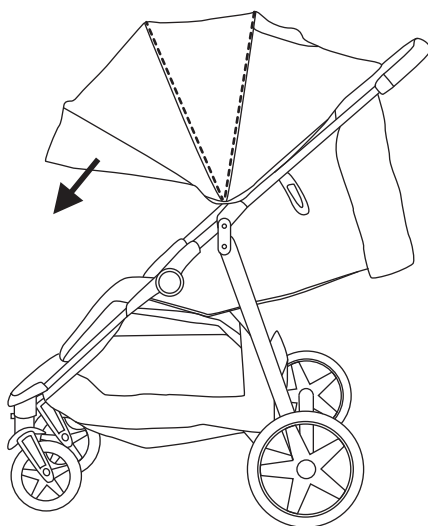

UPF 50+
CANOPY




The canopy features a window to keep an eye on baby in forward facing position. Lift the flap to reveal the window.

Assembly

5. Attach the bumper bar (D) by aligning the anchors with the slots on the seat unit. Push until the bumper bar “clicks” into place.


Note: The bumper bar must be securely attached before using this product. When required to remove it, press buttons simultaneously on both sides to remove the bumper bar.

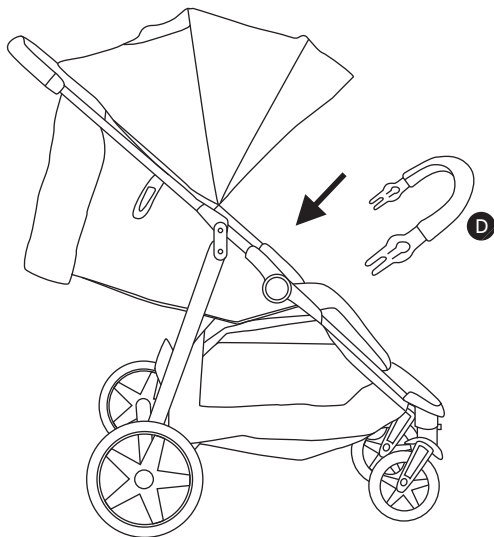

Backrest adjustment


Locate the backrest adjustment mechanism at the rear of the seat. Squeeze the clip on the reclining harness and gently lower the backrest. Alternatively, squeeze the clip on the reclining harness and gently pull up the backrest to the desired height.

WARNING! Always ensure that the seat is securely fixed in position before use.

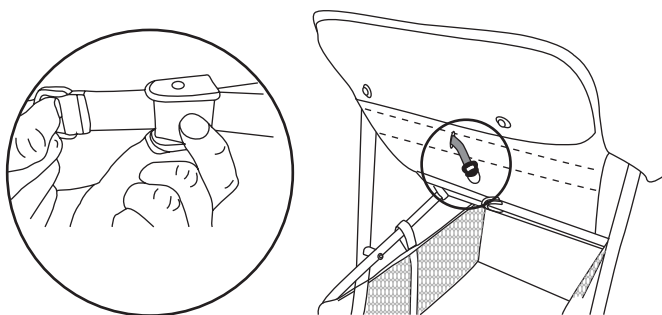


Legrest adjustment

Simultaneously press the button located on both sides of the footrest support to adjust it up or down.

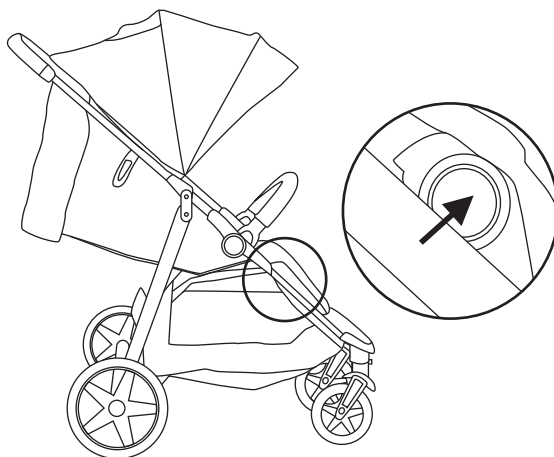

Wheels

The front wheels are equipped with a swivel locking device. Turn the lock on each wheel across to activate swivel function.

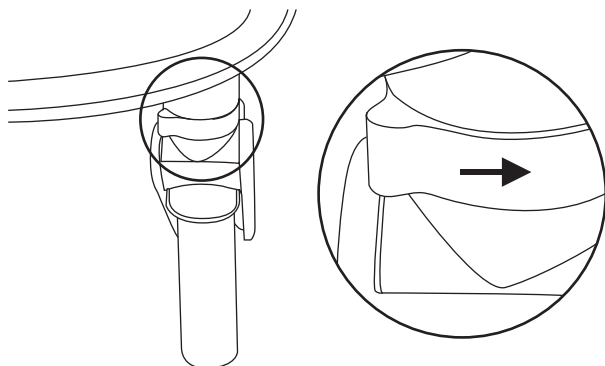


Brakes

To engage brakes, apply downward pressure to the brake lever located on the rear axle. Check that the stroller does not move once the brakes are properly applied.


To release, gently lift up on the brake lever.

WARNING! Always engage wheel brakes when the stroller is not moving.

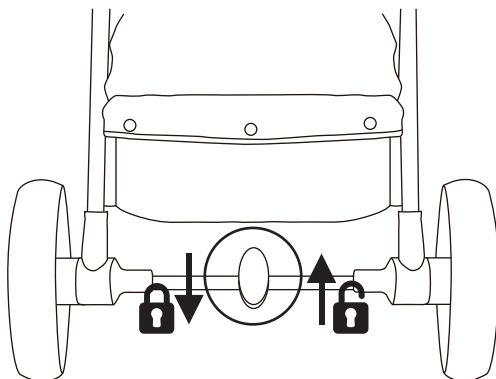


Harness


1. Slide the shoulder strap buckles into the housing of the waist strap buckles.

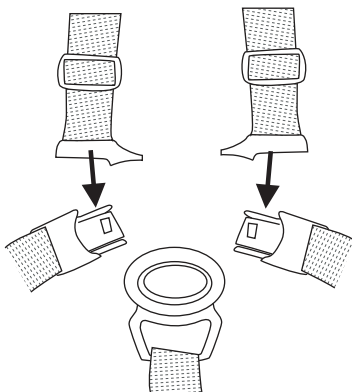

2. Insert the assembled buckles into the buckle housing until they engage securely in place. Listen for the “click”.

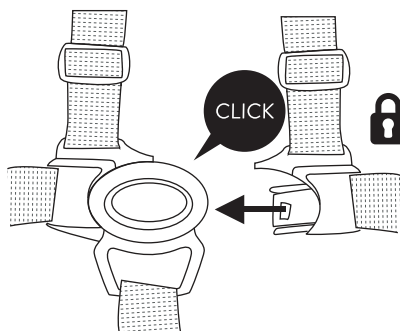

3. Press the centre button to release child from harness.

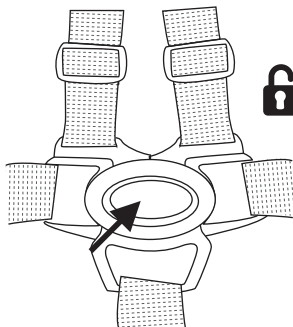



Harness

4. To adjust the length of the shoulder, crotch and waist straps, slide the plastic slides up, down or across as shown.

WARNING! Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.


5. The stroller has 3 shoulder height positions.

WARNING! Always adjust the shoulder harness length according to the baby's height. This may require using a different shoulder height slot position. Pull out the harness straps from the current shoulder height slots. Feed the harness straps through the desired harness slots (1, 2 or 3) height position for both shoulders.

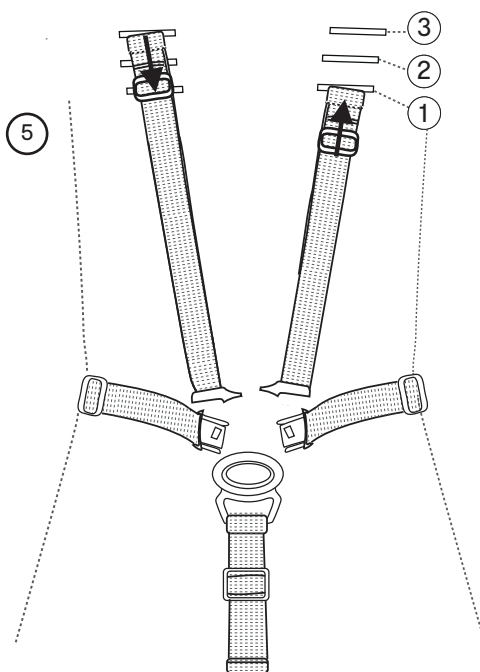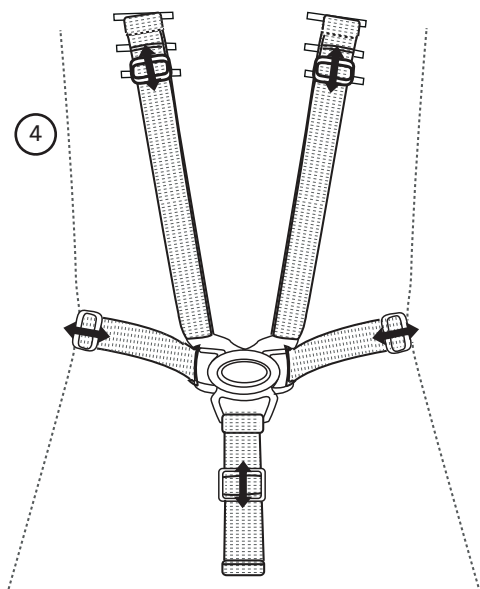


WARNING!

Always adjust the shoulder strap height according to baby's height.

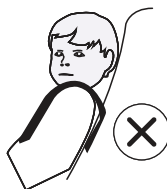


Seat fabric removal

1. Unfasten the press studs located on the stroller frame and remove the cover off the hooks.

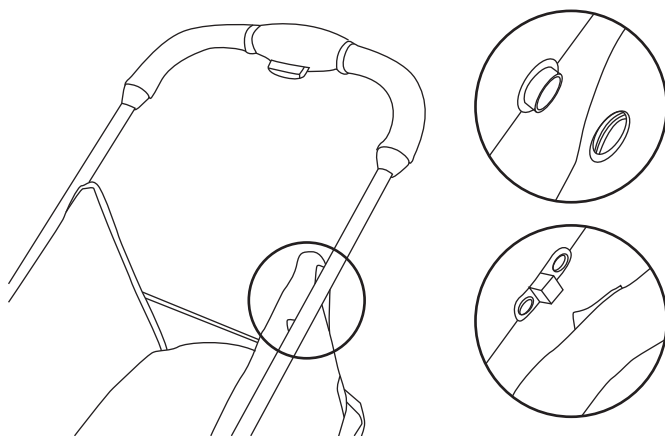



2. Unfasten the middle strap assembly located under the seat and the strap under the footrest. Remove the seat fabric.

Note: To reinstall the seat fabric, reverse the above steps.

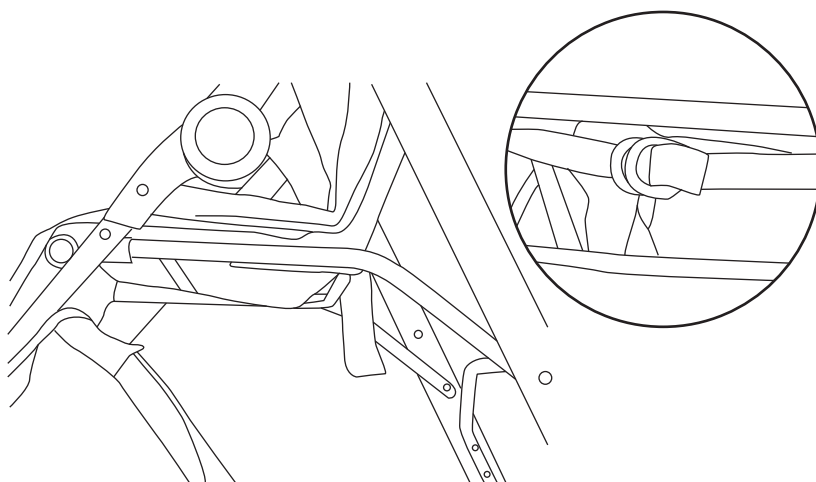

Folding

1. Fold the canopy and apply the brake.
2. Simultaneously slide the folding button on the handlebar across and push up the safety lock.
3. Push the stroller handlebar down until the lock engages with a “click”.

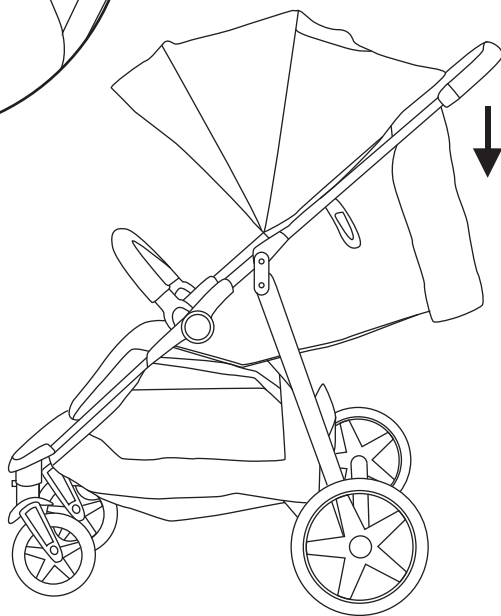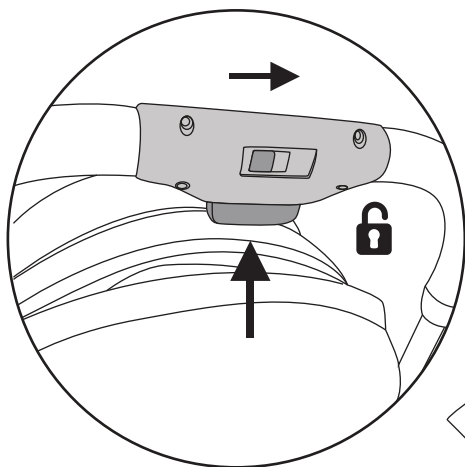

Care and maintenance

- › The product requires regular maintenance to ensure correct and safe performance.
- › Regularly inspect the wheels, locks, brakes, harness, catches, seat mechanism, joints and fixings to ensure they are clean, operating correctly and in full working order.
- › Do not use this product if any part is broken, torn or missing and use only spare parts provided by the manufacturer.
- › If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicone lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- › The stroller should be serviced and reconditioned before using for a second baby, or within 18 months, whichever comes first.
- › After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- › Store in a dry place.
- › Do not leave in sunlight for prolonged periods as some fabrics may fade.
- › Spot or sponge clean fabrics with mild detergent.
- › Use mild soap or upholstery shampoo.
- › Wash separately.
- › NEVER use bleach.
- › Dry in shade thoroughly before reuse and avoid direct heat and sunlight.
- › Do not iron.
- › Do not dry clean. ~~✗~~
- › Wipe clean plastics and metals with damp cloth.
- › Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- › Ensure the product is fully dry before use or storage.
- › Always ensure the product is stored in a dry place to prevent mold or mildew developing.

K: 43-552-603 | T: 70-995-794

MADE IN CHINA

CUSTOMER SERVICE

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567