

Assembly Instructions









CAT LITTER CABINET SHELF






 


CARE INSTRUCTION: Wipe clean with a soft dry or damp cloth. Keep away from water and direct sunlight. For indoor and domestic use. Check and tighten all parts regularly.


WARNINGS: Do not stand or sit on the unit. Do not lean on the product. Do not drag the product. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. Load the drawer evenly to prevent it from tipping over. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.

MAXIMUM TOTAL LOADING WEIGHT: EACH SHELF:15kg (MAXIMUM), SIDE PANEL:5kg (MAXIMUM).















Hardware list

	a		8PCS
	b		8PCS
	c	6X30mm	17PCS
	d	4X40mm	14PCS
	e	3.5X12mm	20PCS
	f	5X25mm	10PCS
	g	6X30mm	4PCS
	h	4X12mm	1PC


	i		2PCS
	j		8PCS
	k		1PC
	l	4X16mm	1PC
	m		1PC
	n		1PC
	o	4X32mm	1PC
	u		1PC

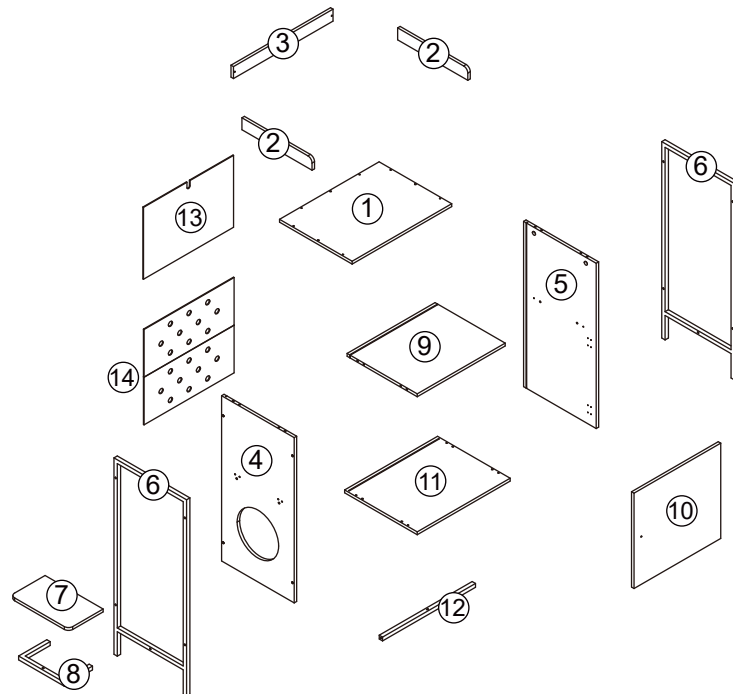 

             
 
DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.

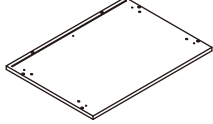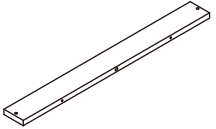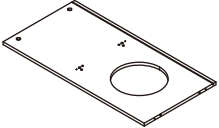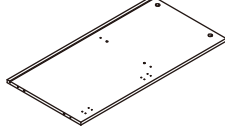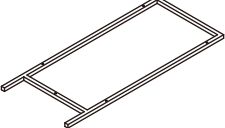		
① 1 PC	② 2 PCS	③ 1 PC
		
④ 1 PC	⑤ 1 PC	⑥ 2 PCS
		
⑦ 1 PC	⑧ 1 PC	⑨ 1 PC
		
⑩ 1 PC	⑪ 1 PC	⑫ 1 PC
		
⑬ 1 PC	⑭ 1 PC	

 
STEP 1

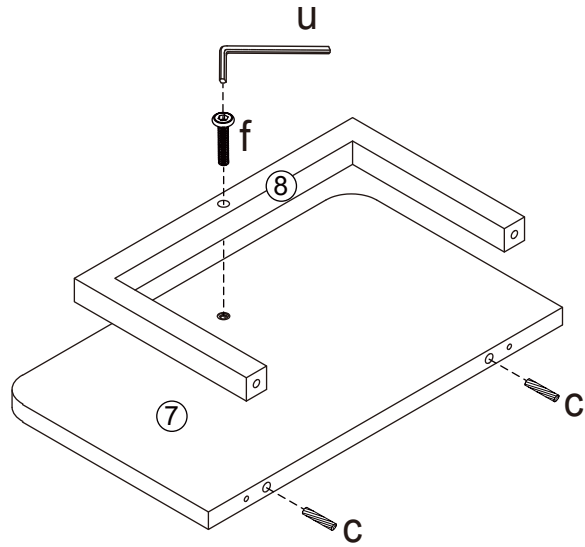

  
STEP 2

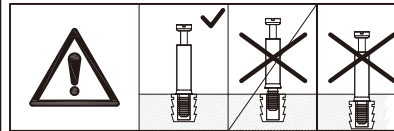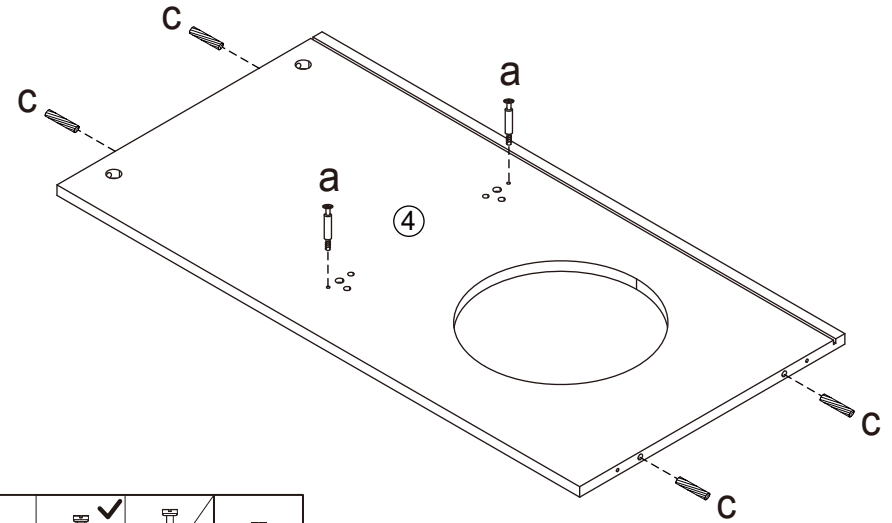

 
STEP 3

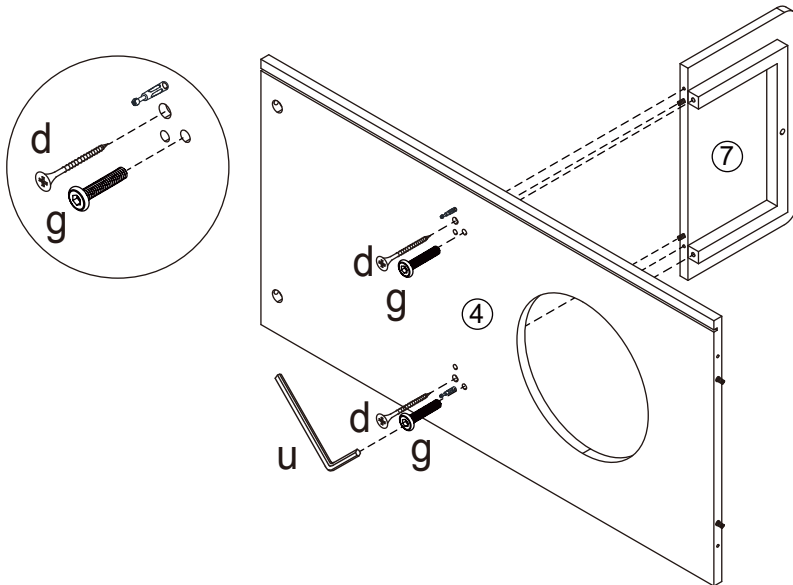


 
STEP 4

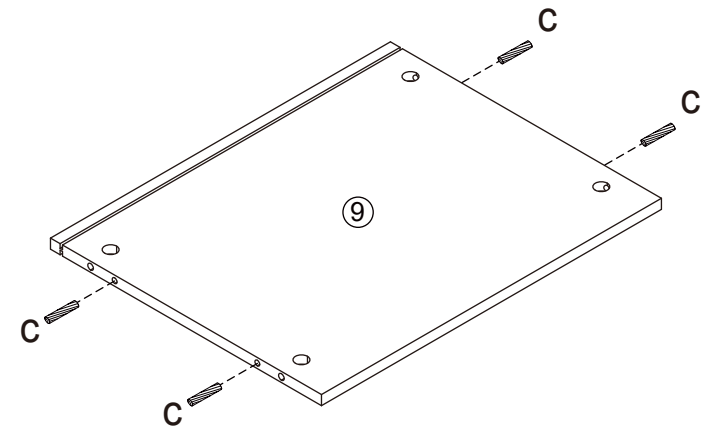

 
STEP 5

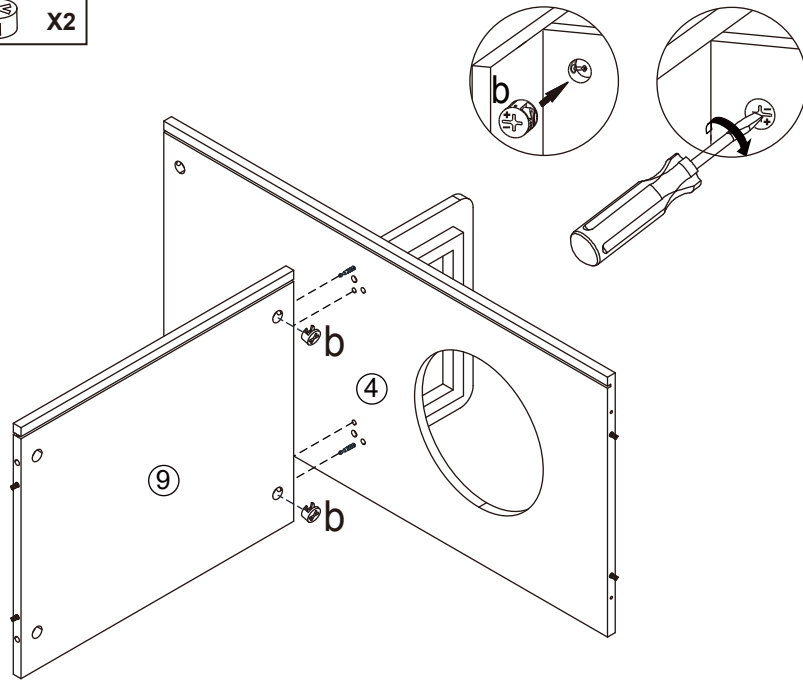

  
STEP 6

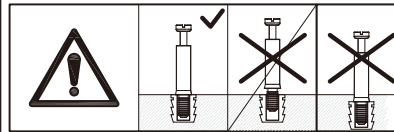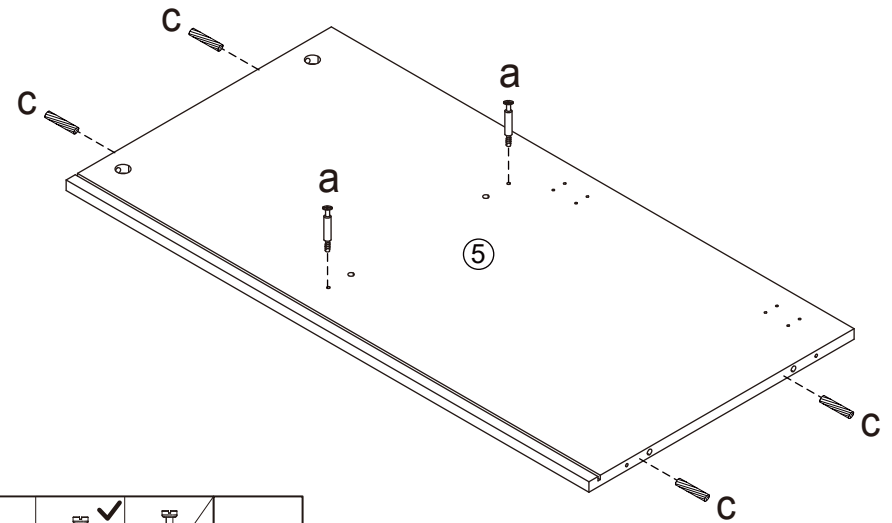

 
STEP 7

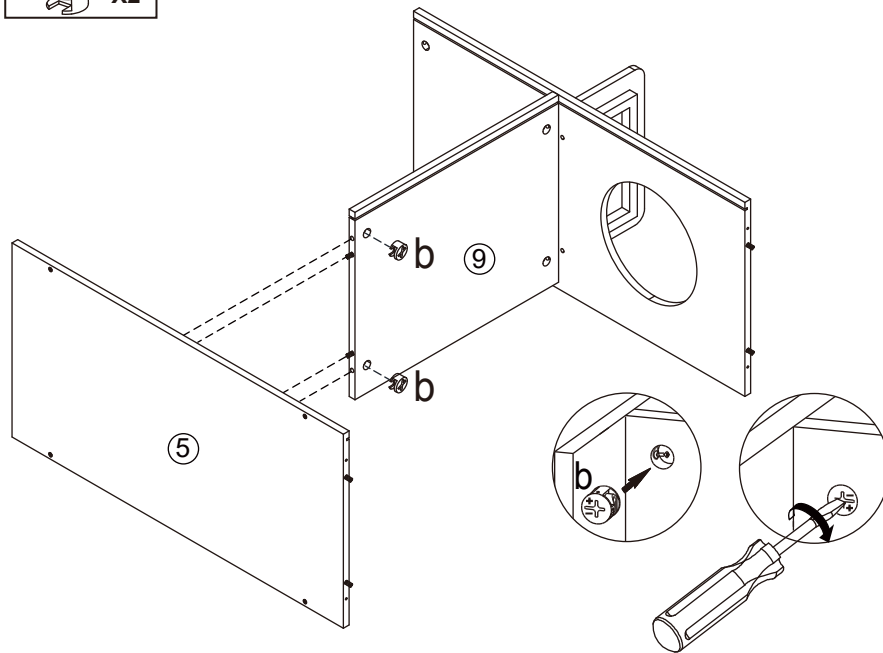

 
STEP 8

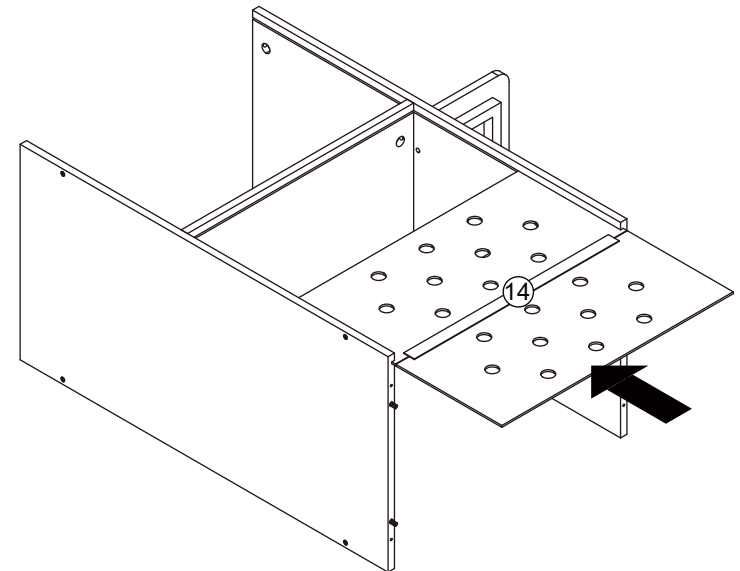


 
STEP 9

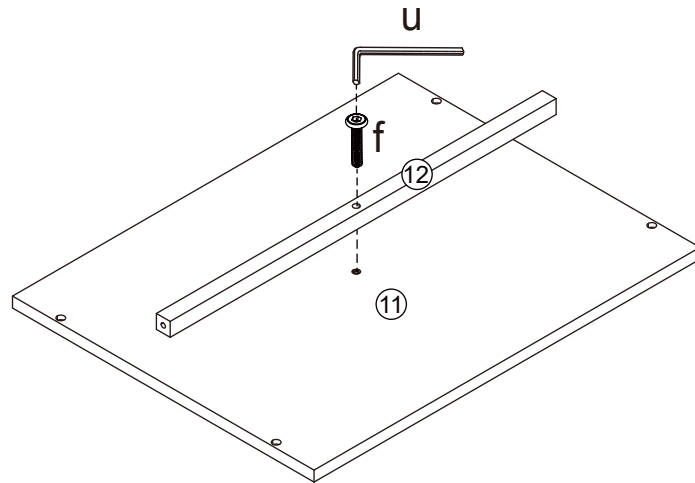

 
STEP 10

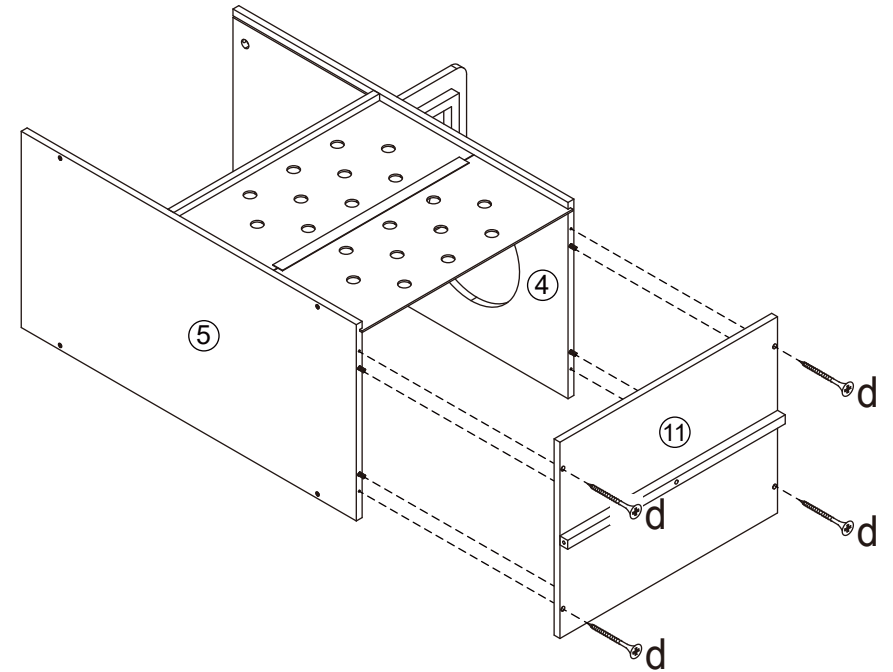

  
STEP 11

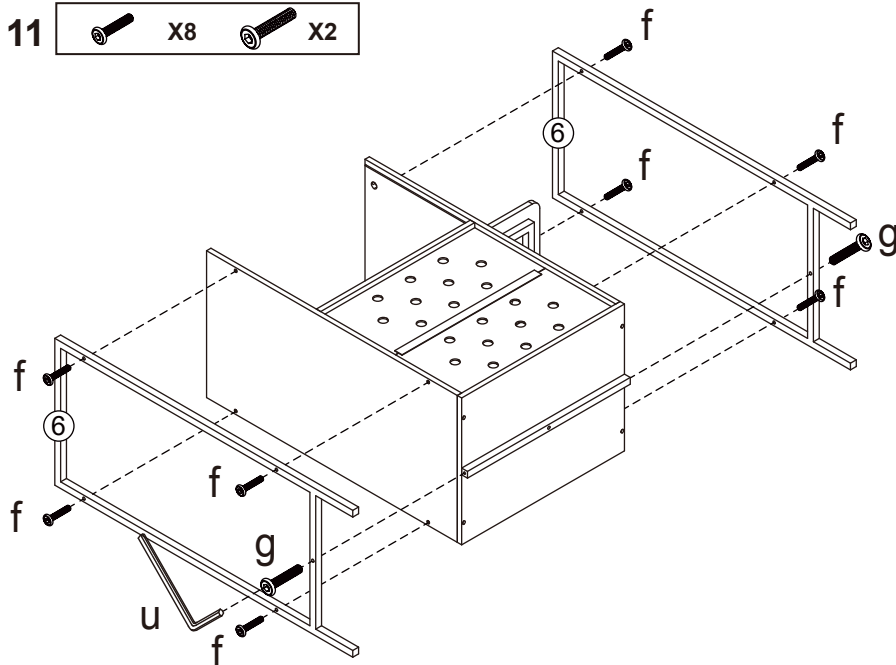


 
STEP 12

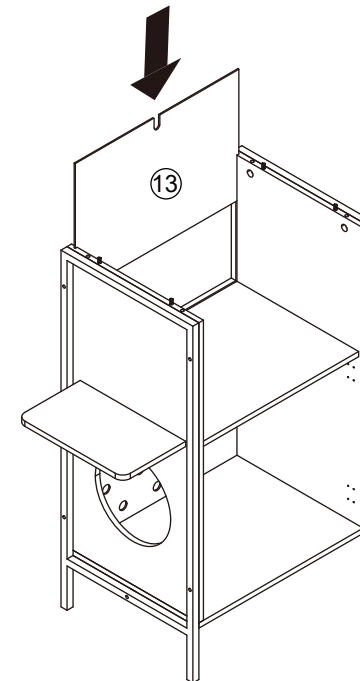

 
STEP 13

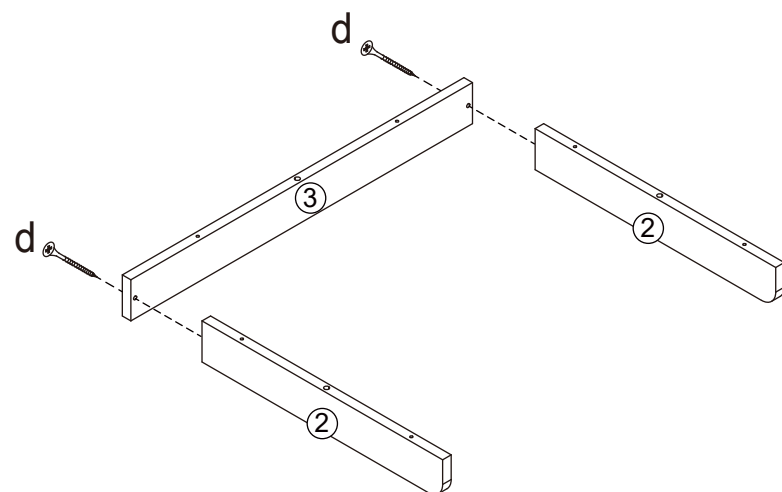



 
 
STEP 14

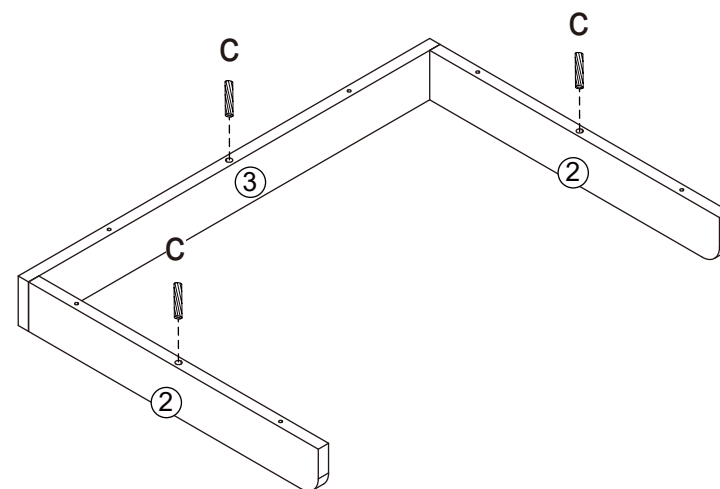

 STEP 15

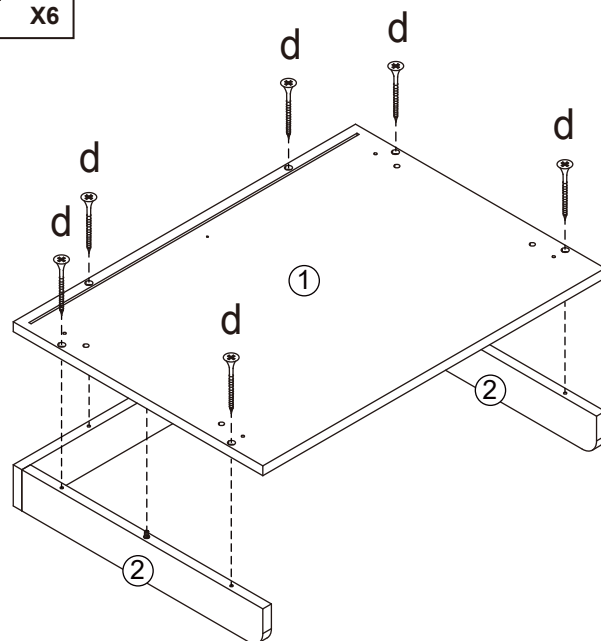

    
STEP 16

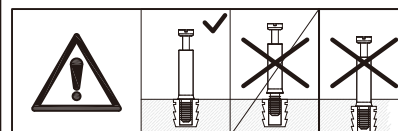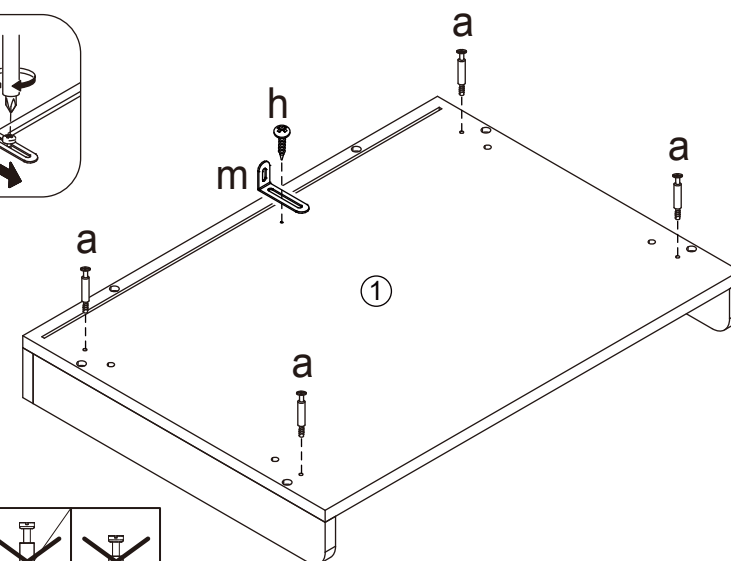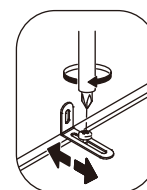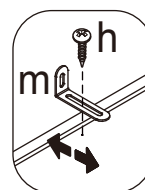



STEP 17



 X4

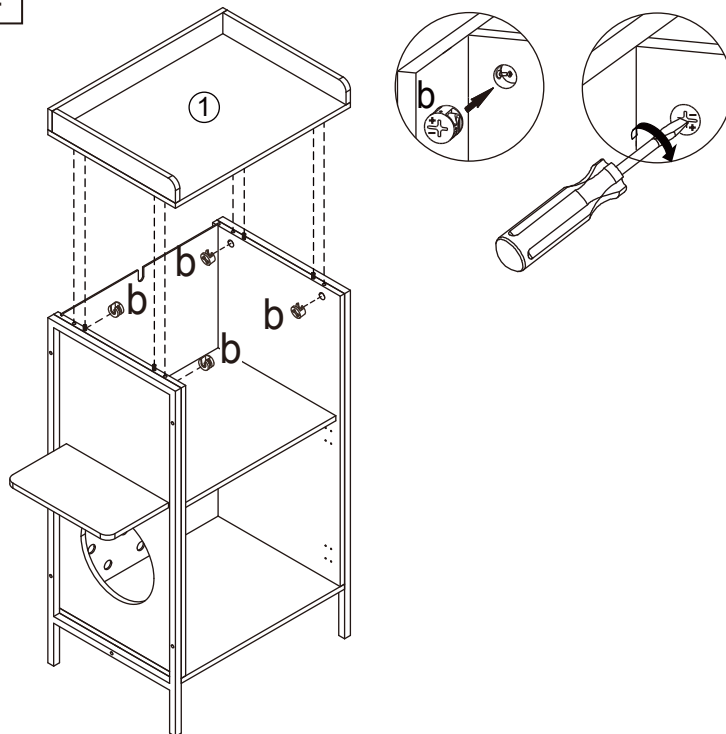

  
STEP 18

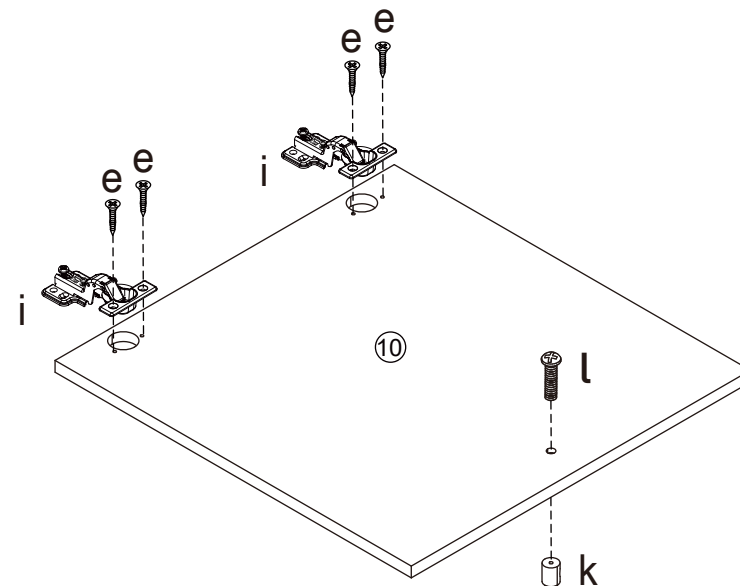


STEP 19



 
X8

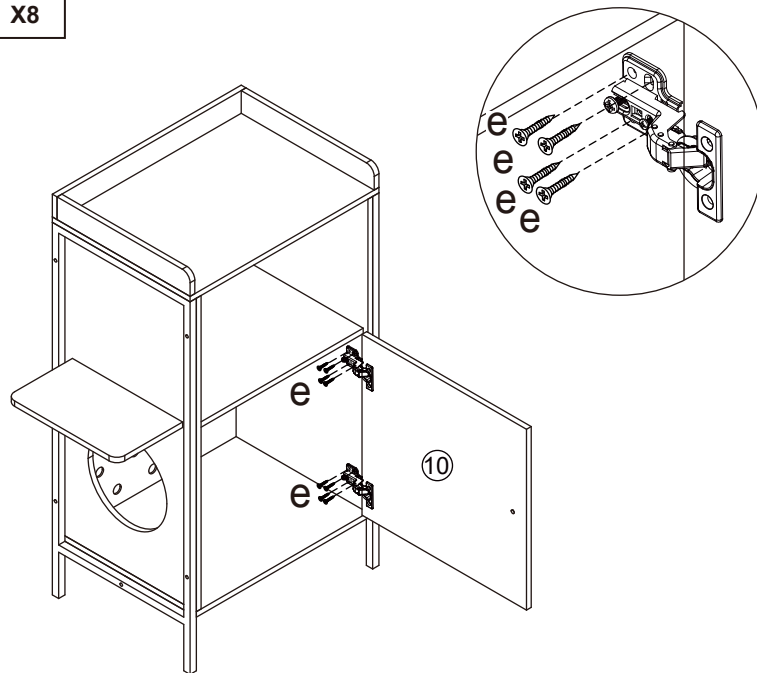

 STEP 20

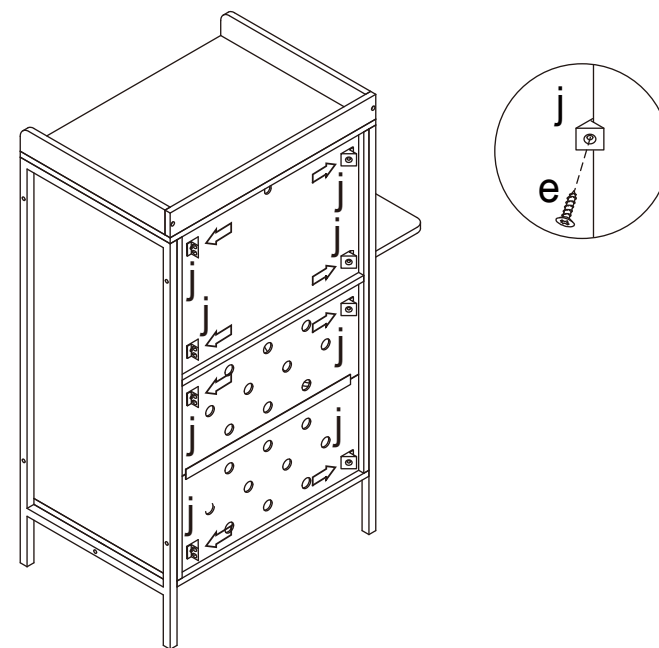

 STEP 21



Warning:

 
- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)



! WARNING

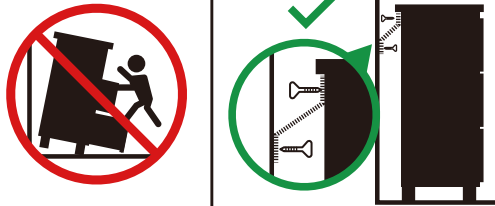


Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.


NEVER put a TV on this furniture



 This is a permanent label. Do not remove!

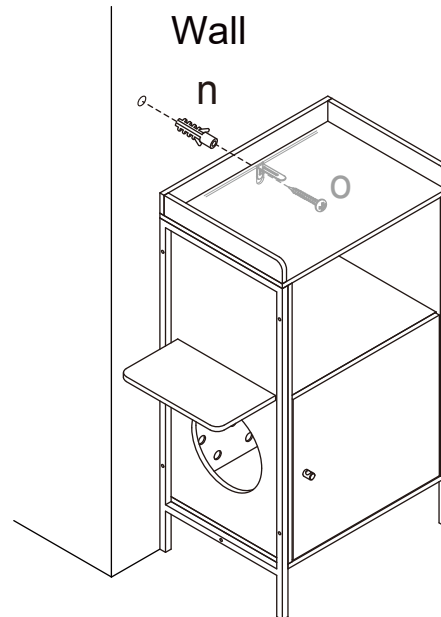

 
STEP 22

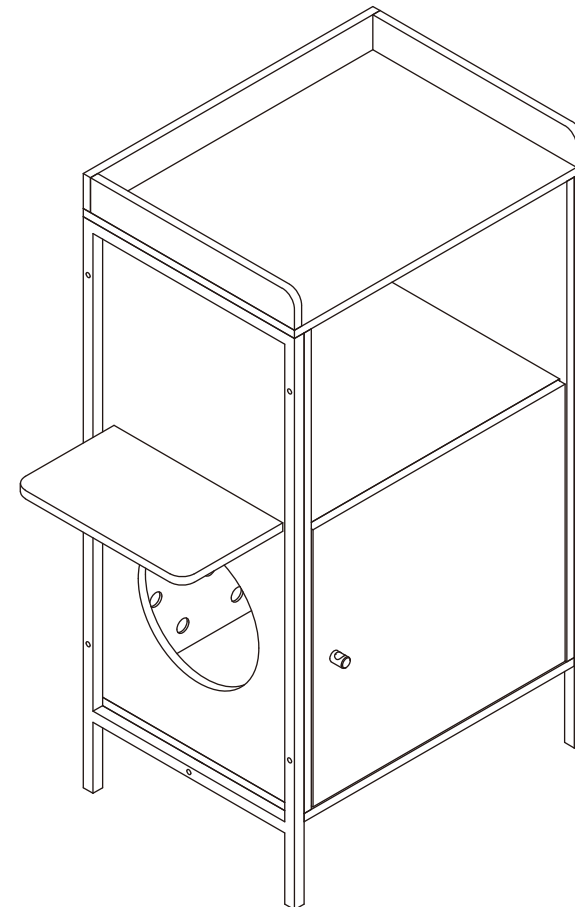


Hinger Adjustment Tips

Noted: The door might be scraping, bumping, misaligned when first assembly.

 
Please follow the below tips:

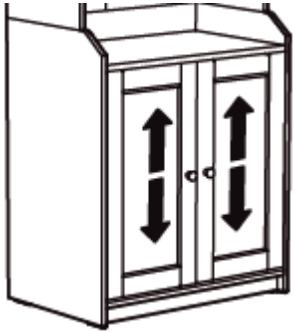


Adjust the door up and down

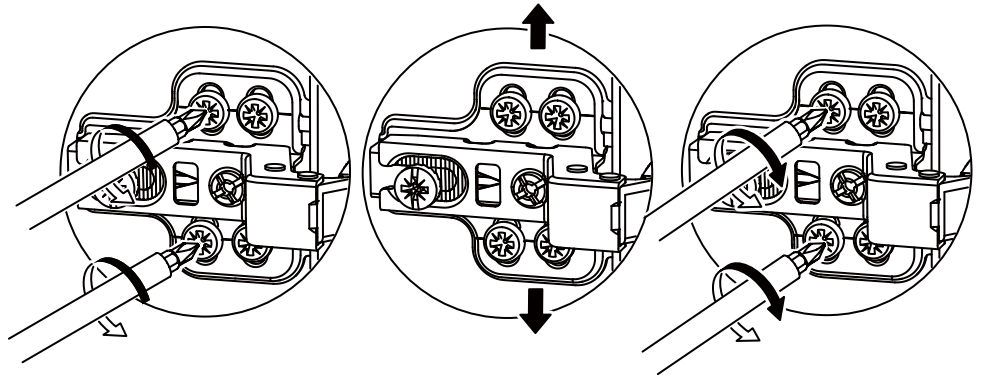 

 
1. Loosen the two mounting screws on both hinges, but only slightly. ...
2. Gently close the cabinet door.
3. With the door still closed, adjust the cabinet door to the desired height.
4. Open the cabinet door again, being careful not to jostle the door out of position.
5. Retighten the screws by hand.

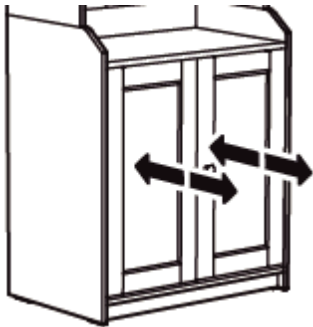


Move the door in and out

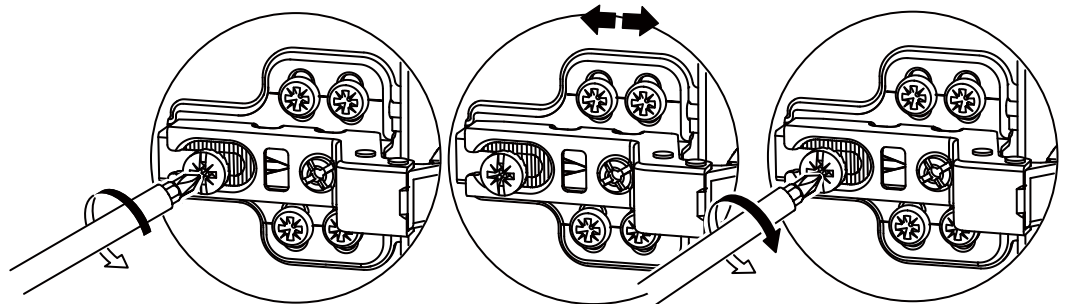 

 If the door doesn't meet the box at the top, adjust the top hinge toward the cabinet and/or adjust the bottom hinge away from the cabinet. If the door is gapped at the bottom, do the reverse.

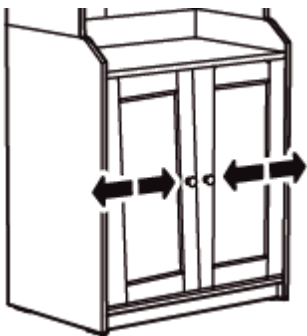

Move the door right or left

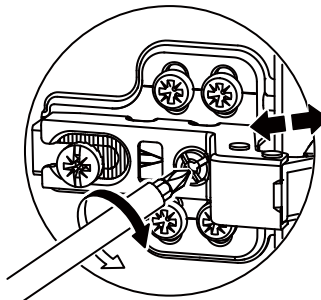 

You can adjust one or both hinges on each door, depending on how much correction it needs. If the door seems to be tilting down to the right, turn the side-to-side screw on the top hinge so the hinge pulls closer to the side of the cabinet box, moving the top of the door to the left.