

# Assembly Instructions












## CAT LITTER CABINET WITH STORAGE







 

**CARE INSTRUCTION:** Wipe clean with a soft dry or damp cloth. Keep away from water and direct sunlight. For indoor and domestic use. Check and tighten all parts regularly.


**WARNINGS:** Do not stand or sit on the unit. Do not lean on the product. Do not drag the product. Use only on a flat surface. Do not use until all screws, bolts and knobs are firmly secured. Load the drawer evenly to prevent it from tipping over. This product contains small parts and sharp points, keep away from children and babies. Adult assembly required. Failure to follow these warnings could result in serious injury.

**MAXIMUM TOTAL LOADING WEIGHT:** TOP AND BOTTOM PANEL:15kg (MAXIMUM), EACH DRAWER:5kg (MAXIMUM).




















### Hardware list

	a		18PCS
	b		18PCS
	c	6X30mm	20PCS
	d	4X40mm	18PCS
	e	3.5X12mm	60PCS
	f	5X25mm	12PCS
	g	6X30mm	4PCS
	h	4X12mm	2PCS
	i		4PCS
	j		12PCS
	k		4PCS

	l	4X16mm	4PCS
	m		2PCS
	n		2PCS
	o	4X32mm	2PCS
	p	7X50mm	4PCS
	q		4PCS
	r		4PCS
	u		1PC

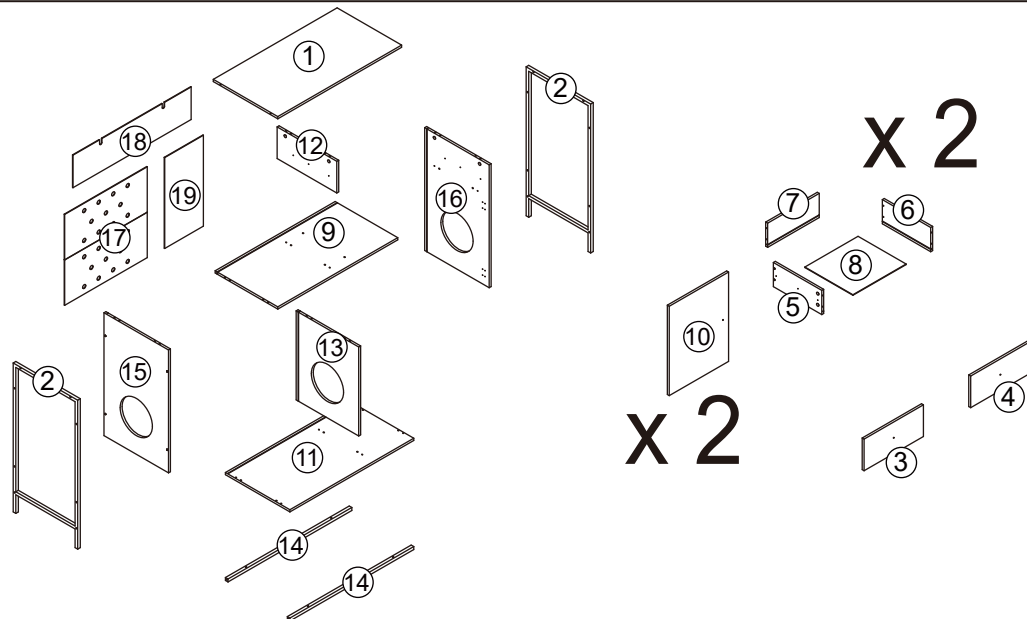 


**DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.**

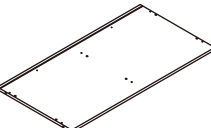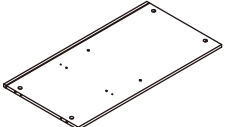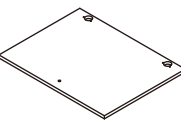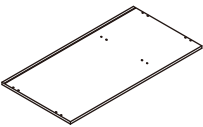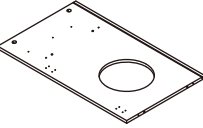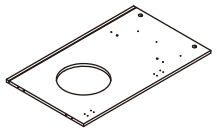                   			
① 1 PC	② 2 PCS	③ 1 PC	④ 1 PC
			
⑤ 2 PCS	⑥ 2 PCS	⑦ 2 PCS	⑧ 2 PCS
			
⑨ 1 PC	⑩ 2 PCS	⑪ 1 PC	⑫ 1 PC
			
⑬ 1 PC	⑭ 2 PCS	⑮ 1 PC	⑯ 1 PC
			
⑰ 1 PC	⑱ 1 PC	⑲ 1 PC	



## STEP 1

 q x4    e x6    r x2

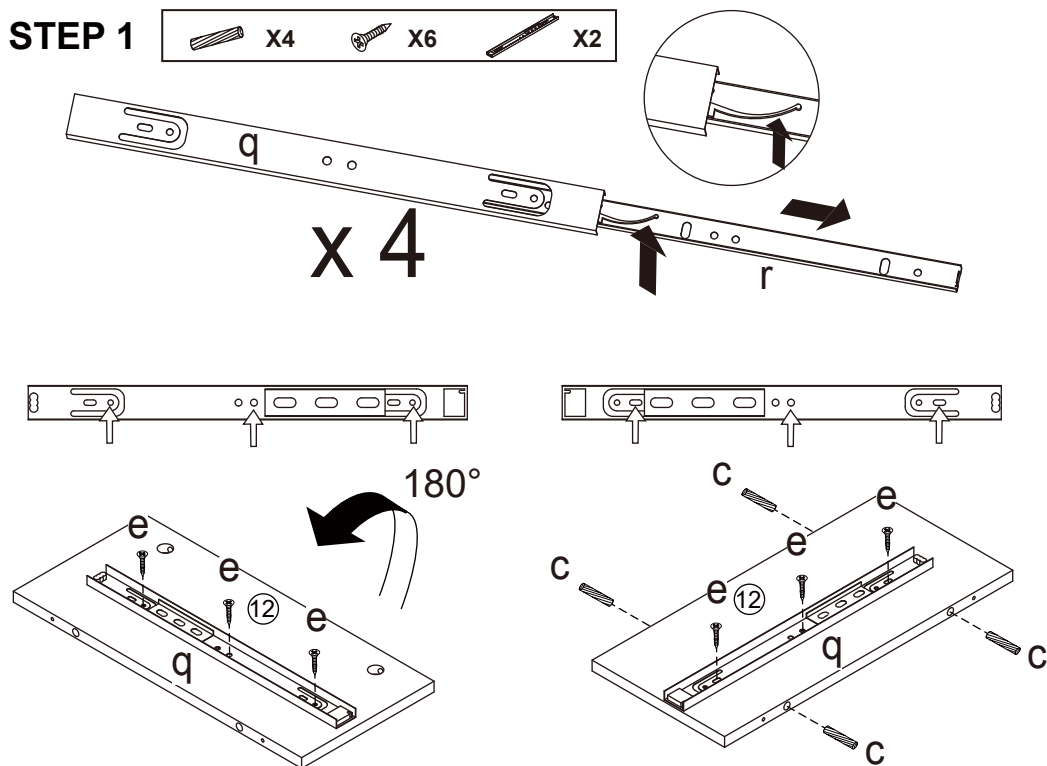


## STEP 2

  c x4

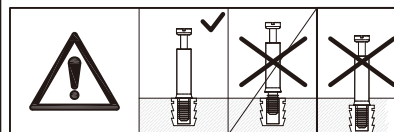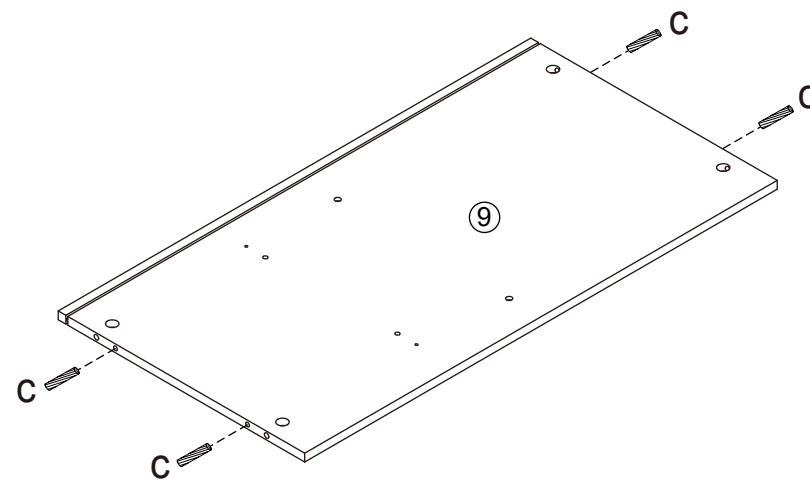


## STEP 3

 d x2


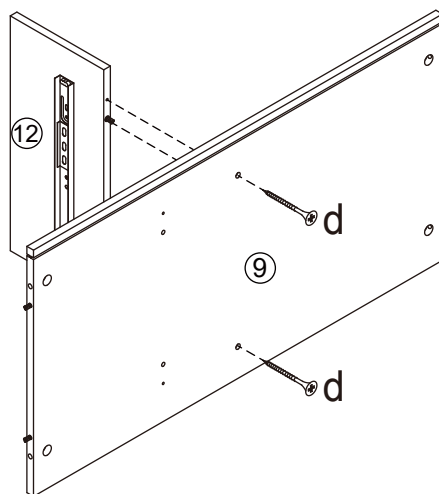


## STEP 4


 
c x4

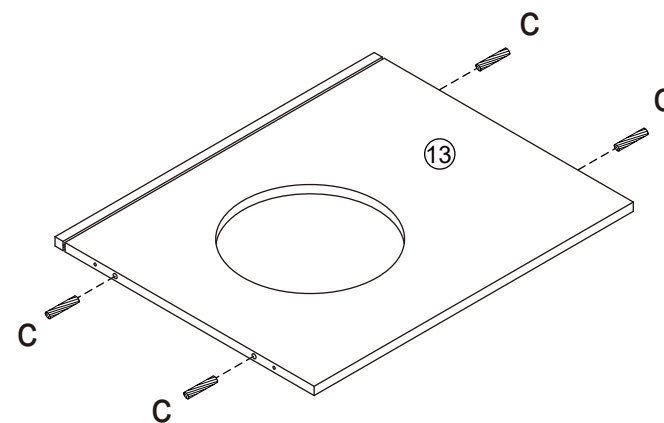



## STEP 5

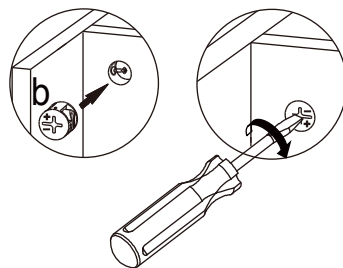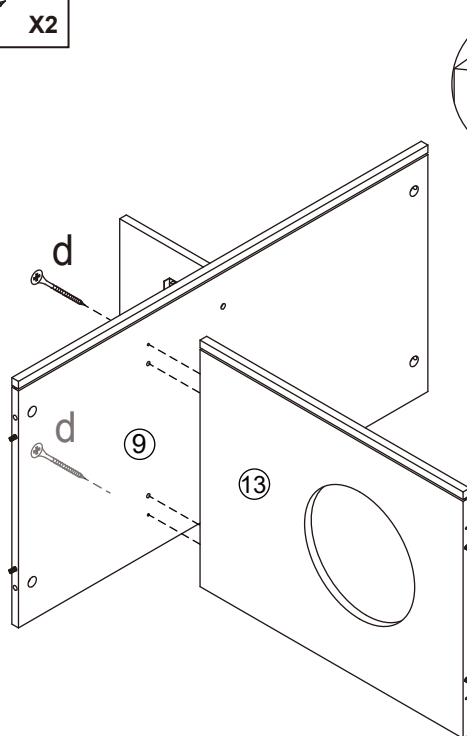  



## STEP 6

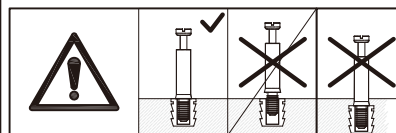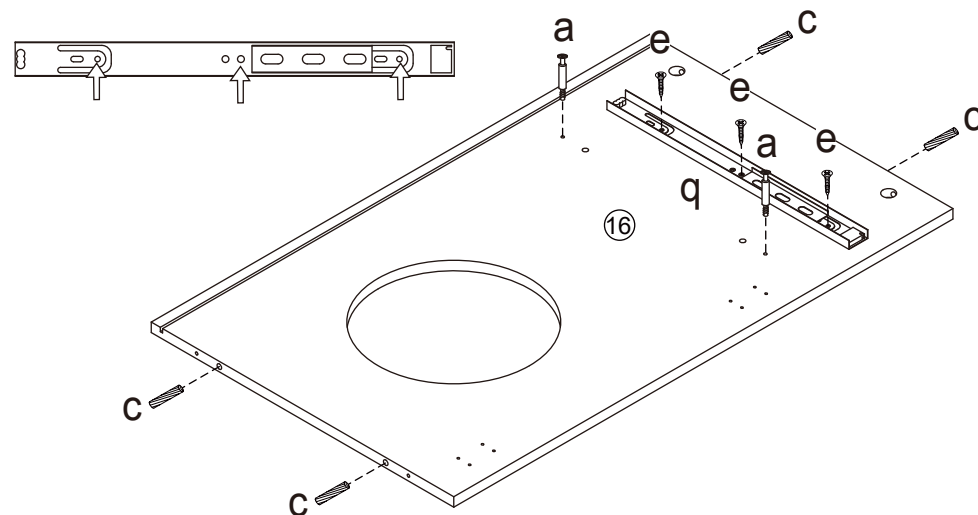  


## STEP 7

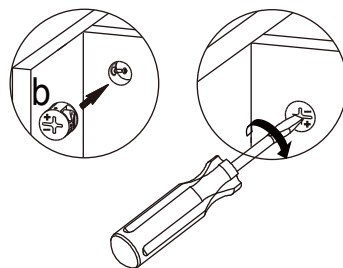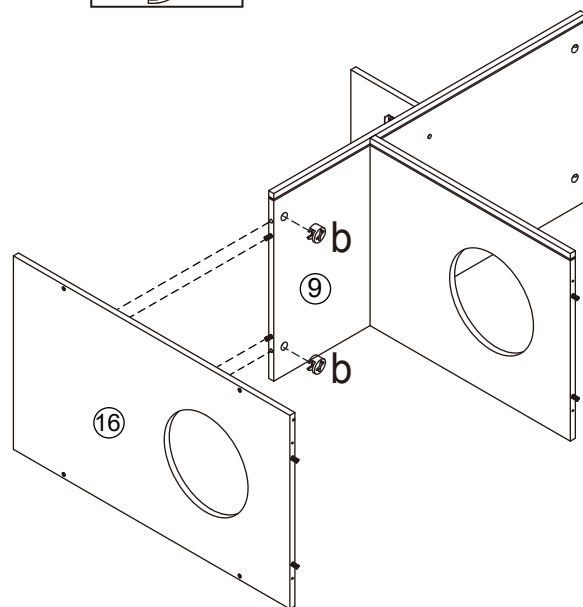  


## STEP 8

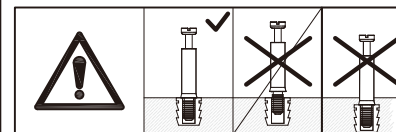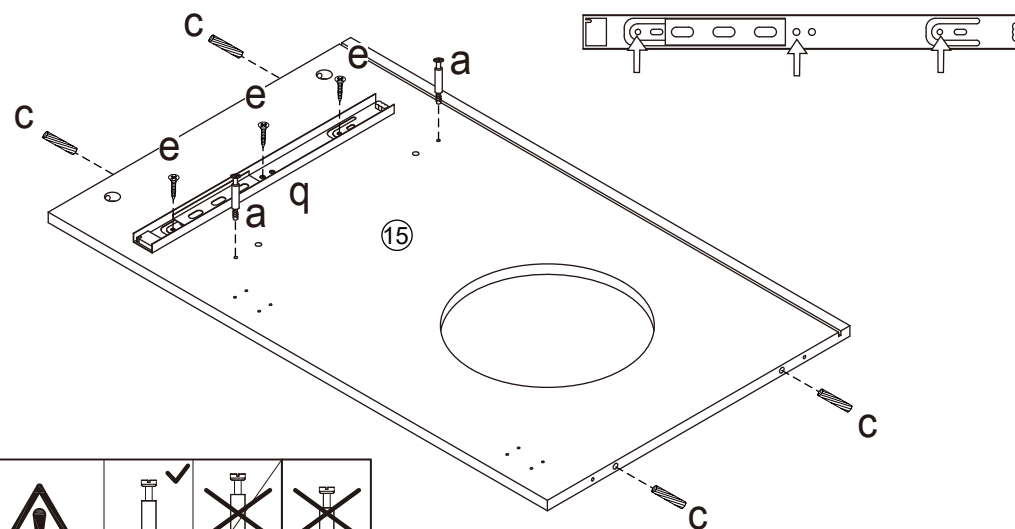  


## STEP 9

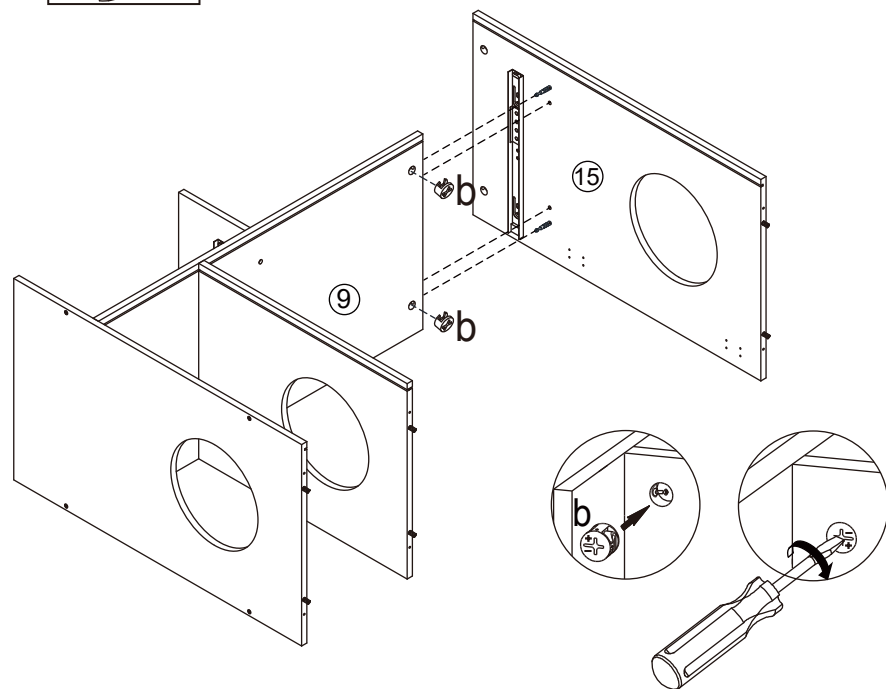 


## STEP 10

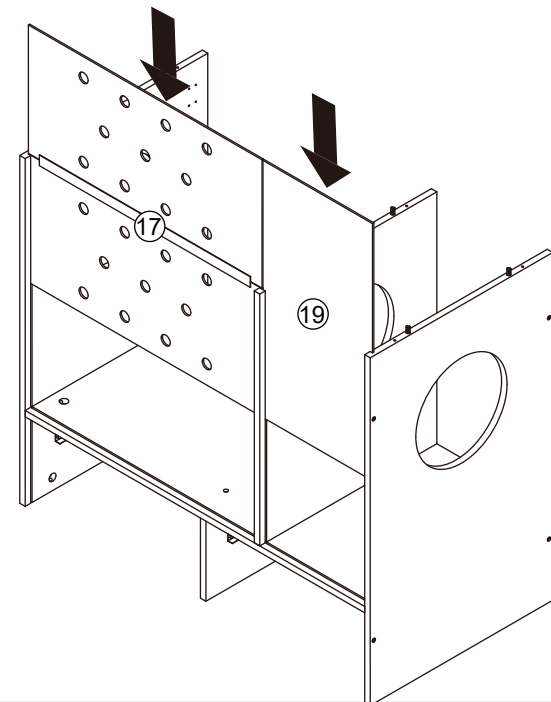 


## STEP 11

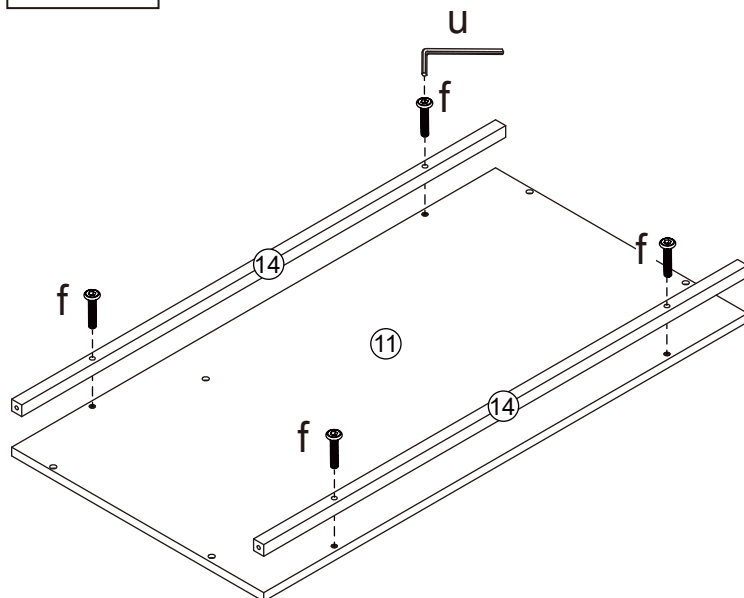 




## STEP 12

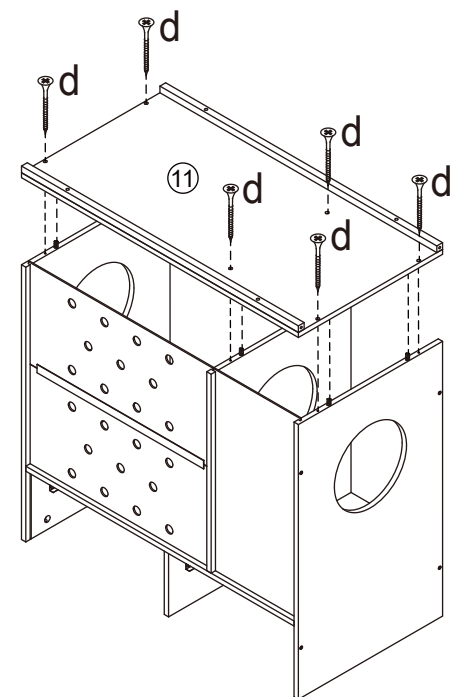 


 
STEP 13

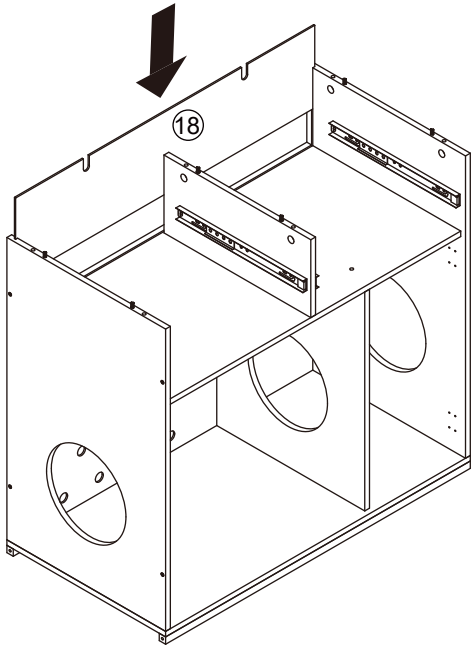

   
STEP 14

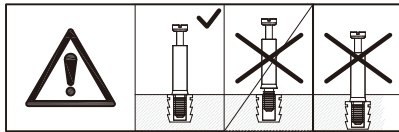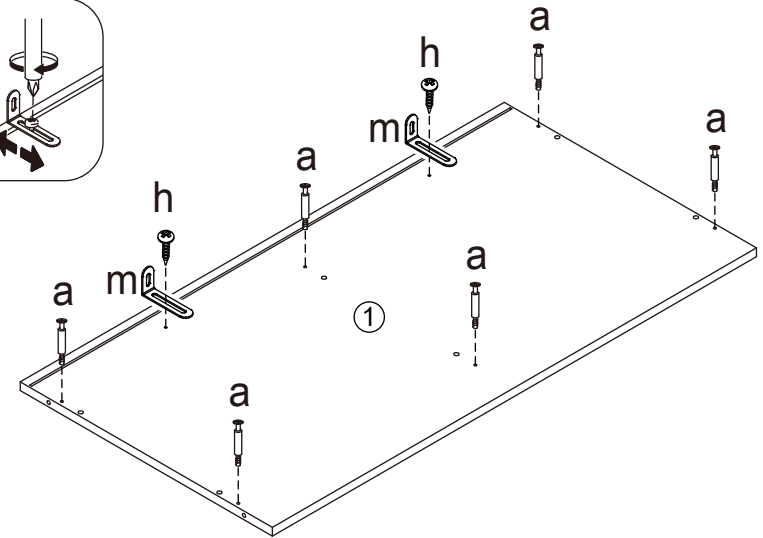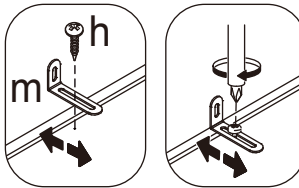

  STEP 15

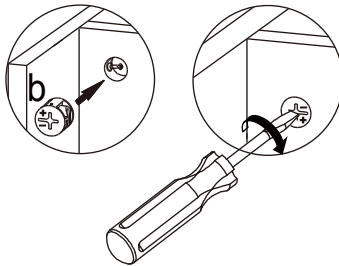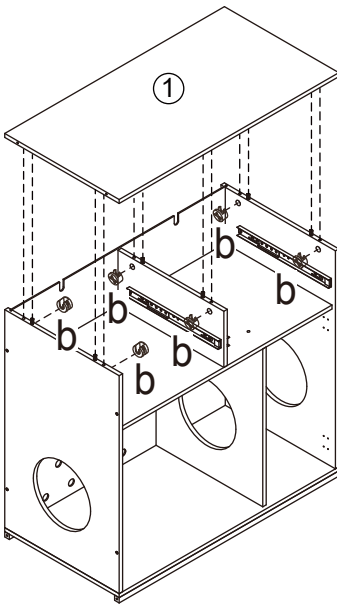

 
STEP 16

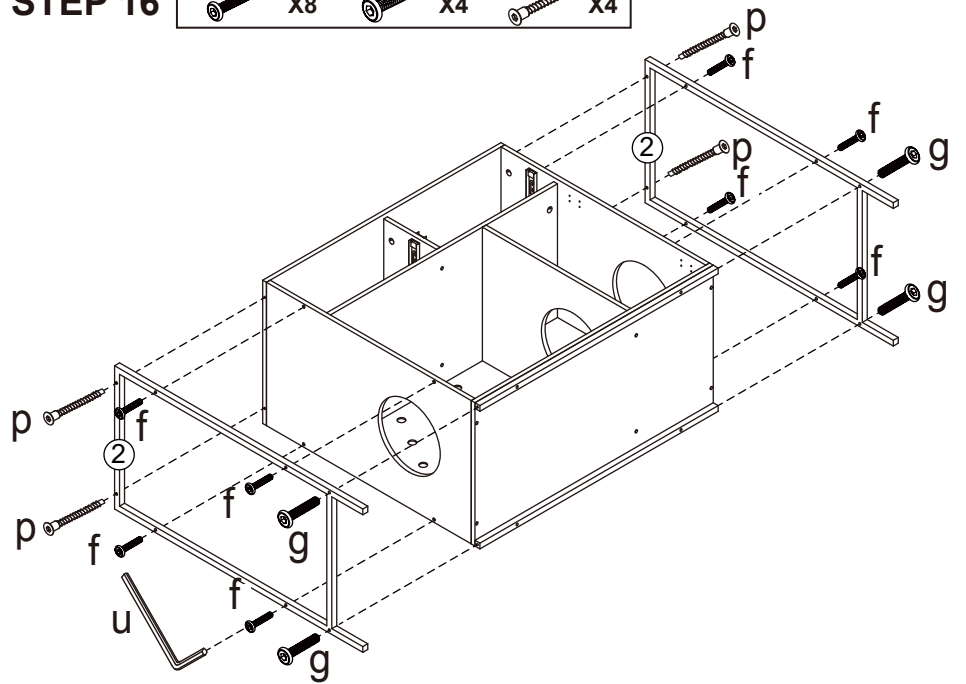

## STEP 17




 x 2




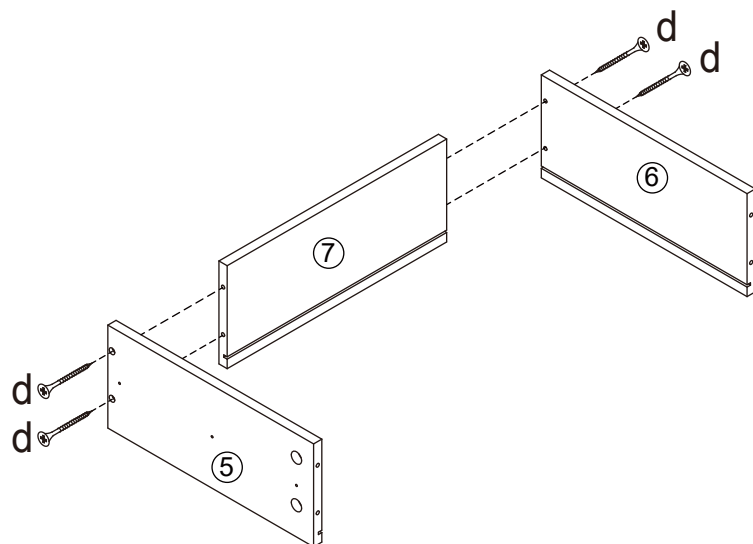


## STEP 18

    
 
x 2

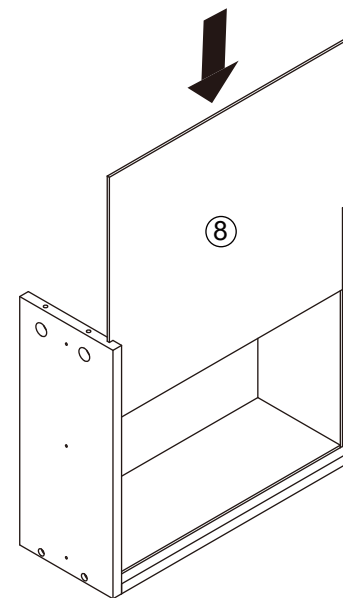

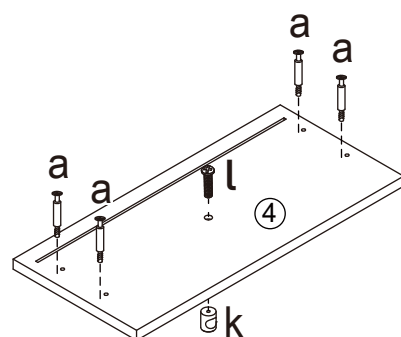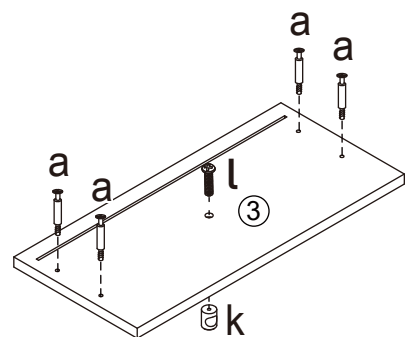

## STEP 19

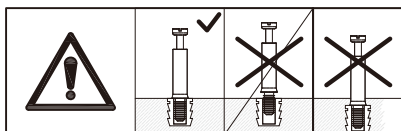 
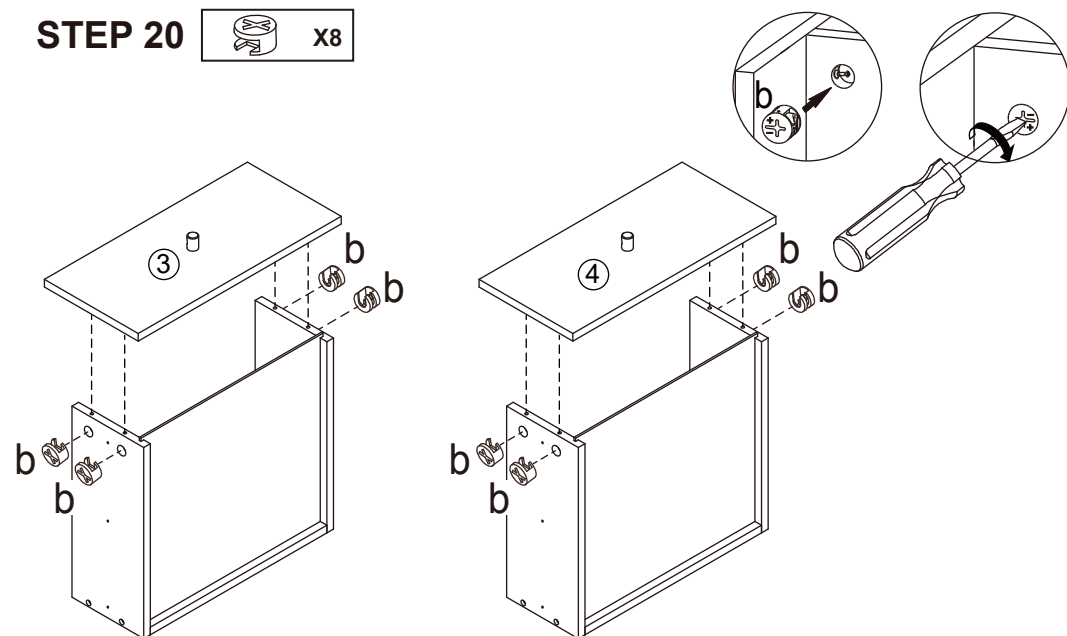 


## STEP 20





## STEP 21

   X6  X2

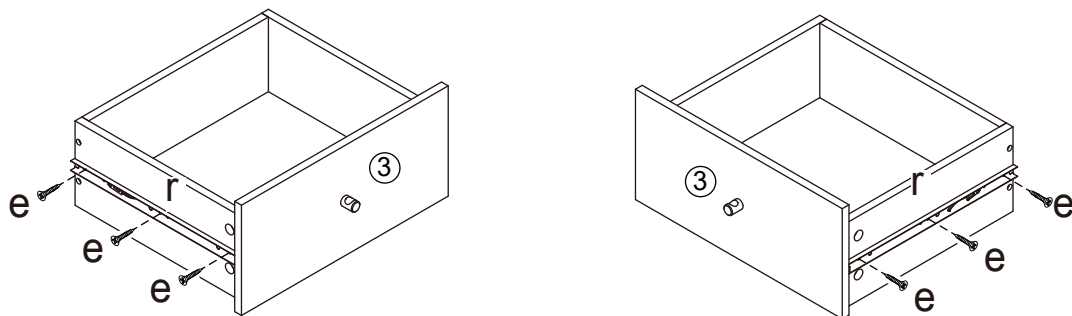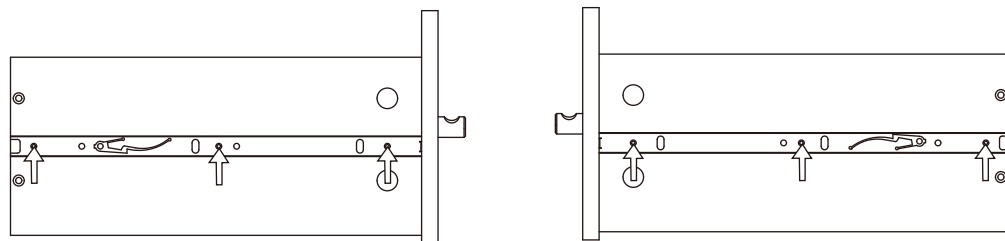


## STEP 22

   X6  X2

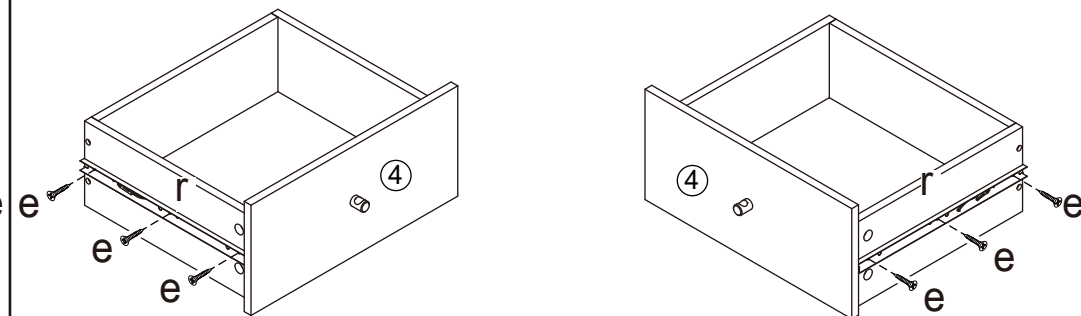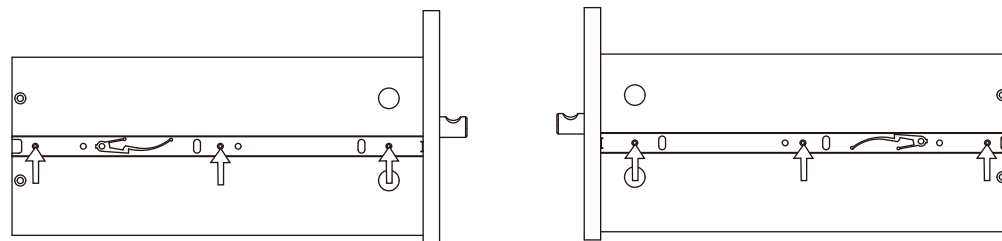


## STEP 23

 
 X8  X4  X2  X2

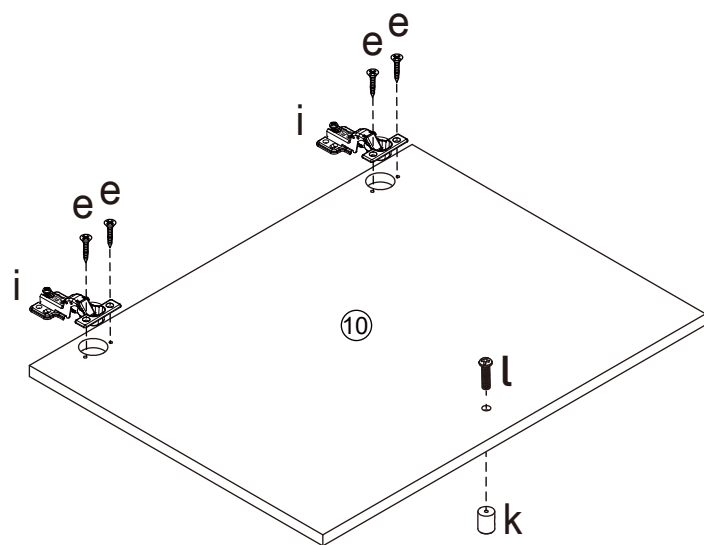

x 2

## STEP 24

  X16

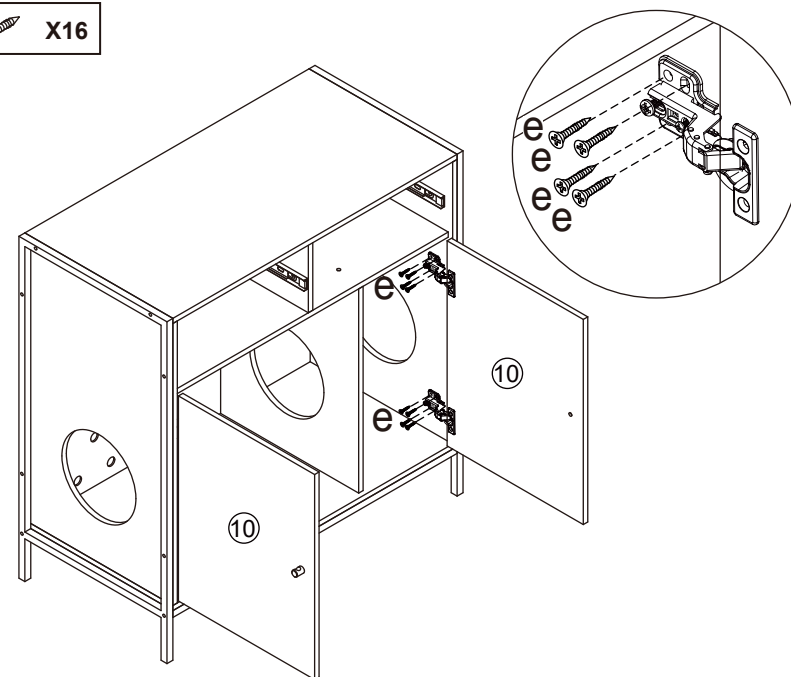



## STEP 25



X12



  X12

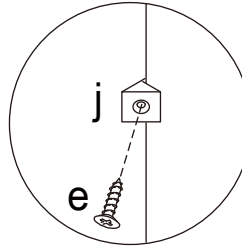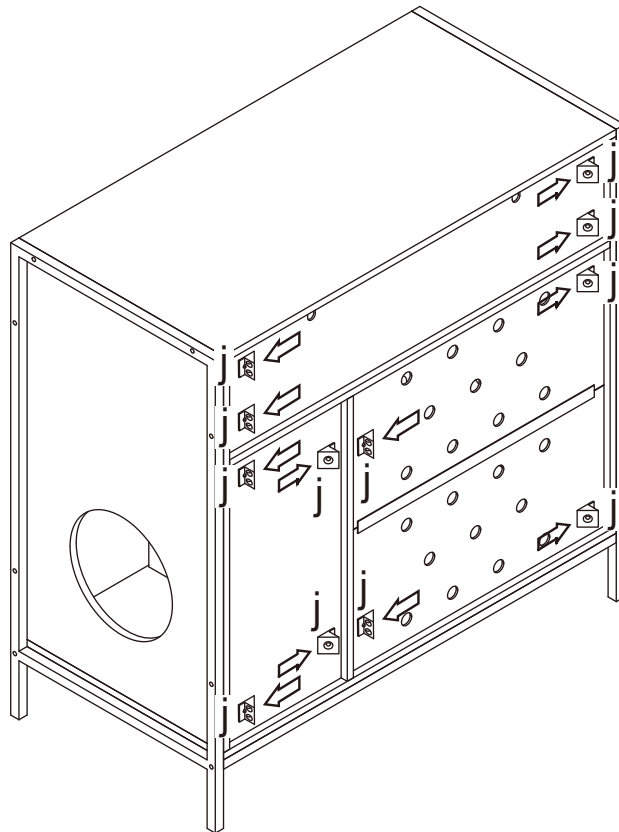

## STEP 26



X2



X2

### Warning:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.

- Do not place unanchored televisions on furniture.

**Caution:** for your safety when attaching the anchor fixings, please note the following:

 
- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)



**WARNING:** PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



## WARNING

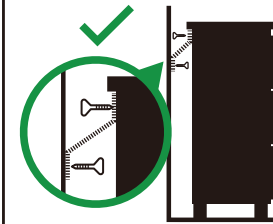

### Children have died from furniture tipover.

 
- **ALWAYS** secure it with an anchor device.
- **NEVER** allow children to stand, climb or hang on drawers, doors, or shelves.
- **NEVER** open more than one drawer at a time.
- Place heavy items down low.

**NEVER** put a TV on this furniture




**This is a permanent label. Do not remove!**

Wall

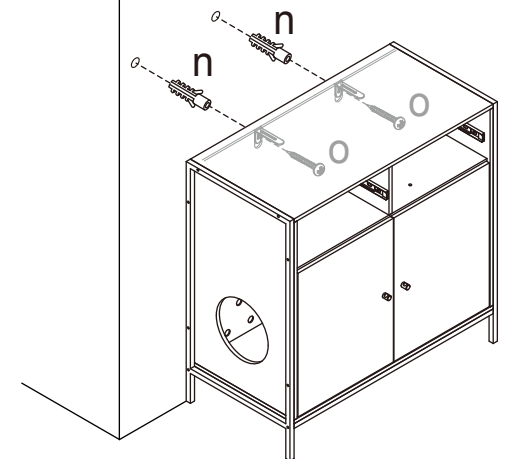





**STEP 27**

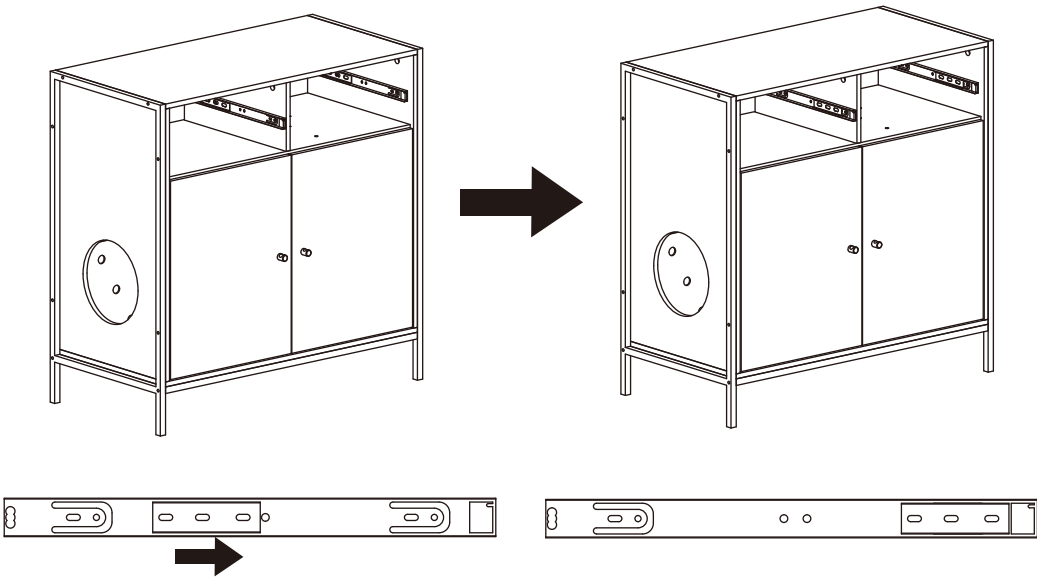 


**STEP 28**

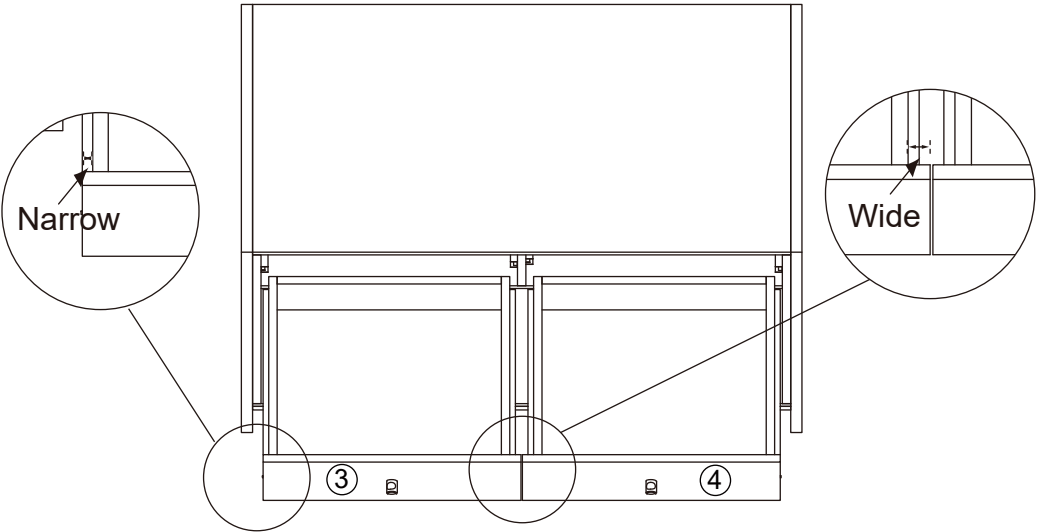 

**STEP 29**

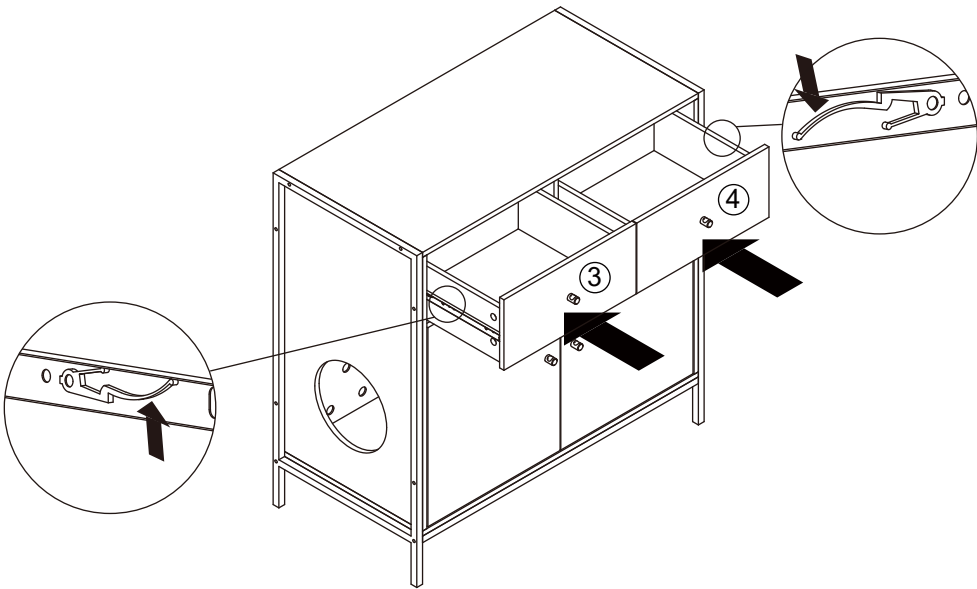 


**STEP 30**

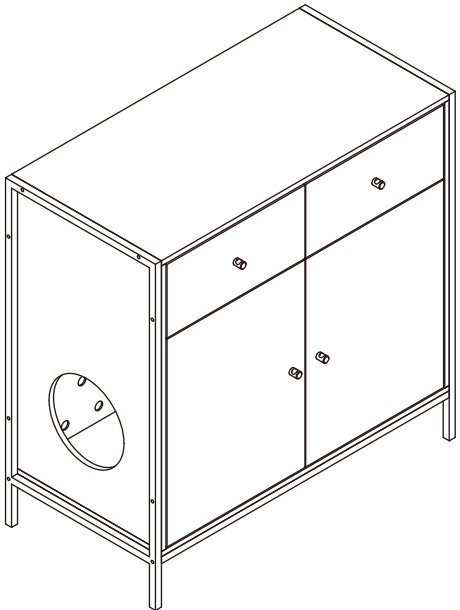 


## Hinger Adjustment Tips

Noted: The door might be scraping, bumping, misaligned when first assembly.

 
Please follow the below tips:

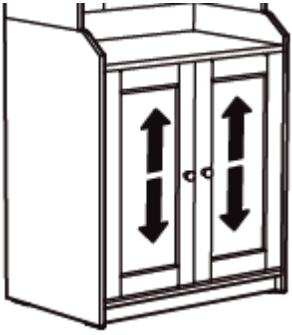


Adjust the door up and down

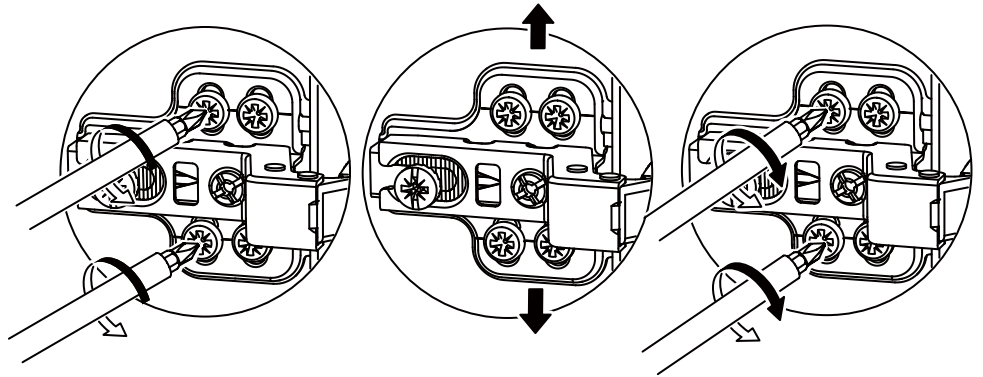 

 
1. Loosen the two mounting screws on both hinges, but only slightly. ...
2. Gently close the cabinet door.
3. With the door still closed, adjust the cabinet door to the desired height.
4. Open the cabinet door again, being careful not to jostle the door out of position.
5. Retighten the screws by hand.

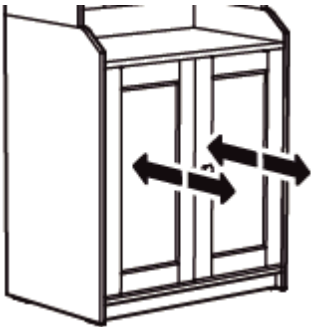


Move the door in and out

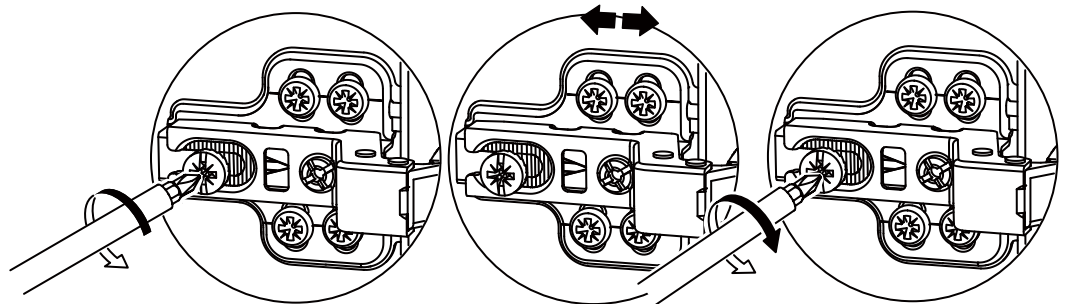 

 If the door doesn't meet the box at the top, adjust the top hinge toward the cabinet and/or adjust the bottom hinge away from the cabinet. If the door is gapped at the bottom, do the reverse.

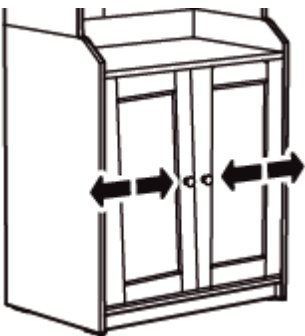

Move the door right or left

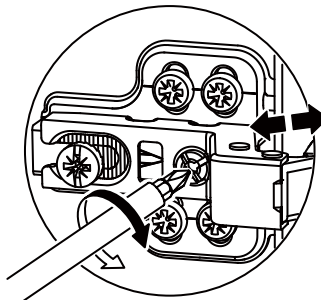 

You can adjust one or both hinges on each door, depending on how much correction it needs. If the door seems to be tilting down to the right, turn the side-to-side screw on the top hinge so the hinge pulls closer to the side of the cabinet box, moving the top of the door to the left.