# **Assembly Instructions**

### 43553938 OWEN SIDEBOARD OO

WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE.KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.


CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH.NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.


MAXIMUM SAFE LOAD: TOP:25KG; SHELF:5KG.

#### 1 Hardware List


	А		20pcs		В		20pcs	077777	С	Ø6x30mm	28pcs
<b>(1)</b>	D	M4x12mm	14pcs	())))))))))	Е	M4x35mm	10pcs	<b>O</b> I	F	M7x50mm	5pcs
<b>(11111)</b>	G	M4x12mm (golden)	4pcs		Н		2pcs		I	M4mm	1pc
077777	J	M8x30mm	5pcs		K		12 pcs		L		2pcs
0 0	М		2pcs		N	Ø30mm	5 pcs				


#### 2 **Parts List**

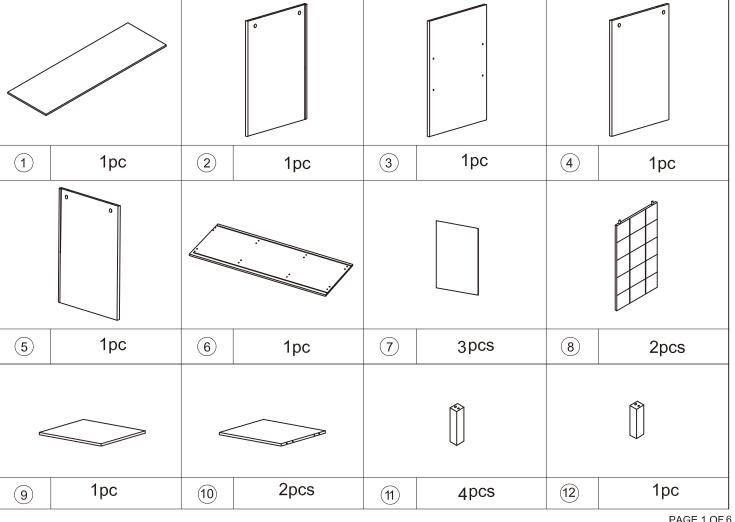


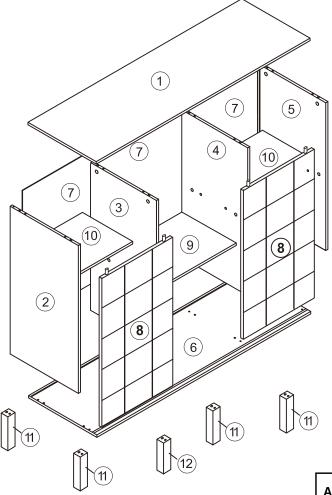


ATTENTION:
DO NOT TIGHTEN THE SCREWS FULLY
DURING ASSEMBLY. FULLY TIGHTEN
SCREWS AFTER THE FINAL ASSEMBLY
STEP.

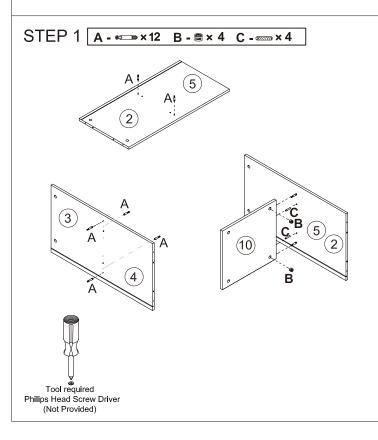

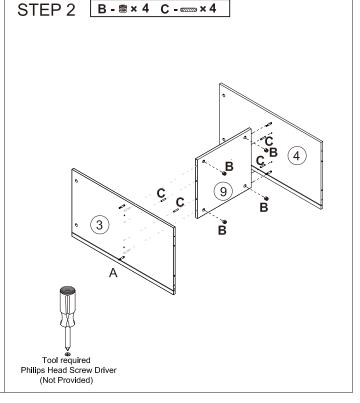


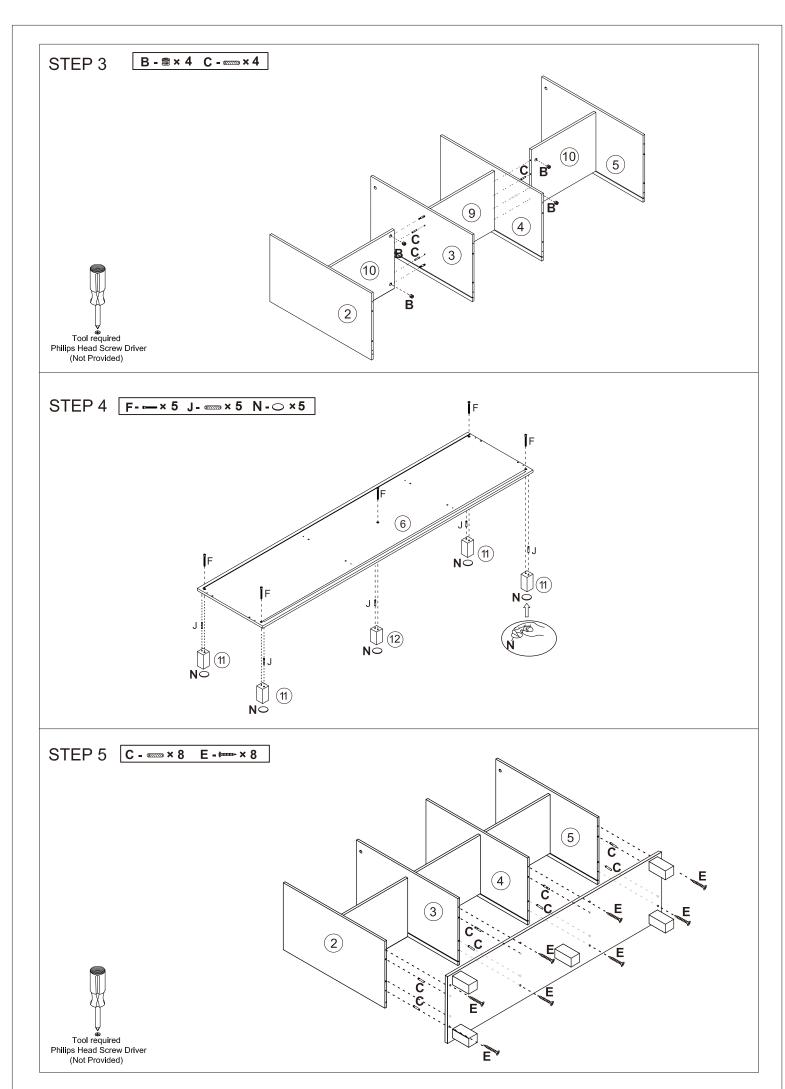


### STEP 6

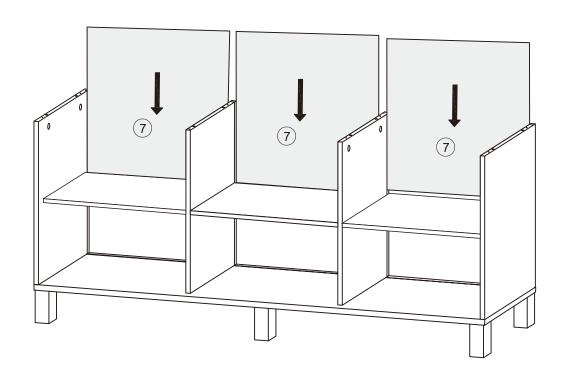


## STEP 7 A - \*----×8 C - \*----×8

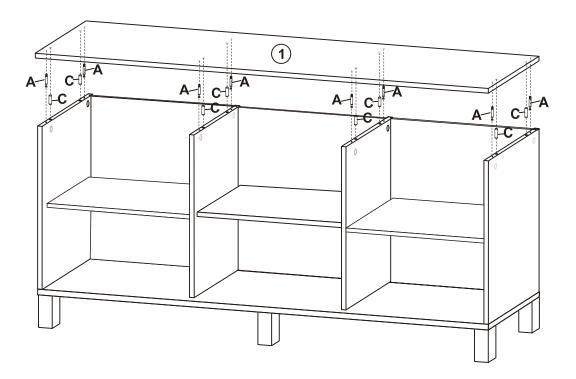

 


Please tighten the screws at the rear of the top plate first. Install the door panel and tighten the front screws


### STEP 8 B - ■ × 8 G - ▶ × 4 H - < × 2

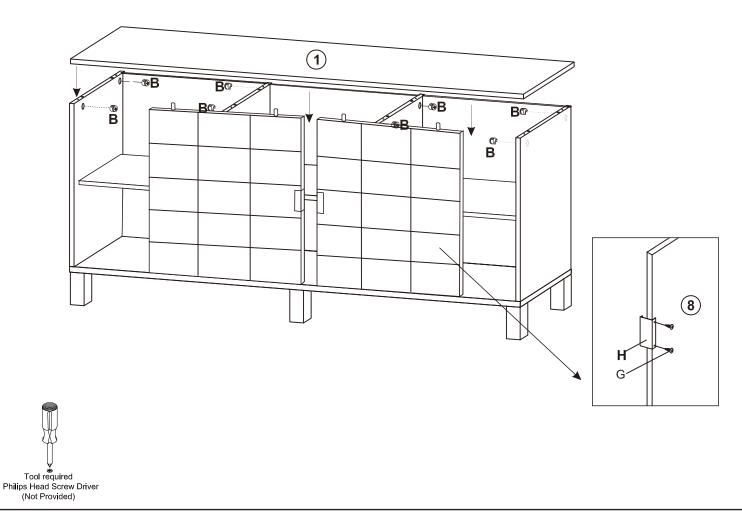

# STEP 9 **D- ■ ×**12 **K - 6 ×**12

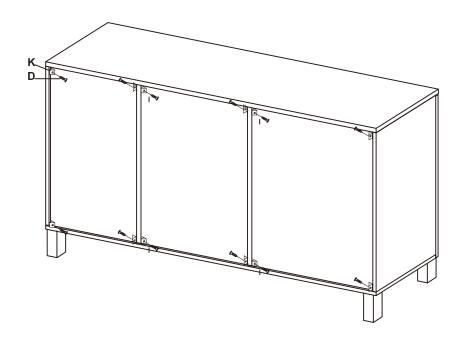


#### 

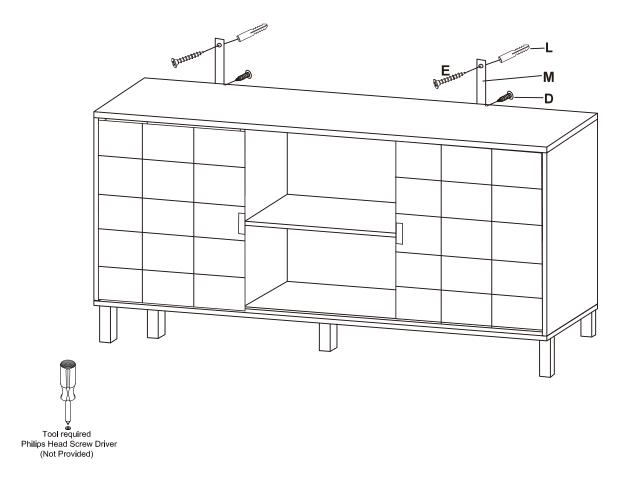





 

#### Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!

#### TOPPLING FURNITURE WARNING:

- ALWAYS secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

 Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

