

尺寸: 75x110mm
 材料: 80g书写纸
 颜色: 双面单色印刷
 工艺: 对折
 备注: 青色裁切线不要印刷出来

正面

75mm

110mm

anko
 Wireless Portable Charger User Manual
 K: 43-555-321 | T: 71-004-563 (Model No.: UC6.PD20.M2)

Accessory list:
 USB A - USB C charging cable X 1
 (Only for charging the power bank)

- Power Button
- USB-C Input/output
- Wireless Charging Status Indicator
- LED Indicator

Use the USB-C port to charge your mobile (Need to buy another Type C plug cable to charge your phone)

Charge the portable charger itself by a power adapter (not including)

背面

Specification:

Capacity	5000mAh battery capacity, 19.25Wh
Battery type	Lithium polymer battery
Input Port	USB-C
Rated Input	5V = 3A, 9V = 2A
Output Port	USB-C; Wireless charging
Rated Output	USB-C: 5V = 3A, 9V = 2.22A, 12V = 1.67A; Wireless (iPhone): 15W
Total Output	USB-C + Wireless Output: 15W (Max)
Charging Time	Approx. 1.5 hours

Discharge:

○○○○	●○○○	●●○○	●●●○	●●●●
1 LED flashing 0%-5%	1 LED on: 5-25% power remaining	2 LED on: 25-50% power remaining	3 LED on: 50-75% power remaining	4 LED on: 75-100% power remaining

Charge:

○○○○	●○○○	●●○○	●●●○	●●●●
1 LED flashing 0%-25%	LED1 keep on LED2 flashing: 25-50%	LED1-LED2 keep on LED3 flashing: 50-75%	LED1-LED3 keep on LED4 flashing: 75-99%	LED1-LED4 keep on: 100%

Led Color indication:

Indicator Color	Working status
Green	Standby, ready for wireless charging.
Blue	Wireless output
Blue Flashing (Error detected)	A metal object detected on wireless charging area.

Product Operation instruction

Charging status: When charging the powerbank, the white LED lights will flash, and all the white LED lights are on and still means the power bank is fully charged.No Charge status: the white LED light will light up when the power bank is connected, when there is no charge, the LED light will turn off after about 32 seconds.
 Button logic: Press the button, and white LED light will illuminate and will show the current capacity and then the green LED light is on, which means wireless output is standby.

Magnetic wireless charging status: Place the magnetic wireless charging device to the coil position, the magnetic wireless charging will automatically turn on with load, the blue light will be on for a long time.
 When the magnetic wireless and USB-C port are discharging simultaneously, the output of USB-C port will be prioritised and the magnetic wireless charger output will be turned off. At this time, you need to click the button, the magnetic wireless charger and USB-C port will discharging at the same time.
 Don't charge the same device with both the USB-C port and the magnetic wireless charger at the same time, the magnetic wireless charging output will be turned off automatically.

Important Safety Information:

- Before using the unit please read this manual carefully & Retain for Future use.
- Ensure children and infants do not play with plastic bags or any packaging materials.
- Children must not use this product without adult supervision.
- Keep away from water, liquids, or wet areas.
- Use a dry cloth to clean this product. Do not use chemicals on this product.
- Do not expose the product to fire or high temperatures over 45°C.
- Make sure the product has plenty of ventilation during charging.
- Do not place the product in direct sunlight, heat or the under the windshield.
- Do not drop, stand on, puncture, or apply excessive force to the product, as harsh impacts could damage the product. If unit is dropped or otherwise damaged, discontinue use immediately.
- If crushed, punctured, disassembled, exposed to fire or high temperatures, batteries may catch fire or explode.
- If the product swells or bulges, discontinue use immediately and dispose of the unit appropriately.
- Do not insert foreign object into the product.
- Do not try to repair or disassemble this product.
- Do not charge the portable charger and charge your device simultaneously.
- This product should be only operated from the type of power source indicated on the marking label.
- To preserve battery lifespan, use and recharge at least once every 3 months.
- For long-term storage (over 3 months), charge the device between 50 percent to 75 percent charge level.
- When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
- When disposing of this product. Do so responsibly following local government requirements.

WARNING: READ AND FOLLOW ALL ABOVE INSTRUCTIONS CAREFULLY. DO NOT DROP OR APPLY EXCESSIVE FORCE TO THIS PRODUCT. DO NOT EXPOSE TO HIGH TEMPERATURES. IMPROPER USE OR HANDLING OF THIS PRODUCT MAY RESULT IN FIRE OR EXPLOSION CAUSING SERIOUS INJURY OR PROPERTY DAMAGE.

The magnetic wireless charging efficiency may be affected by some phone cases. Try to remove the phone cases or use suitable magnetic phone case if necessary. Make sure there is no metal foreign object between the charging pad and phone case when charging.

12 Month Warranty
 Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

Made in China

Trusda 深圳市创世达实业股份有限公司

标记	修改前	修改后	修改日期	公差表				产品编号	UC6.PD20.M2	零件名称	说明书	零件料号	
				A	B	C	D						
				0-5	±0.07	±0.10	±0.15	±0.20	产品名称	移动电源	UC6.PD20.M2-M5451C	版本	C
①		更改内容	2025-03-31	5-20	±0.10	±0.15	±0.20	±0.30	材料			单位	mm
②		更改内容	2025-03-25	20-50	±0.15	±0.20	±0.30	±0.40	比例			日期	2025-03-31
				50-	±0.20	±0.30	±0.40	±0.60	制图:	审批:	批准:		

1

2

3

4