

## Cleaning & Maintenance:

- 1) Turn the appliance off before you start cleaning it.
- 2) Do not immerse the appliance in water. Clean the appliance with a dry cloth.
- 3) Do not use any lubricant, detergent, polishing agents, alcohol, steel wool, abrasive cleansers, chemicals or corrosive liquids on this appliance.

## Battery and appliance disposal:

- 1. This appliance has a lithium battery. Batteries contain substances harmful to our environment, please do not dispose of the appliance containing batteries with the normal household waste, instead hand it over to an official recycling point.


## 2. Trouble Shooting

Problem	Possible Cause	Solution
LED Light is not bright enough or it does not turn on	The battery is running low or is out of power	Charge the appliance as guided

anko

MUSHROOM LIGHT  
K: 43559244 | T: 71034287  
SLR-24241

## INSTRUCTION MANUAL

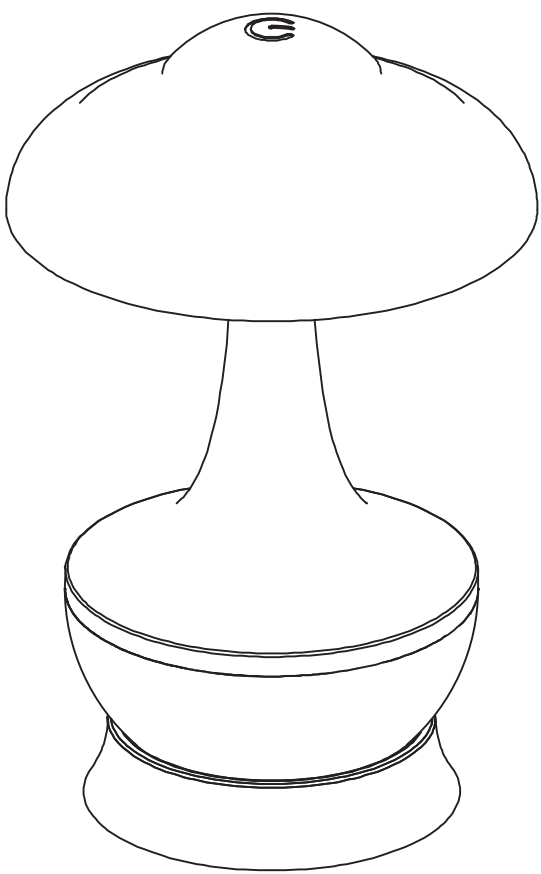

## Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before you use the appliance and save it for further reference.

### ⚠ WARNING

- Check the appliance before you use it, do not use the appliance if it has any crack, gap or any other damage.
- Do not attempt to repair, disassemble, or modify the appliance by yourself to avoid accidents.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
- For indoor use only.

### ⚠ CAUTION


- This appliance has a lithium battery. Do not place or store the appliance for long periods of time in a hot or humid environment. If you do not intend to use the appliance for a long time, store the appliance after fully charged.
- This appliance contains recharge battery and LED lights that are non-replaceable.
- Ensure charging adaptor used is compatible with a 5V DC SELV 1A, 5W rating.
- Only charge the product with an approved and suitable USB charger that complies with the requirements of the relevant standards.
- Use provided charging cable to charge the product only.

## Specifications:

- Charging Voltage / Current: 5V  $\overline{\text{---}}$  / 1000mA 5W
- Type of Battery: Li-ion 3.7V 650mAh non-replaceable
- Ta: 25°C

## Product Description:

- ① ON/OFF touch switch
- ② Charging indicator light
- ③ Charging port
- ④ USB cable

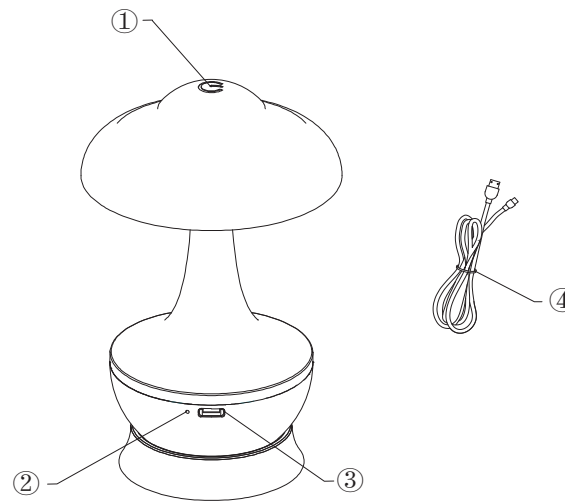

## Using the Appliance:

For better use experience, please read below instructions carefully:

1. Use provided charging cable to fully charge the unit before use.
2. This appliance needs to be charged if the light ray is not bright enough. Please use 5V DC SELV 1A 5W adaptor(not included) to charge.
3. Charging the appliance takes about 2-4 hours, and it can be used continuously for more than 5-8 hours for the most bright status.
4. The charging indicator light (at the bottom edge of the table lamp) will be red while the table lamp is charging and after being fully charged, the indicator light will be green.
5. Touch the switch① to turn on the light. Sequentially short touch the switch① to change different colour and mode. Long press the switch① 2 seconds or press 21st time to turn off the light.