



Power Switch

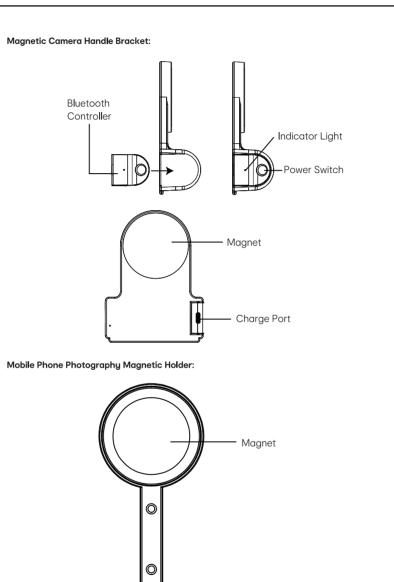


Threaded Hole

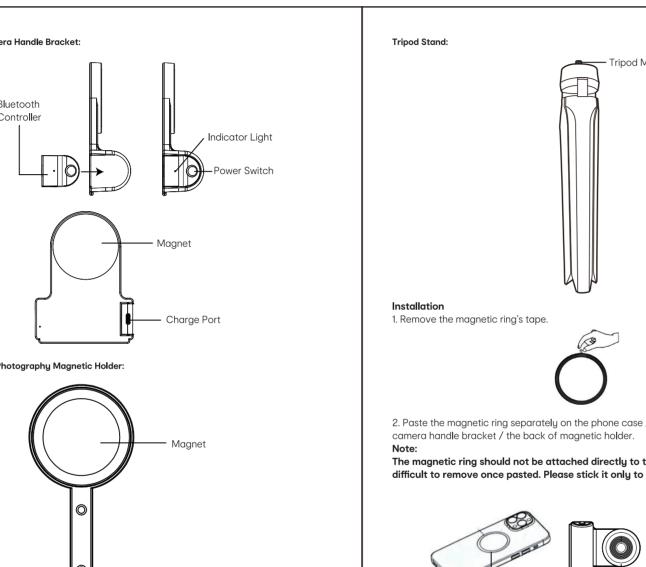


Tripod Stand: Tripod Mount Screw 1. Remove the magnetic ring's tape. 4. Mount the light on the back of holder.


Paste the magnetic ring separately

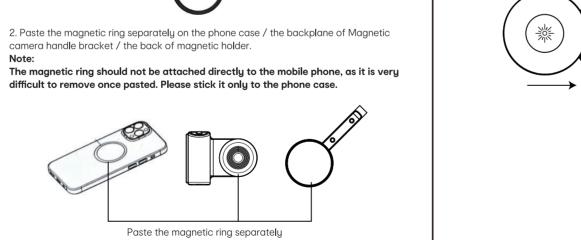


3. Attach the magnetic holder to the tripod stand by screwing its threaded hole onto the tripod's mounting screw. Then, adjust the tripod to a stable angle for use.

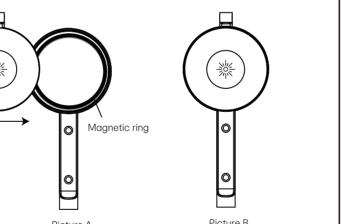


5. Combine the magnetic holder and the camera handle bracket.

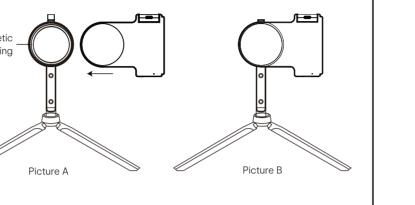


6. Place the mobile phone onto the magnetic part of the camera handle bracket, then rotate the selfie light upward to complete the assembly.

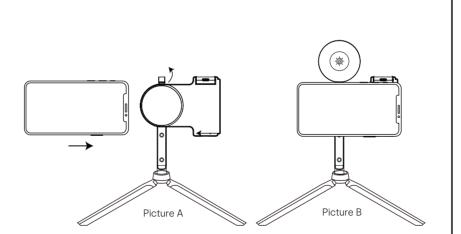


7. You can use this product in combination as above or separately as below suggestions: a. Use the selfie light and the mobile phone together.

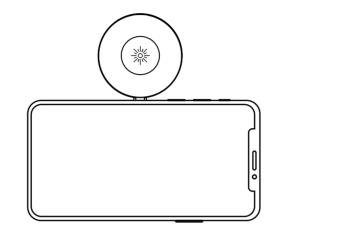


b. Use the camera handle bracket and the mobile phone together. phone.

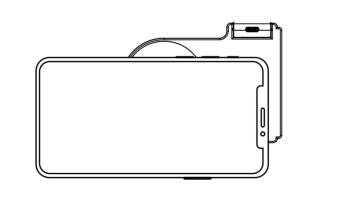

c. Combine to use the selfie light, camera handle bracket and mobile phone.

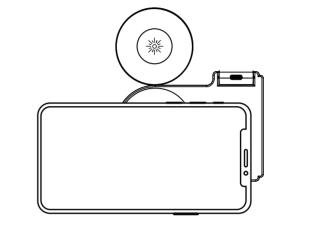

d. Combine to use the selfie light, tripod stand, photography magnetic holder and mobile

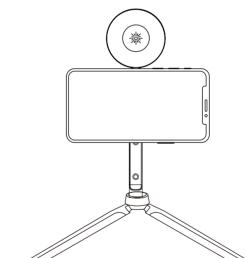

How to use the selfie light

- Turn the switch to the **ON** position to activate the light. Turn the switch to the **OFF** position to turn the light off. 2. Light Mode Switch

- Touch the switch to turn on the light, short press to switch between 3 color modes: White, Warm, Mixed(white-warm).

- Long press the switch to gradually increase or decrease the light brightness.

a. With constant power on, the light mode and the light brightness will be remembered and restored by the next light on.

b. Please turn off the light when not in use.

How to use the Camera handle bracket

1. Take the Bluetooth controller off the handle bracket.

2. Long press the Power Switch and the blue indicator light flashes. 3. Turn on the Bluetooth and search for the Bluetooth name "Anko43559343". Once

connected, the blue light will be off.

4. Open the connected camera, short press the power switch:

- In camera mode, it will take pictures.

- In video recording mode, it will start recording. (Short press again to stop recording.) 5. Long press the Power Switch to turn off the controller when not in use. Always place the controller back into the slot securely to prevent loss. Our goods come with guarantees that cannot be excluded under the Australian

The supplied USB charging cables should be inserted into the standard USB power source rated at 5V DC 1A specification.

The indicator will keep lighting in red during charging and turns blue after fully charged. Bluetooth controller on camera handle bracket:

The indicator will keep lighting in red during charging and turns off after fully charged. Note: If the battery is low/totally run out, the product will not work at all, please charge before use.

> Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

> Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is

used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA

CUSTOMER SERVICE: KMART AU: 1800 124 125 KMART NZ: 0800 945 995 TARGET AU: 1300 753 567

120 mm