
4 IN 1 CANOPY TRIKE ASSEMBLY INSTRUCTIONS

Keycode: 43559985




Spare parts

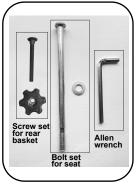

1.Turn the main frame upside down



2.Install the front fender and insert the front fork to the main frame. Keep the arrows facing forward and turn the frame right side up.

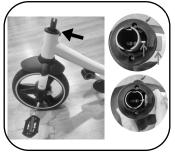

3.Ensure the spring bean is backwards, and check it touches the red button as shown.



4.Install the front basket and handlebar are inserted correctly (arrows must be facing forward). Check the handlebar cannot be removed post installation.



5.Inser wheels the scr rear fra

5.Insert the rear wheels, then tighten the screw under the rear frame




6.Pull the red ring down to fold and unfold the pedal



7.Install the rear basket with the screw set



8.Fix the seat tightly using the bolt set and Allen wrench. Open the hook of backseat, insert the bracket as shown, and insert the head of guardrail into the holes until the button pops out. Fasten the crotch protector.

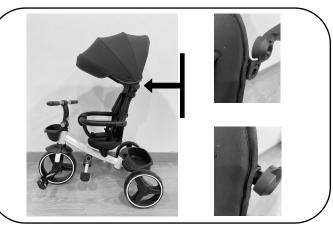

9.Install the canopy by inserting the buckle, adjust the angle of canopy by pulling out both buckles



10.Install the push bar, ensuring it locks well and cannot be removed. Assemble the bottle cage.

DISASSEMBLY INSTRUCTIONS



1. Disassemble the bottle cage, then press the rear button to disassemble the push bar



2.Pull up the two side buckles at the same time to disassemble the canopy




3.Use the Allen wrench to disassemble the seat



4.Take off the rear basket by rotating the bottom of the clubs



5.Pull the red ring down to fold the pedal

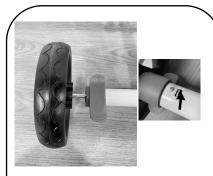

6.Release the screw under the rear frame, then press the spring side of screw to disassemble the wheels




7.Press the red button to pull up the handlebar, and take off the basket



8.Press the red button and pull up the frame to take off the front fork and fender

FUNCTION INTRODUCTION

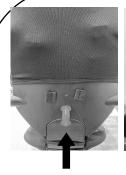





Push up to fold handlebar



Folded




Adjust the push bar



Rotate seat



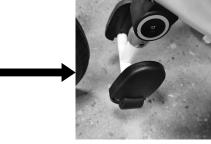




Fold up the pedals, then pull down the red ring to fold the pedal frame



Take care folding and unfolding, as injuries may occur

Clutch Operation


Rotate this button with clockwise to release the pedals by ride mode, and rotate this button with anti-clockwise to lock the pedal.

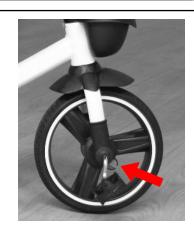

Combination Braking System Operation

Put down the brake device to stop the tricycle, and use foot to pull on it to release brakes.



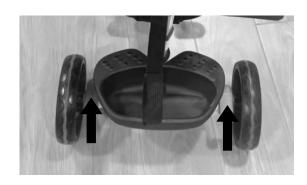

Do not park the tricycle on the slope

Shoulder Belt Adjustment Operations



Remove the cover



Take out the shoulder belt,and remove the buckles to release the shoulder belt



There are three levels to adjust depending on child's height and weight



Put the belt in the proper holes



Assemble the buckle to fit the belt tightenly, and put on the cover



Use the harness at all times

Safety Belt Operations

Insert ABCD into the safety snap socket, press the belt buckle to release the belts; A and D for waistband belts, B and C for shoulder belts;

For O part, pull the buckle right or left to adjust the belt.





Never leave the harness buckled when not fitted to a child in the tricycle, it's not toy, avoid strangulation with the loops belts.


Load instructions



Max load is 0.5kg for cup



Max load is 0.5kg for front basket

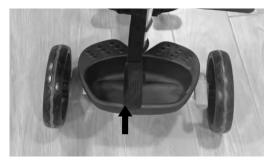

Max load is 1kg for basket

4 IN 1 MODE











To avoid injury or death:

- 1. Do not leave children unattended.
- 2. Always apply the brakes whenever the tricycle is stationary.
- 3. Secure the child in the harness at all times.
- 4. Do not carry extra children or bags on this tricycle.
- 5. Make sure children are clear of any moving parts if you adjust the tricycle, otherwise they may be injured.
- 6. Do not use this seat with any other models of tricycle.
- 7. To be care if the tricycle use on stairs or escalators.
- 8. Never leave the harness buckled when not fitted to a child in the tricycle.
- 9. Use the tether strap to stop the tricycle rolling away.
- 10. Do not park the tricycle on the slope
- 11. Use the harness at all times
- 12. Never leave the harness buckled when not fitted to a child in the tricycle, it's not toy, avoid strangulation with the loops belts.

There is potential for fingers or parts of the body to be injured when the vehicle is being folded or unfolded, and that due care should be exercised



- 1. Not Recommended for a child under 12 months old.
- 2. An adult must read these instructions carefully before use, otherwise it might compromise the child's safety.
- 3. Please retain this instruction sheet permanently for future reference.
- 4. This trike should not be used near open fire or exposed flame.
- 5. Assembly should be done by an adult.
- 6. Only loading one child at a time.
- 7. It's prohibited to use the spare parts not provided by the manufacture.
- 8. Children are not allowed to climb out of the guardrail or stand on the seat.
- 9. Disposed the plastic bag to avoid suffocation after open the carton.
- 10. Adult supervision is required when using this trike.
- 11. The tricycle is designed for use on flat or gently sloping surfaces and may unstable on higher sloping and uneven sufcaces; and user should be made aware of the possibility of the tricycle tipping over.
- 12. Maximum weight limit is 20kg.

MAINTENANCE

- 1. Inspect all fasteners prior to each use.
- 2. Do not ride the trike in any extreme weather conditions.
- 3. Always check your trike for loose screws, ageing parts, broken materials and stitching, replace and repair when needed.
- 4. Keep the trike clean, and it is strictly forbidden to place sharp objects or blades on the trike to avoid injury to children.
- 5. Use neutral detergent when washing the textile with the water of 10°C-40°C, to avoid the fabric damaged.
- 6. Clean the trike with dry towel.
- 7. Assemble or unassemble this trike should follow this instruction sheet strictly to avoid damage.

Made in China