

anko

12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

 
Statement

- This product shall not be connected to power supply source exceeding PS1 (5V d.c. 1A).
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Earbuds shall be charged by the supplied charging unit only.

Clip Open Wireless Earbuds Operating instructions

includes:

- › Clip Open Wireless Earbuds
- › Charging cable
- › Use manual

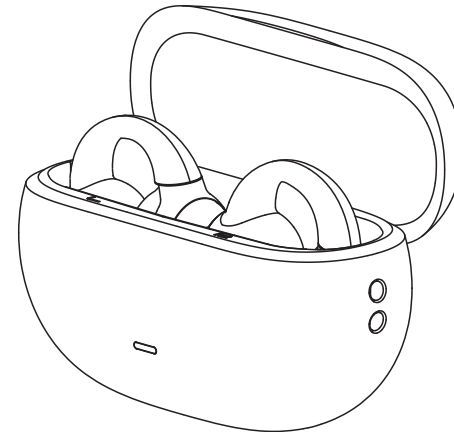

MADE IN CHINA


CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

K: 43560066 | T: 71047690
MODEL:27TW03

240x160mm

 Function overview:

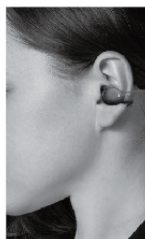

Clip the earbud on the ear gallery as if wearing an ear clip.

After wearing, adjust the position of the earbud until it reaches the sound effect.

 
The clearest position.

*Earclip earbud with small round balls in front and large round balls. Be careful not to make mistakes before and after.

Touch position and operation mode

The touch is located on the upper side of the left and right earbud.

You can perform basic operations through fingerprint touch.

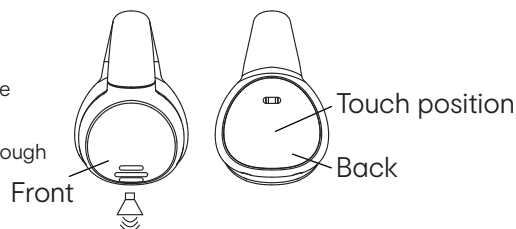

How to use these earbuds:

Touch button operation

Pause double click L or R side earbud

Play double click L or R side earbud

Next song triple click L side earbud

Previous song triple click R side earbud

Volume up click L side earbud

Volume down click R side earbud

Power ON / OFF

Power ON

Option 1: Press and hold the both earbud touch button 4s

Option 2: take the earbuds out of the charge case

Power OFF

Option 1: Press and hold the both earbud touch button 4s

Option 2: put the earbuds back to the charge case

Voice assistance

Press and hold the touch button 2s and then release

Music mode/gaming mode switch

Click the touch button 4times

Specifications:

Model No:
27TW03

Version:
V5.4

Support profiles:
A2DP, AVRCP, HFP

Working Distance:
10 meters

Music Time:
APPROX 5 HOURS (AT 80% VOLUME)

Talk time:
Up to 4 Hours

Standby time:
Up to 30 Hours

Charging voltage:
DC 5V

Charge time:
earbuds 1.5 hours, charge box 2 hours

Cable length:
0.3m

Pairing window time:
5 minutes

Pairing the earbuds with Bluetooth devices

- › Once the earbuds is powered on, it is in pairing mode (LED flashes) and will pair to the last paired device (if available).
- › Pair the earbuds in Bluetooth menu in mobile phone and once it is paired, you can hear a pairing tone.
Bluetooth Name: 'anko43560066'

Phone calls

- › Double click L or R earbud touch button to pick up/hang up phone calls.
- › press and hold the either earbud touch button 2s to reject the calls.

Playing music

When the earbuds connects with the mobile phone via Bluetooth you can enjoy music through the earbuds wirelessly.

Battery Charging

This true wireless earbuds is powered by rechargeable Li-ion battery.

Please use the accessory USB cable to recharge the battery.

- › Insert USB charging cable into a suitable USB port.
- › Connect charging cable with the charge box USB port .

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.