

Assembly Instructions

43560387/43566105 BAILEY CHEST OF DRAWERS



 









 

WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.





CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

MAXIMUM SAFE LOAD:15KG FOR TOP PANEL, 7KG FOR EACH DRAWER.


①

  Hardware List

	A	M6x35mm	29pcs
	B	Ø15x9mm	29pcs
	C	Ø6x30mm	22pcs
	D	M4x35mm	22pcs
	E	M4x40mm	2pcs
	F	M7x40mm	5pcs
	G		1pcs
	H		8pcs
	I	M3x16mm	8pcs
	J		2pcs
	K		2pcs
	L	M3x12mm	42pcs
	M	Ø8x30mm	5pcs
	N		5pcs

	CL		3pcs
	CR		3pcs
	DL		3pcs
	DR		3pcs















 
②

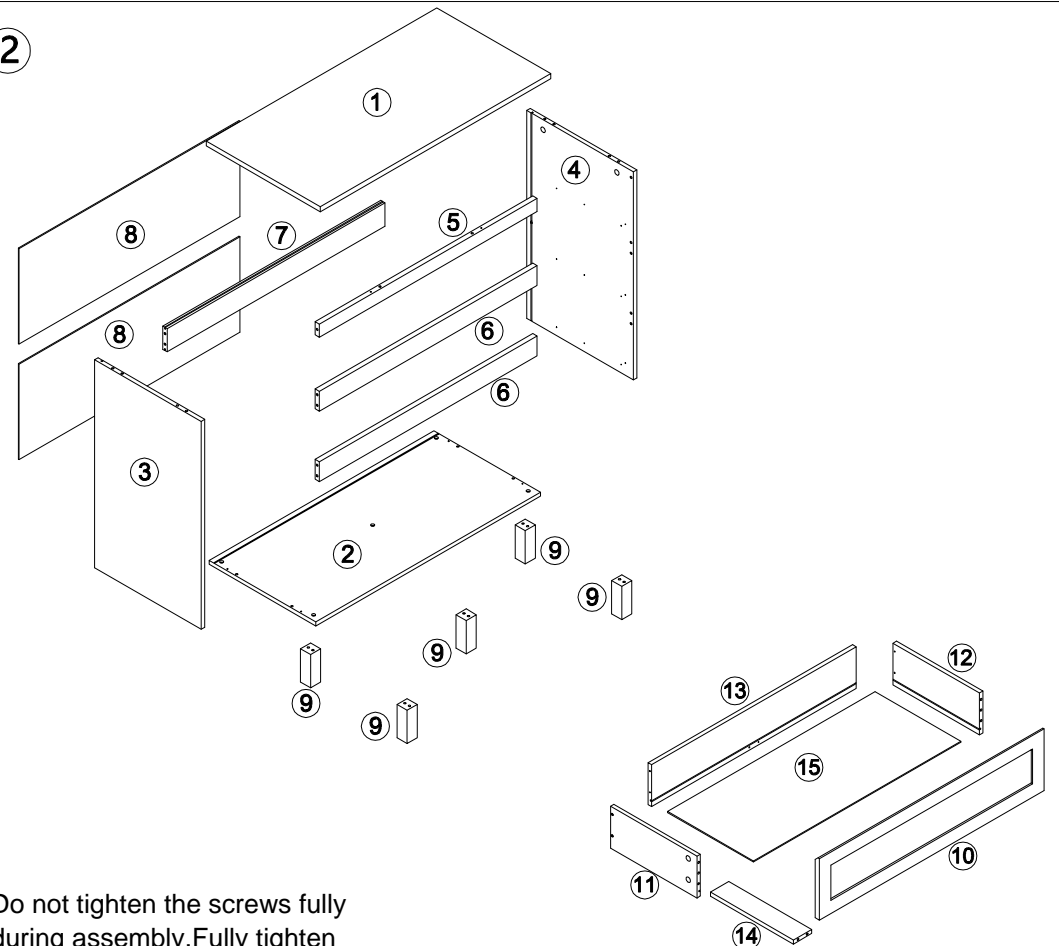




Do not tighten the screws fully during assembly. Fully tighten screws after the final assembly steps.

               
x 3

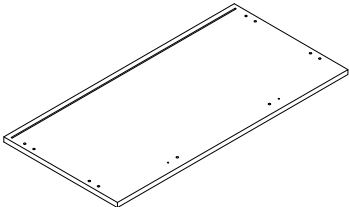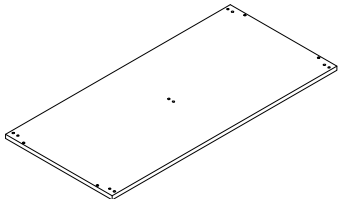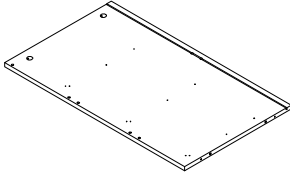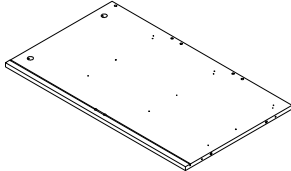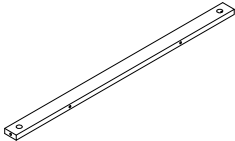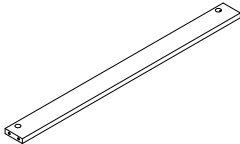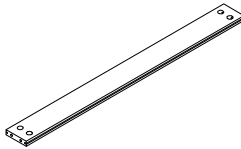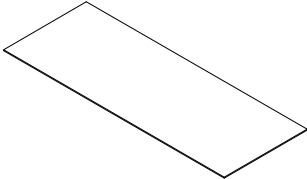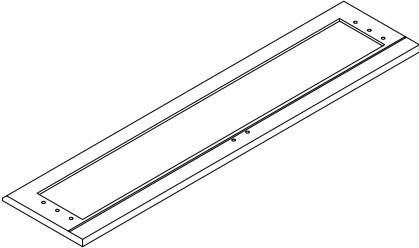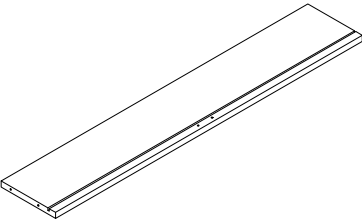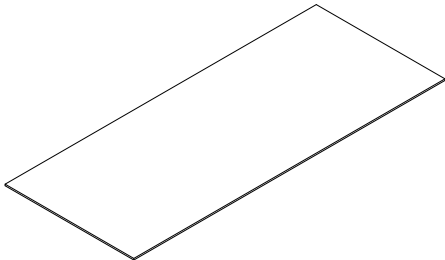3

			
① 1PC	② 1PC	③ 1PC	④ 1PC
			
⑤ 1PC	⑥ 2PCS	⑦ 1PC	⑧ 2PCS
			
⑨ 5PCS	⑩ 3PCS	⑪ 3PCS	⑫ 3PCS
			
⑬ 3PCS	⑭ 3PCS	⑮ 3PCS	

STEP 1:


	L x 24
	CL x 3
	CR x 3

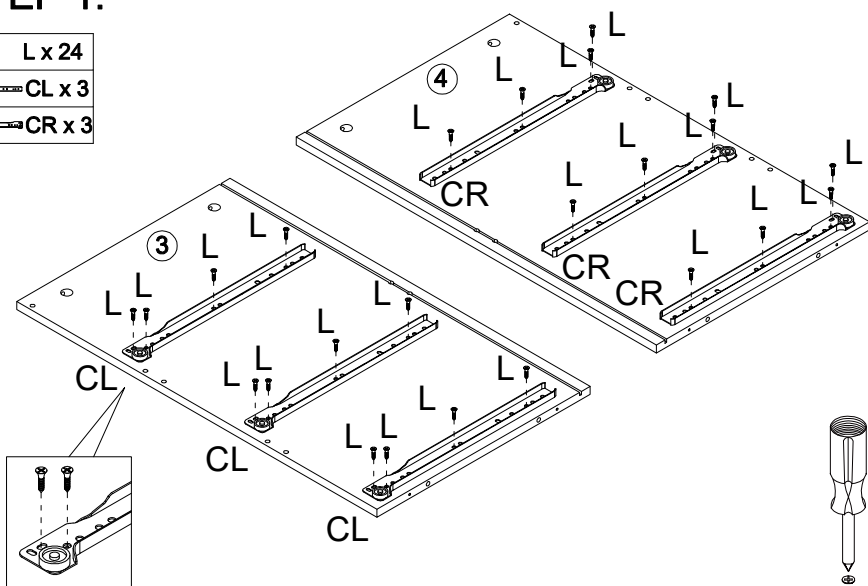 

Tool required
Philips Head Screw Driver
(Not Provided)



 STEP 2:

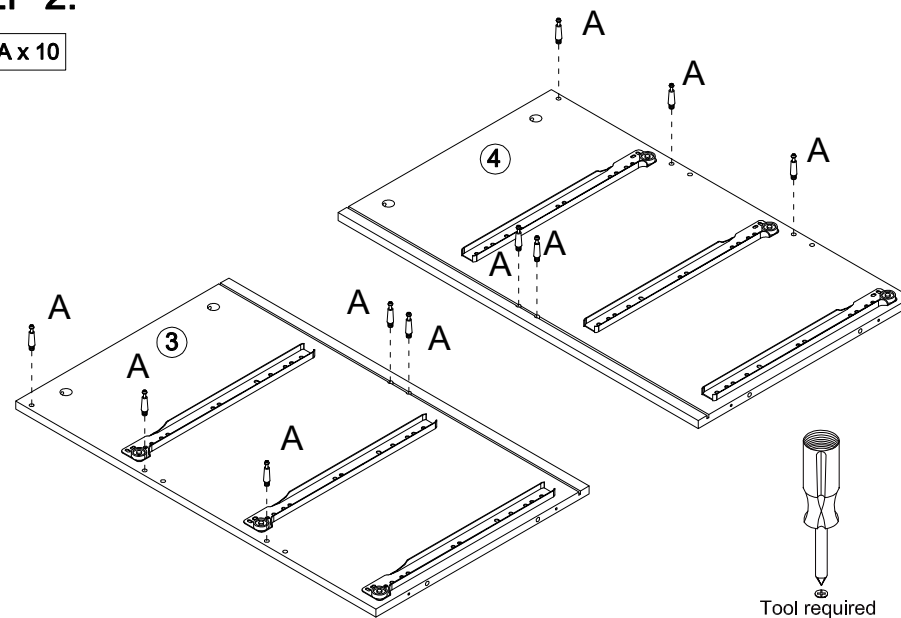
	A x 10
---	--------



 Tool required
Philips Head Screw Driver
(Not Provided)


 
STEP 3:


	B x 5
	C x 2

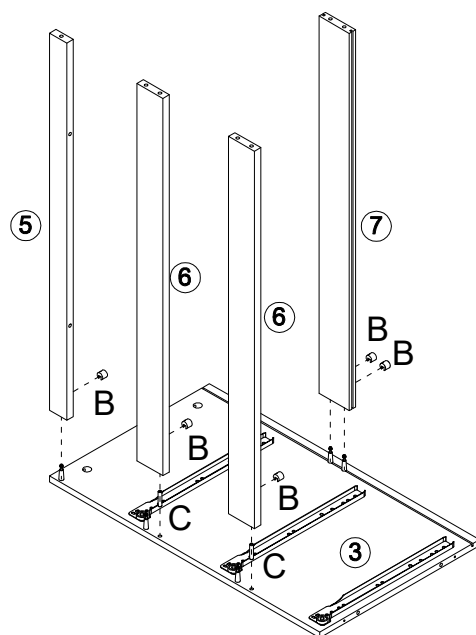

Tool required
Philips Head Screw Driver
(Not Provided)

STEP 4:



	B x 5
	C x 2

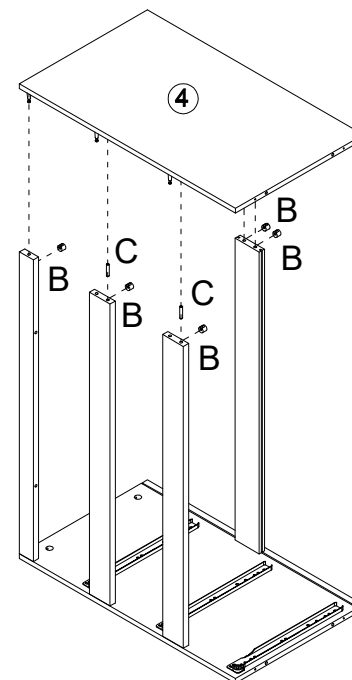 


Tool required
Philips Head Screw Driver
(Not Provided)

  STEP 5:

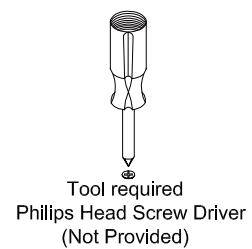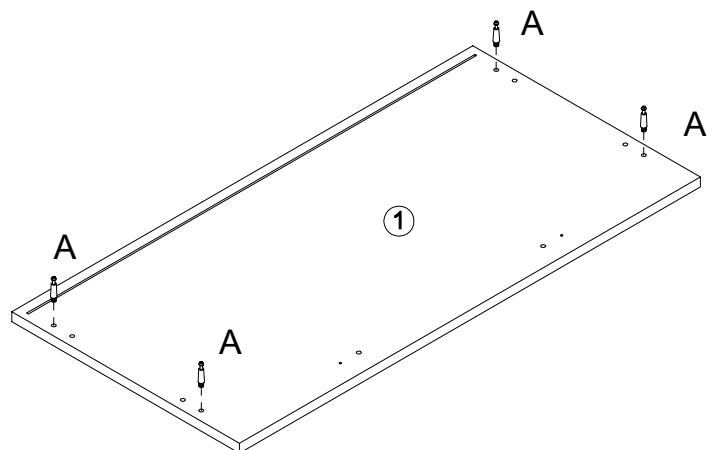


 A x 4


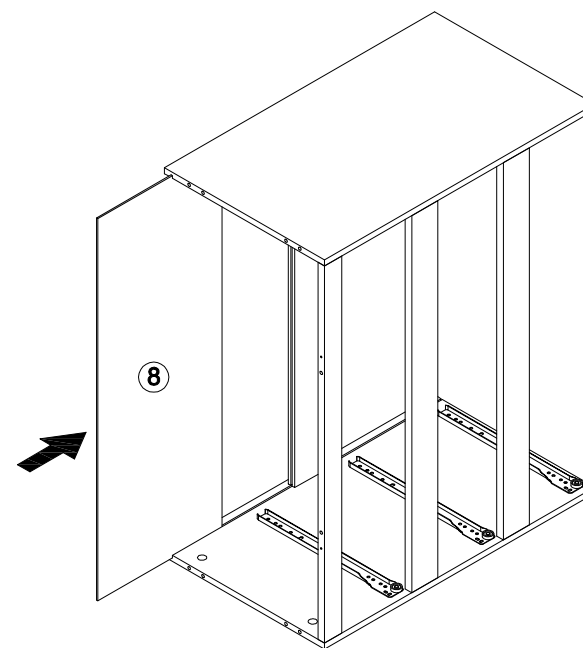 


STEP 6:






 
 
STEP 7:

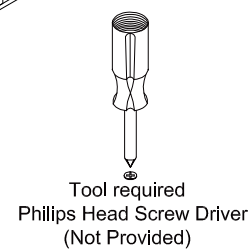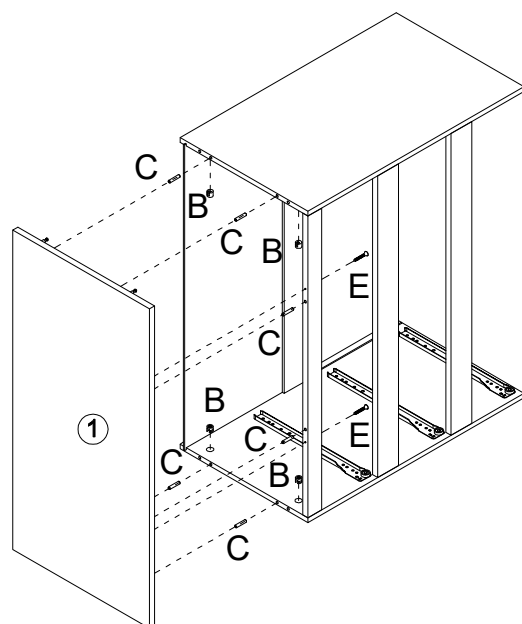 B x 4
 C x 6
 E x 2




 STEP 8:

 F x 5
 G x 1
 M x 5

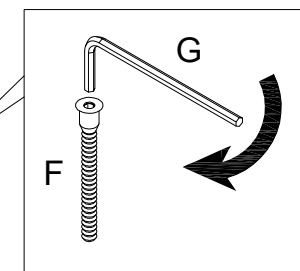 
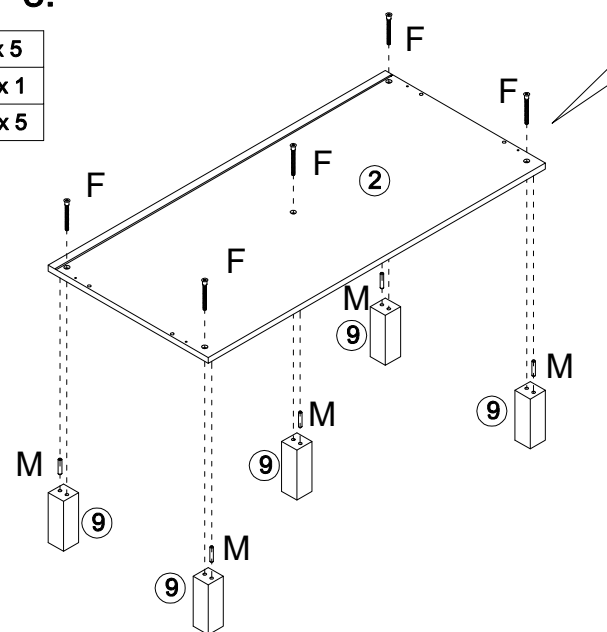 


 STEP 9:

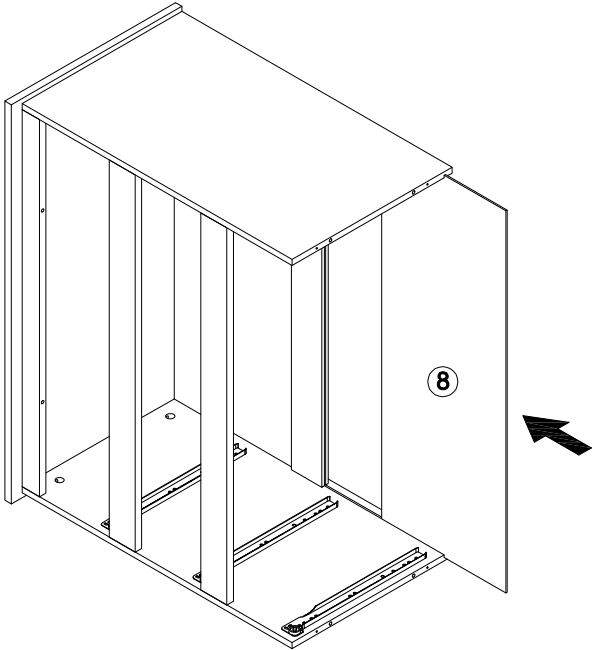




STEP 10:

  - C x 4
- D x 4
- N x 5

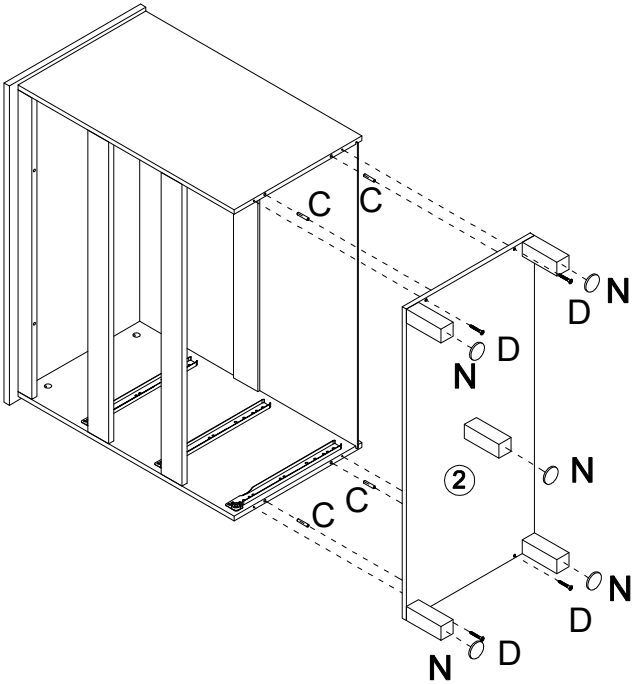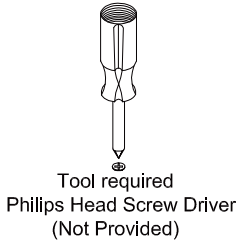


STEP 11:

   - H x 8
- I x 8
- J x 2

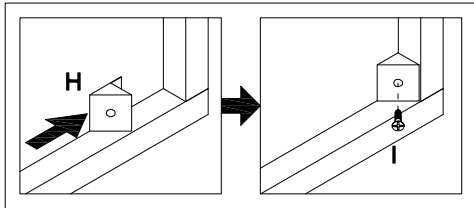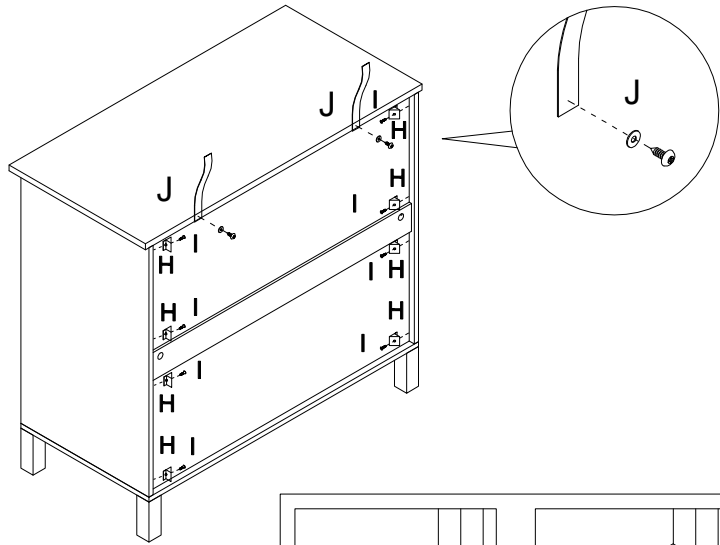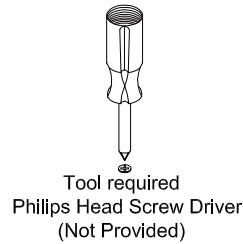


STEP 12:

 
- D x 18

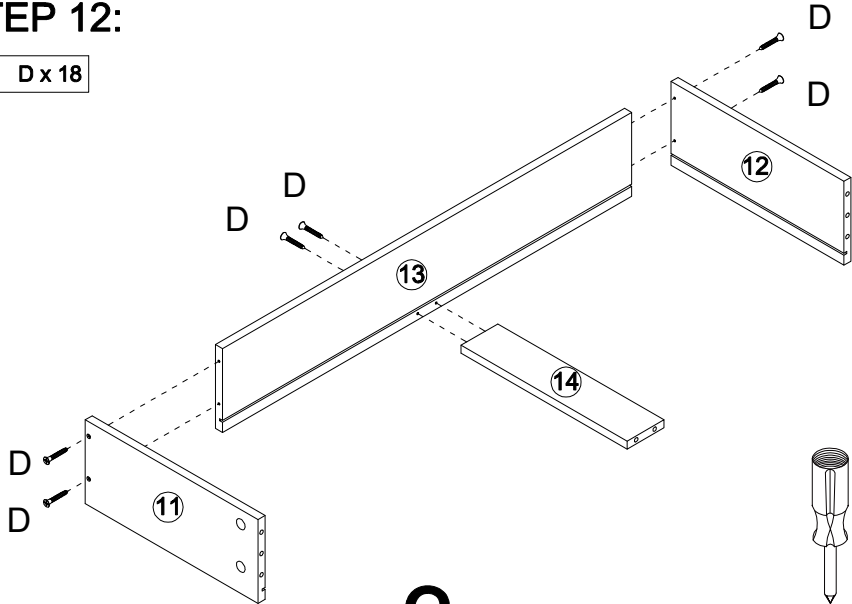



x 3

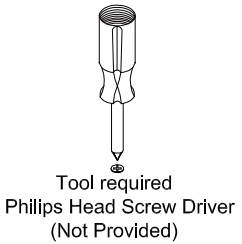 



 
STEP 13:

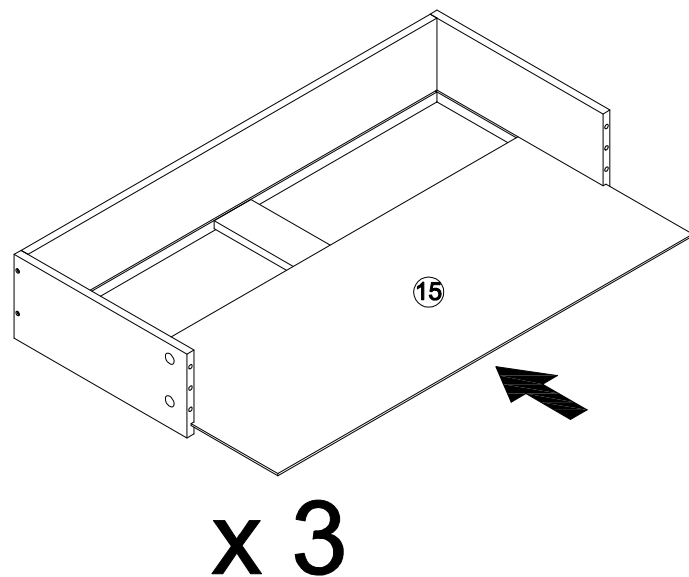



 
 
STEP 14:

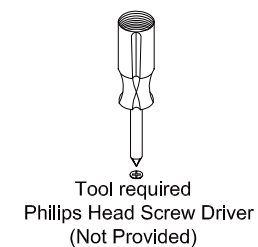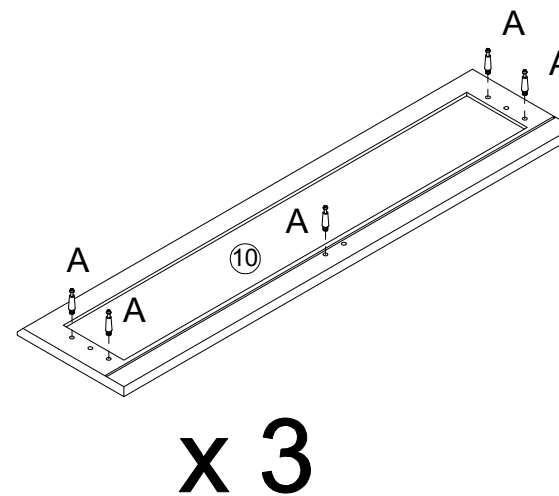

   
STEP 15:

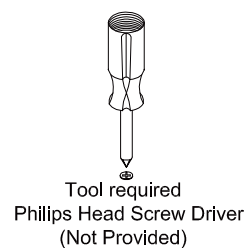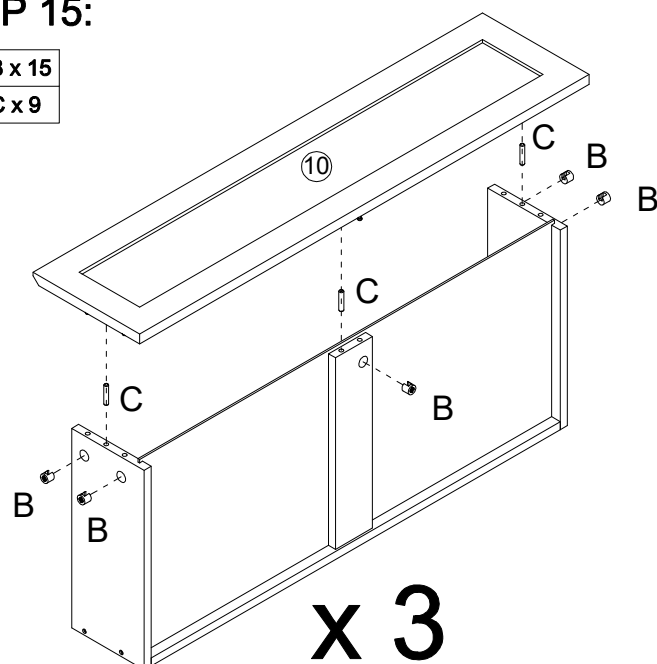

    STEP 16:

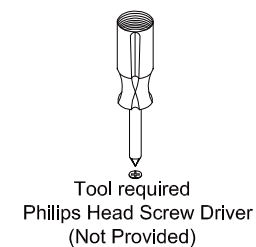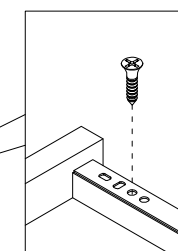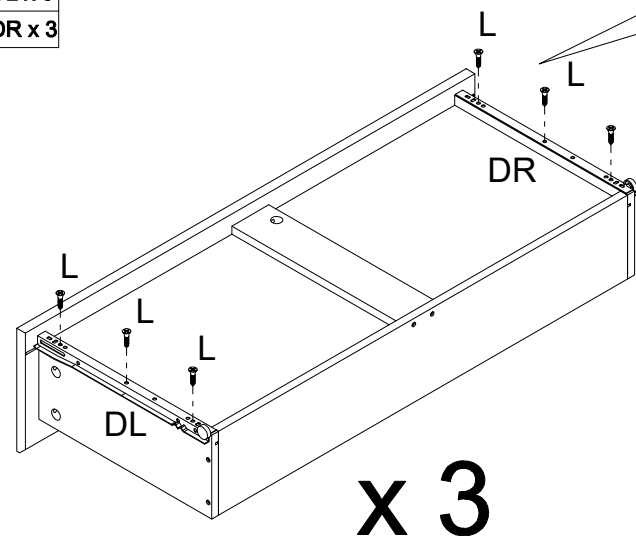



 STEP 17:

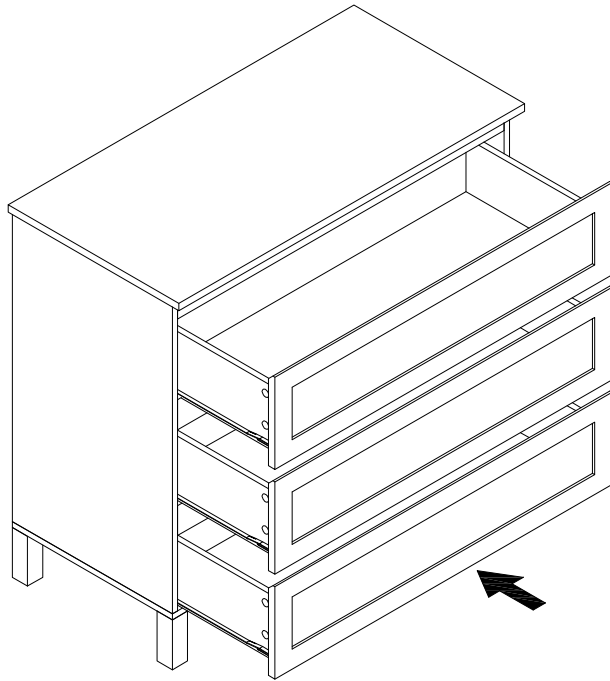

STEP 18:

   K x 2

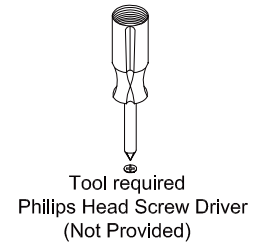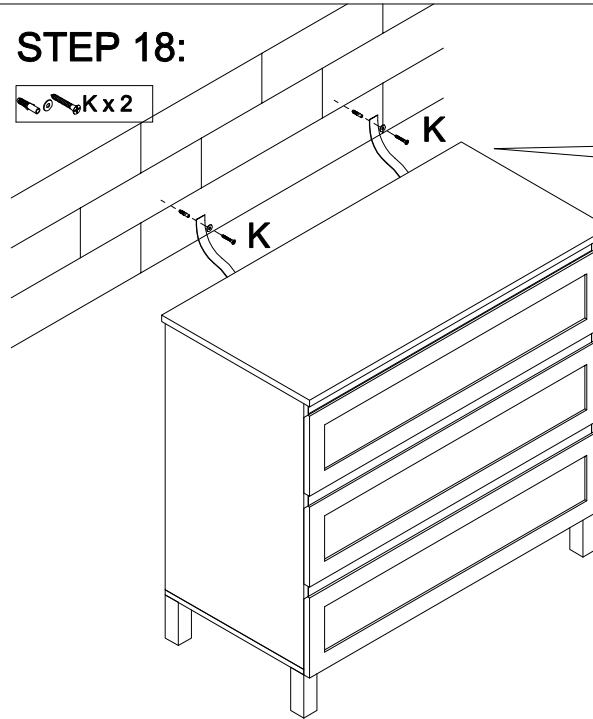


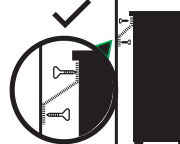 
TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**


⚠ WARNING

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This is a permanent label. Do not remove!



TOPPLING HAZARD

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

