

Assembly Instructions

43560400/43566143 BAILEY BEDSIDE TABLE

WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

 
MAXIMUM SAFE LOAD:10KG FOR TOP PANEL, 5KG FOR EACH DRAWER.

① Hardware List













	A	M6x35mm	16pcs
	B	Ø15x9mm	16pcs
	C	Ø6x30mm	16pcs
	D	M4x35mm	12pcs
	E	M4x40mm	2pcs
	F	M7x40mm	4pcs
	G		1pcs
	H		4pcs
	I	M3x16mm	4pcs
	J		1pcs
	K		1pcs
	L	M3x12mm	28pcs
	M	Ø8x30mm	4pcs
	N		4pcs

	CL		2pcs
	CR		2pcs
	DL		2pcs
	DR		2pcs

②

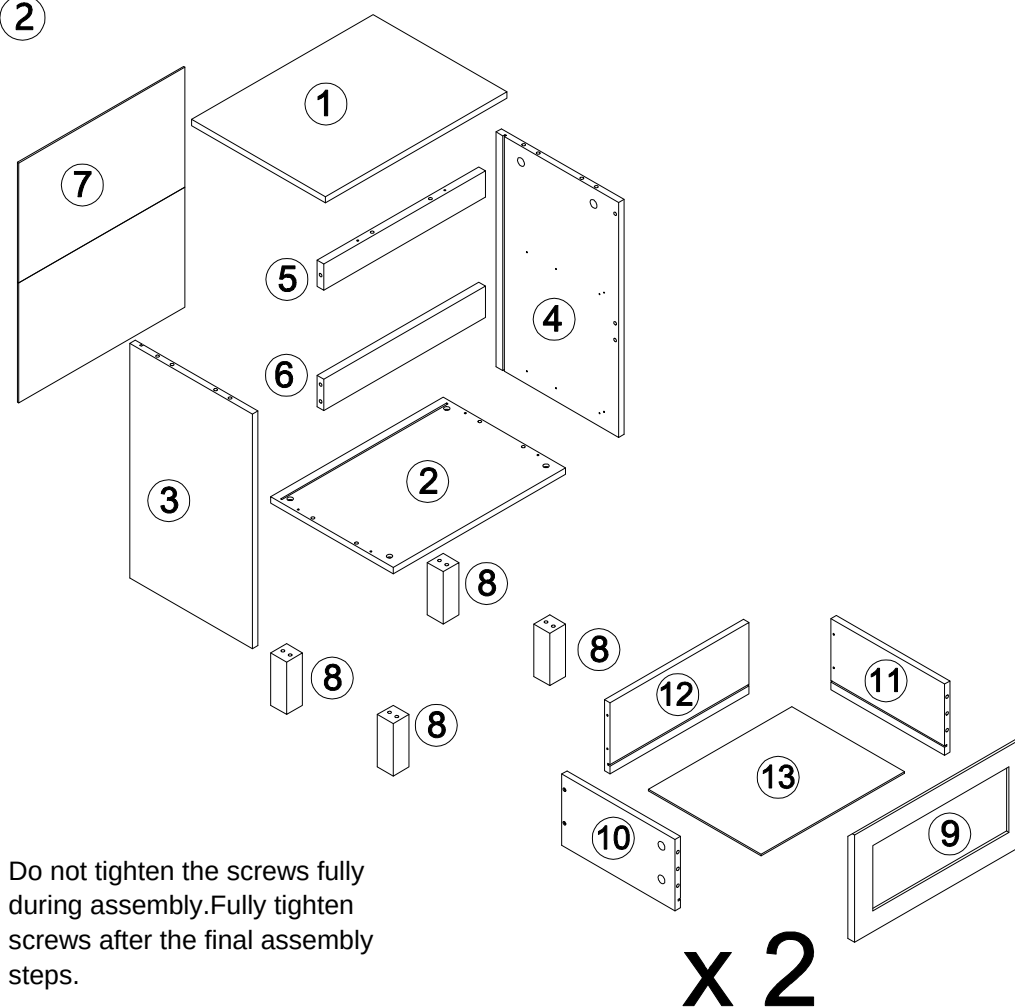


3

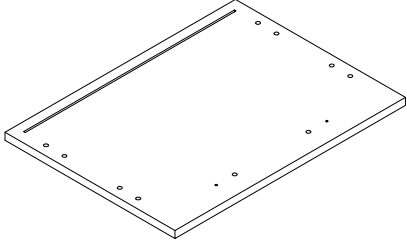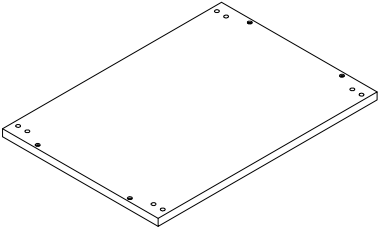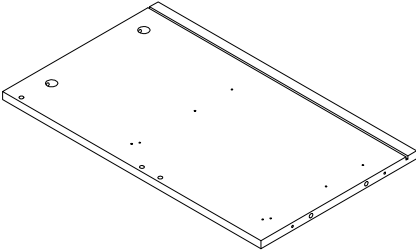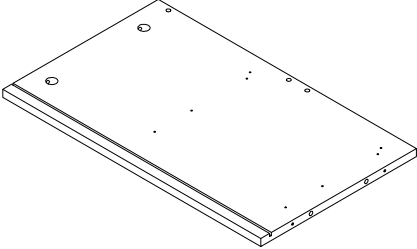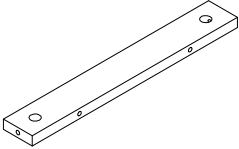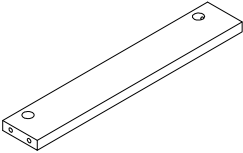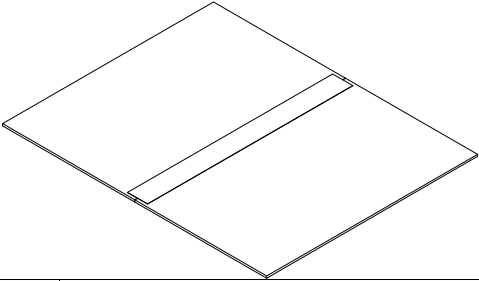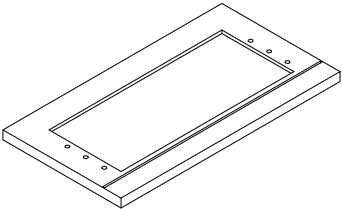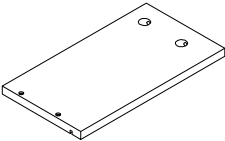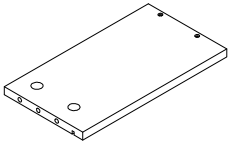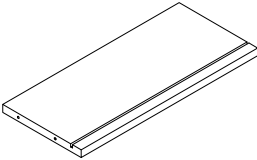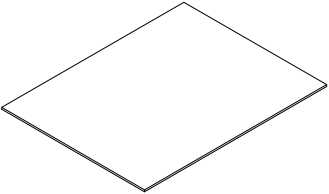            
			
① 1PC	② 1PC	③ 1PC	④ 1PC
			
⑤ 1PC	⑥ 1PC	⑦ 1PC	⑧ 4PCS
			
⑨ 2PCS	⑩ 2PCS	⑪ 2PCS	⑫ 2PCS
			
⑬ 2PCS			

STEP 1:

 -  A x 4
-  L x 16
-  CL x 2
-  CR x 2

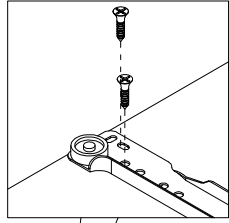


 Tool required
Philips Head Screw Driver
(Not Provided)

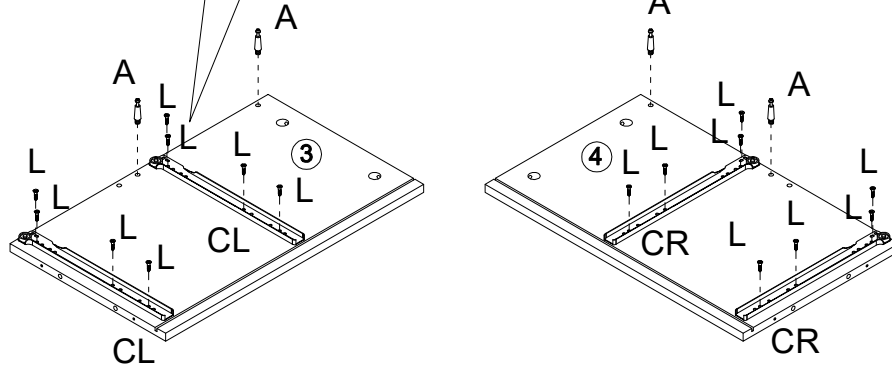

STEP 2:

 
-  B x 4
-  C x 2

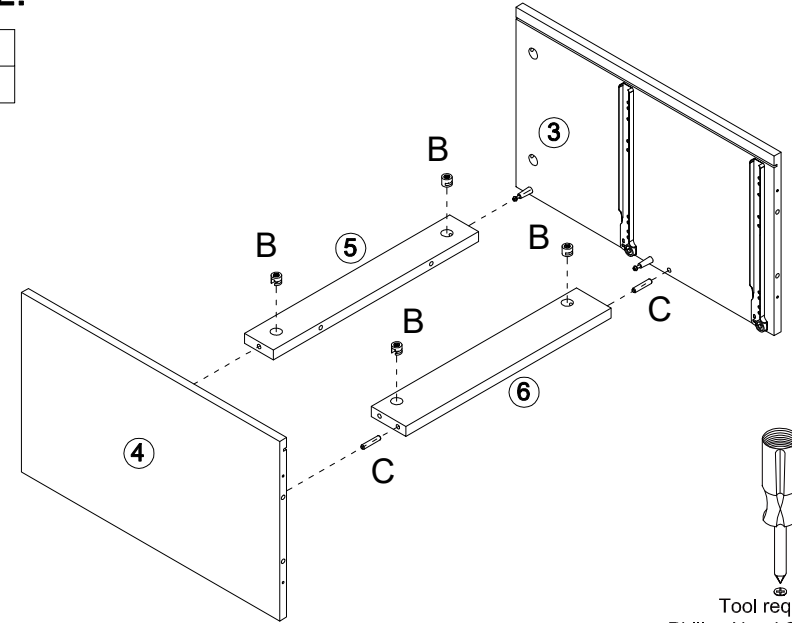

Tool required
Philips Head Screw Driver
(Not Provided)

STEP 3:

 
-  A x 4

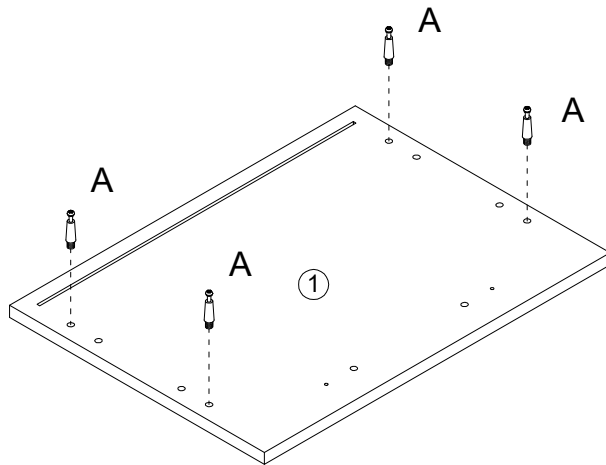

Tool required
Philips Head Screw Driver
(Not Provided)


STEP 4:

 -  B x 4
-  C x 6
-  E x 2


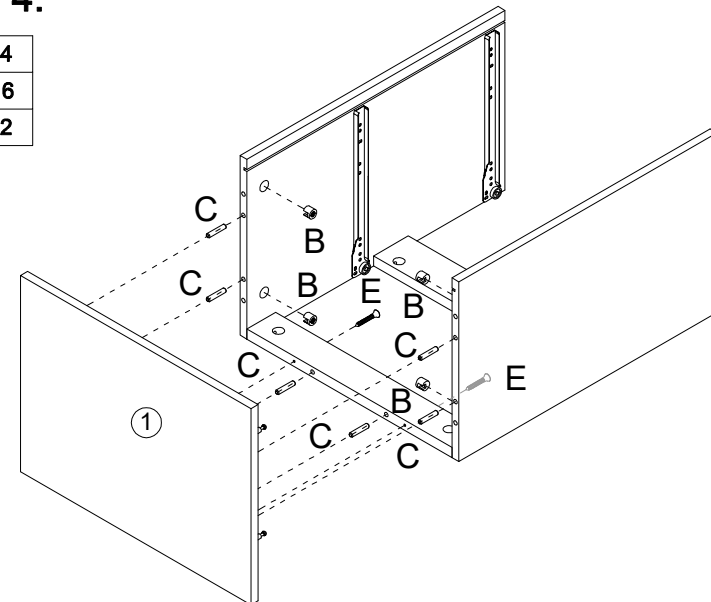


Tool required
Philips Head Screw Driver
(Not Provided)


 
STEP 5:

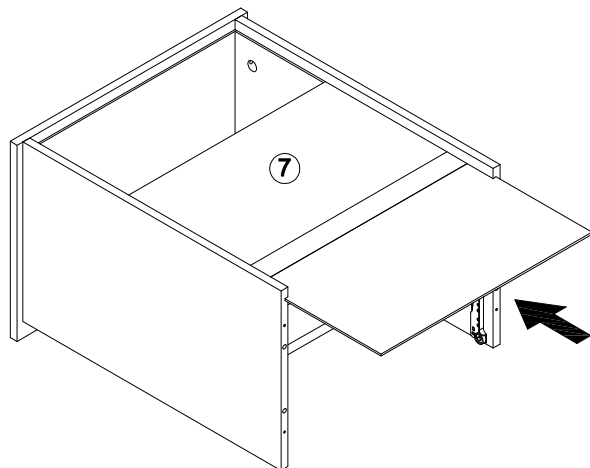

  STEP 6:

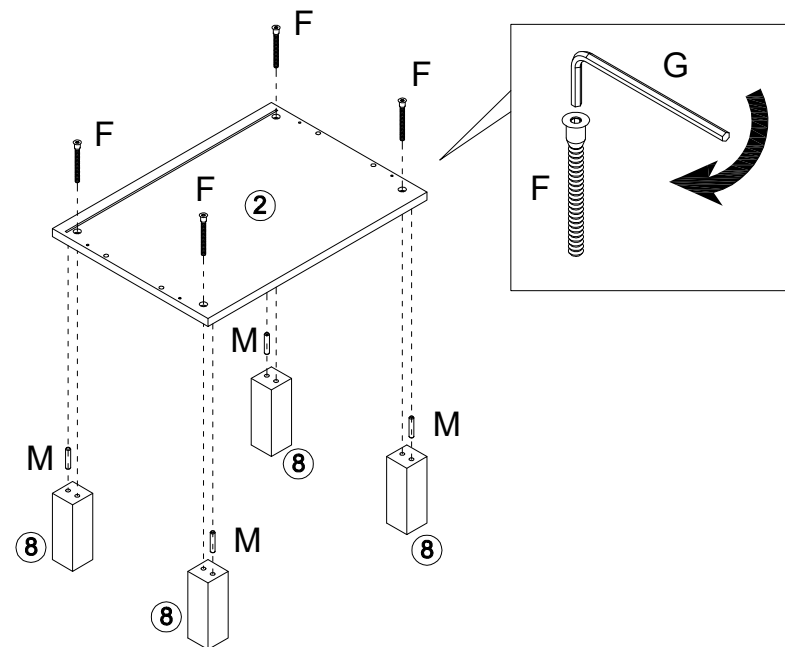



  STEP 7:

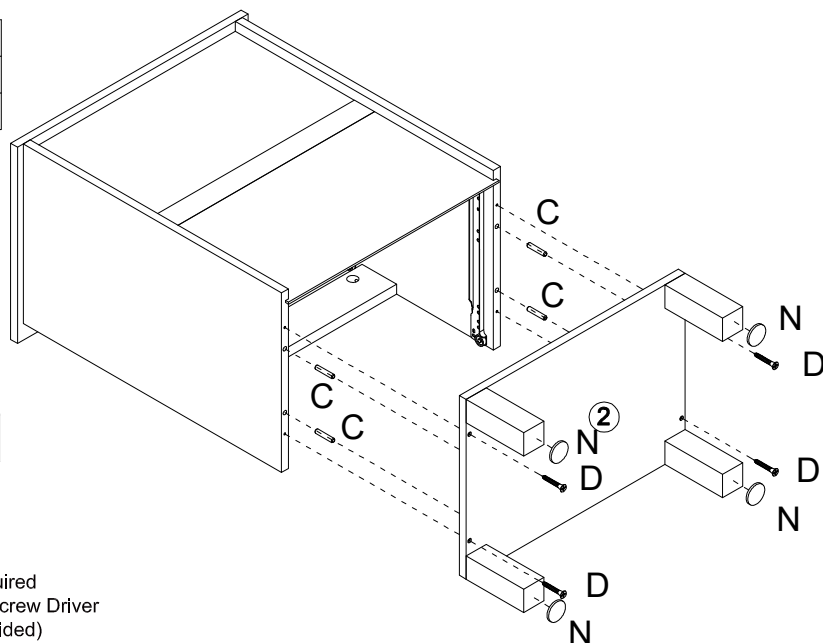


Tool required
Philips Head Screw Driver
(Not Provided)

  STEP 8:

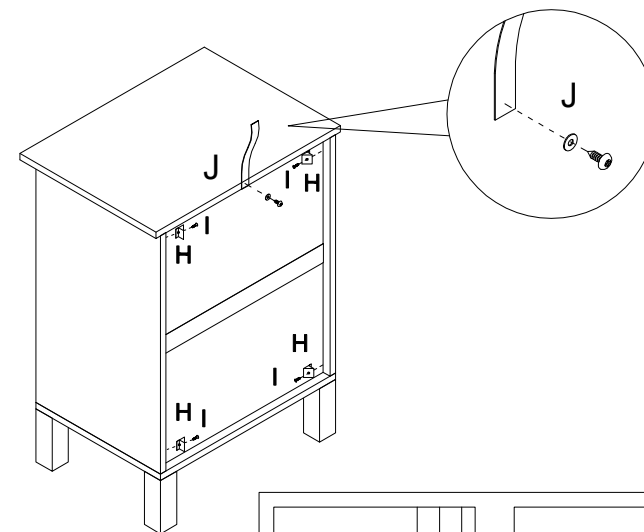


 Tool required
Philips Head Screw Driver
(Not Provided)

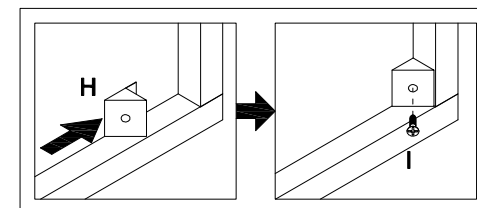


STEP 9:

  D x 8

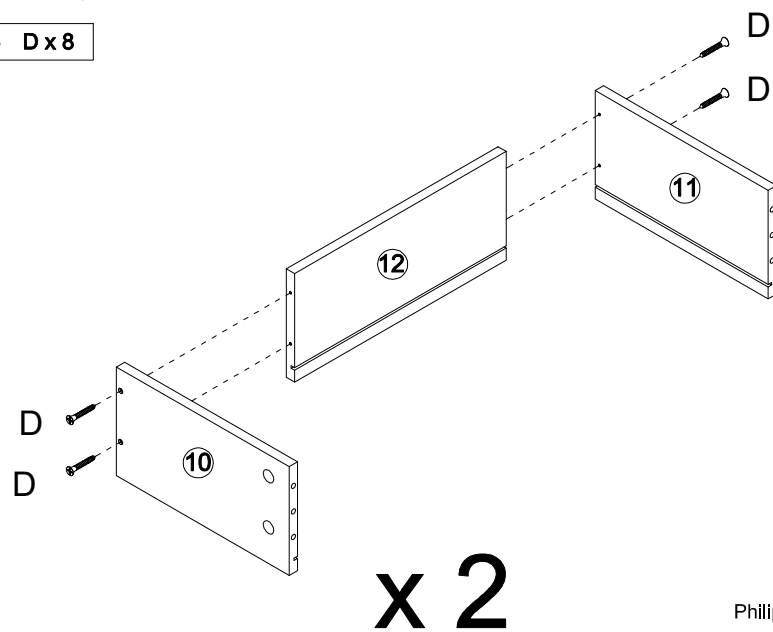



Tool required
Phillips Head Screw Driver
(Not Provided)

 STEP 10:

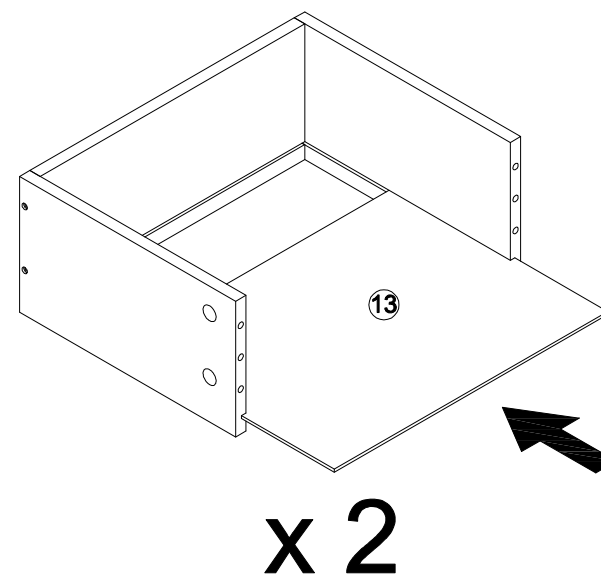

STEP 11:

 
 A x 8

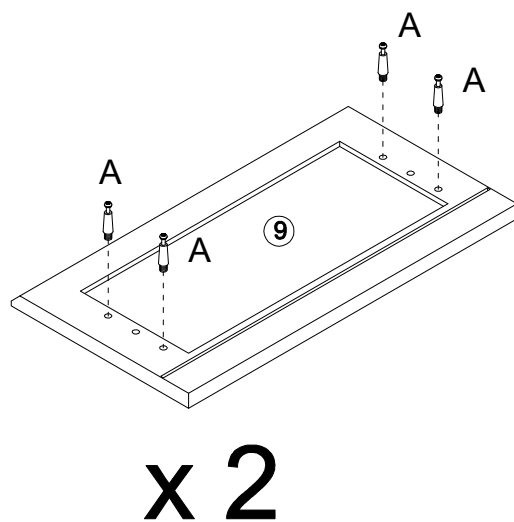


Tool required
Phillips Head Screw Driver
(Not Provided)

STEP 12:

 
 B x 8
 C x 4

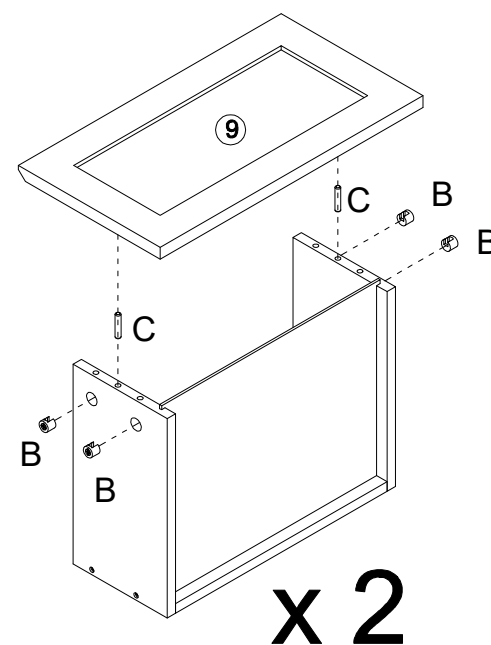


Tool required
Phillips Head Screw Driver
(Not Provided)

STEP 13:

 
-  L x 12
-  DL x 2
-  DR x 2

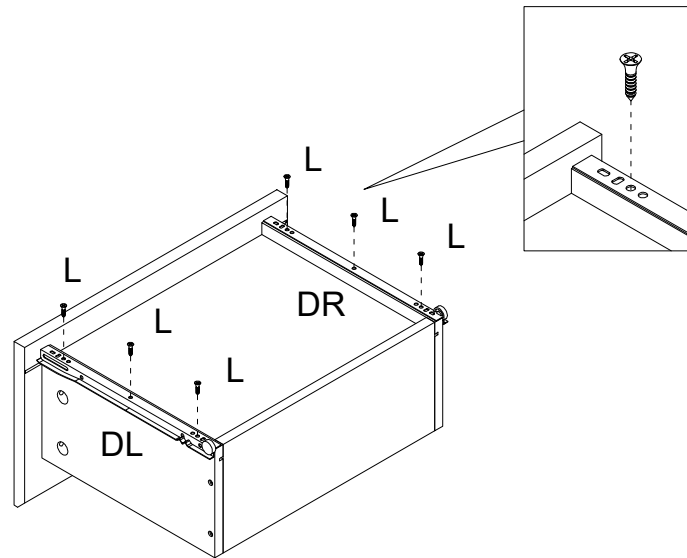

x 2


Tool required
Philips Head Screw Driver
(Not Provided)

 STEP 14:

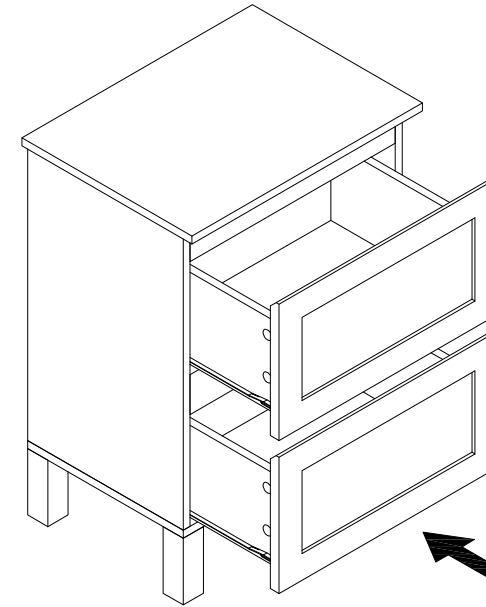


STEP 15:

 -  K x 1

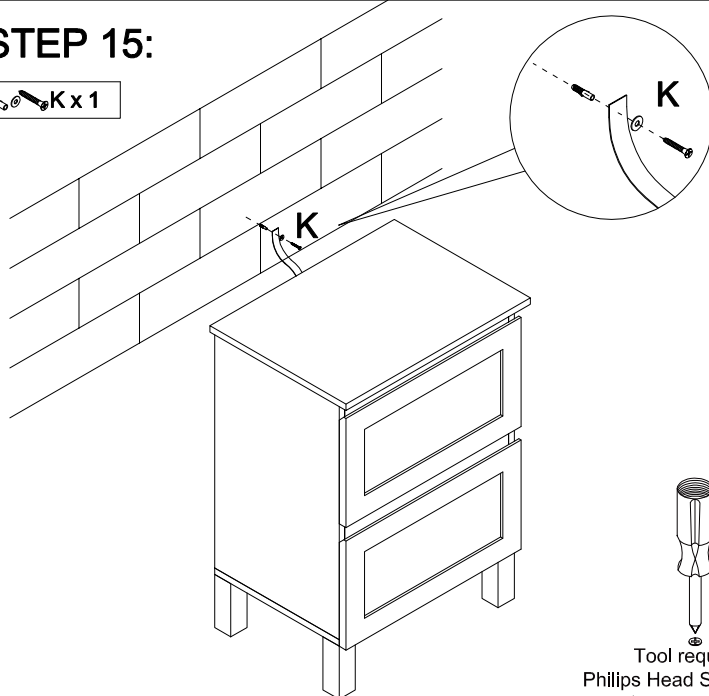

Tool required
Philips Head Screw Driver
(Not Provided)

 ⚠ WARNING

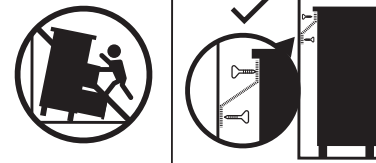

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.
- Furniture type is at risk of toppling over.

NEVER put a TV
on this furniture



This is a permanent label. Do not remove!

TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE
YOUR FURNITURE WITH
THE SUPPLIED WALL FIXING.
SCAN THE CODE FOR
MORE INFORMATION.

