

INSTANT BEACH TENT

READ ALL INSTRUCTIONS PRIOR TO USE:

-BEFORE SETTING UP YOUR SHELTER:

- › SELECT A LEVEL SITE FREE FROM ROCKS, BRANCHES AND SHARP OBJECTS.
- › DO NOT SET UP YOUR SHELTER UNDER A TREE.

THIS SHELTER REQUIRES AN ADULT FOR SETUP AND PACK DOWN. WE RECOMMEND YOU PRACTICE SETTING UP THE SHELTER BEFORE FIRST USE TO ENSURE ALL PARTS ARE PRESENT AND TO FAMILIARISE YOURSELF WITH THE SETUP / PACK DOWN PROCESS.




CAUTION. Pinch point hazard.
Keep hands and fingers clear of moving parts.

SETUP

UNPACK THE SHELTER IN AN OPEN AREA, ENSURING THERE ARE NO SHARP OBJECTS IN THE VICINITY AS THEY MAY DAMAGE FABRIC. AVOID UNPACKING ON CONCRETE OR HARD SURFACES AS ABRASION CAN DAMAGE THE FABRIC.


1

LAY SHELTER FLAT WITH HUB UPRIGHT.

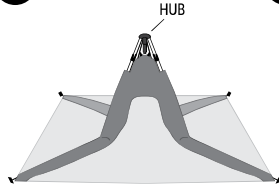


2

LIFT THE HUB UPWARD.

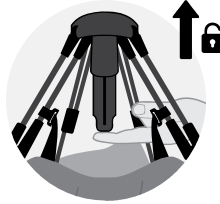

3


LOCK THE HUB BY PUSHING THE LOWER SECTION DOWN.

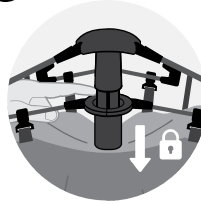

4

SECURE EACH CORNER OF THE SHELTER WITH PEGS. ON SAND USE SAND PEGS, ON HARDER GROUND USE STEEL PEGS.

FILL SAND POCKETS FOR ADDED STABILITY.

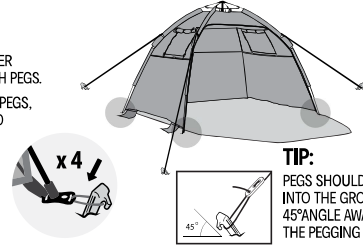

TIP:


PEGS SHOULD BE DRIVEN INTO THE GROUND AT A 45° ANGLE AWAY FROM THE PEGGING POINT.

TAKE DOWN

REMOVE SAND PEGS, GUY ROPES, EMPTY SAND POCKETS AND REMOVE PERSONAL ITEMS BEFORE TAKING DOWN THE SHELTER.


1

UNLOCK THE CENTRAL HUB AND COLLAPSE THE SHELTER BY PRESSING TOGETHER THE LOWER AND UPPER ARMS

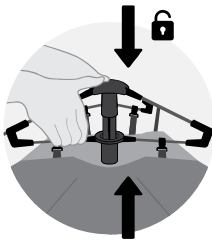

2

FOLD CORNERS UP TOWARDS THE HUB

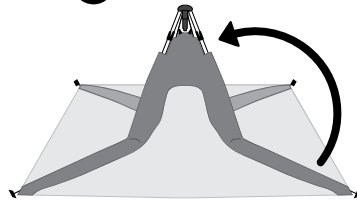

PACKING


DO NOT STORE WHEN DAMP OR WET. ENSURE THE SHELTER IS DRY BEFORE STORING.

1




ALLOW LOOSE FABRIC TO FLOWER OUT.

2

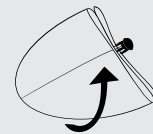

LAY THE SHELTER ON ITS SIDE KEEPING POLES TIGHT TO THE HUB.

3

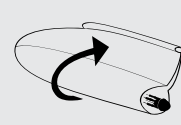

ROLL THE SHELTER UP BEFORE RETURNING TO BAG.

WARNING: TAKE CARE NOT TO GET FINGERS CAUGHT WHEN OPENING AND CLOSING THE TENT. THE UV E95+% RATING IS FOR THE SHADE MATERIAL ONLY. THE AMOUNT OF SUN PROTECTION RECEIVED WILL VARY DEPENDING ON THE CORRECT POSITIONING OF THE SHADE. REFLECTIVE RAYS CAN ALSO CAUSE SUNBURN. SUNSCREEN SHOULD BE WORN AT ALL TIMES.

WARNING: ALWAYS SECURE THE BASE OF BEACH TENT WHEN IN USE. DO NOT USE BEACH TENT IN WINDY CONDITIONS. HANDLE WITH CARE WHEN OPENING AND CLOSING. KEEP AWAY FROM OPEN FLAMES AND HEAT SOURCES. FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY.

CARE INSTRUCTIONS:

WIPE CLEAN WITH A DAMP CLOTH. DO NOT USE ABRASIVE MATERIALS OR SOLVENTS. ENSURE ITEM IS CLEAN AND 100% DRY BEFORE STORING. STORE IN A DRY PLACE. LONG EXPOSURE TO THE SUN MAY RESULT IN SOME LOSS OF COLOUR.

FIRE AND SAFETY PRECAUTIONS:

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

ALWAYS SECURE THE TENT WHEN IN USE. DO NOT USE IN WINDY CONDITIONS. ALWAYS ENSURE THE TENT IS FIRMLY SECURED TO THE GROUND BEFORE USE. THIS TENT IS DESIGNED FOR TEMPORARY USE ONLY AND NOT AS A PERMANENT STRUCTURE.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567