


anko

Flexible Travel TSA Lock

Instruction Manual

K:43566068|T:71057040 (Model: JLR-80352)

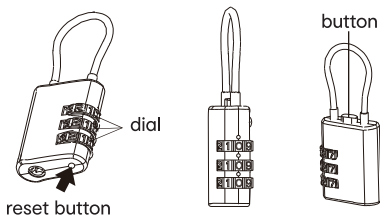

1. The default combination is 0-0-0. Please follow the steps below to set your new combination:
2. Press the button on the top of lock body to open the lock.
3. In the open state, press the Reset button at the bottom of the lock.
4. Set your desired personal combination by turning the dials, for example, 1-0-5
5. Press the button on the top of lock again, you can see the reset button back to original position.
6. New Combination setup successful.
7. To reset your lock, repeat the steps above.

Important: Please keep your combination safe. If you forget it, there is no way to open your lock!

105 mm

70 mm