

Instruction Manual

ANKO 10 PERSON FAMILY TENT

(Keycode: 43566990)

Product Image-



Parts list-

No.	Part name	Quantity	Image
1	Inner tent body	X1	
2	Flysheet body	X1	
3	Fibreglass pole	X3	
5	Steel pole	X3	
6	Support ropes	X9	
7	Pegs	X21	

Please read all instructions carefully and make sure you have all parts before starting to assemble.

Assembly steps-

Step 1,




Remove the fibreglass and steel poles from the bag. Assemble the fibreglass poles by connecting each section using the ferrules, join together the steel pole by insert the thin tip into the pole large end.



Fibreglass pole x3




Steel pole x3

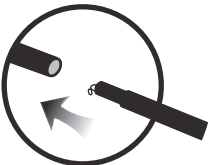

Step 2,


Spread out the inner tent body. Insert the poles through the sleeves on the tent body.

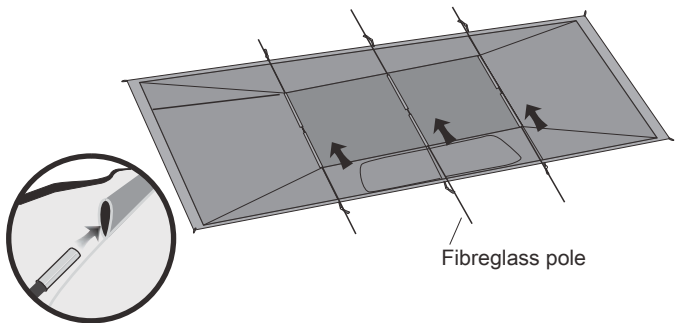

Fibreglass pole


Step 3,

Assemble the tent by forming an arch with the poles. Insert the ends of each pole into the pins in the rings at each corner. Then, attach the hooks to the poles.

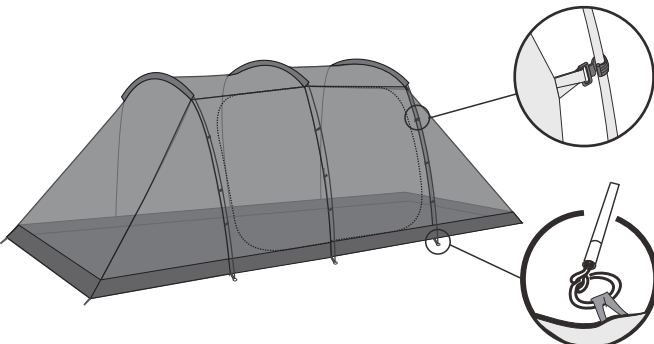

Step 4,

Place the flysheet over the inner tent. Buckle the bottom corners to the inner tent. Move the tent to your desired spot. Peg down the support ropes. Your tent is now set up.

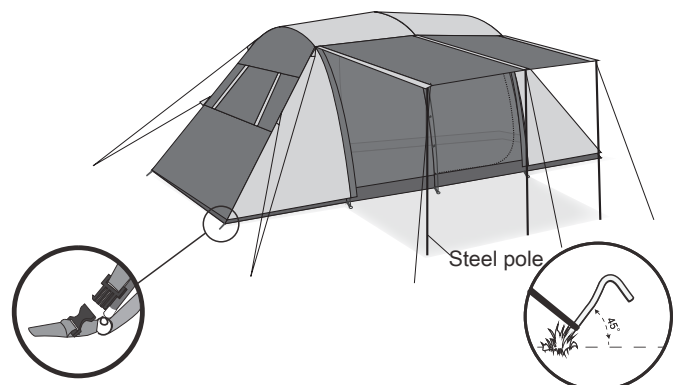

Steel pole

Warnings -

- THIS PRODUCT IS INTENDED FOR OUTDOOR RECREATIONAL USE ONLY.
- ADULT ASSEMBLY REQUIRED. KEEP CHILDREN AWAY DURING SETUP TO AVOID INJURY.
- DO NOT USE OPEN FLAMES, STOVES, OR HEATERS INSIDE OR NEAR THE TENT — RISK OF FIRE AND SUFFOCATION.
- ALWAYS SECURE THE TENT WITH ALL INCLUDED PEGS, GUY LINES, AND POLES TO PREVENT COLLAPSE OR WIND-RELATED DAMAGE.
- DO NOT PITCH THE TENT UNDER TREES WITH LOOSE BRANCHES OR IN FLOOD-PRONE AREAS.
- IN CASE OF EXTREME WEATHER (HEAVY WIND, RAIN, SNOW, OR LIGHTNING), EVACUATE THE TENT AND SEEK PROPER SHELTER.
- KEEP ALL FLAMES AND HEAT SOURCES AWAY FROM THE TENT FABRIC.
- DO NOT USE CANDLES, MATCHES, OR ANY OPEN FLAME IN OR NEAR THE TENT.
- DO NOT COOK INSIDE THE TENT.
- DO NOT SMOKE IN THE TENT.
- DO NOT STORE FLAMMABLE LIQUIDS INSIDE THE TENT.
- EXTINGUISH OR TURN OFF ALL LANTERNS BEFORE GOING TO SLEEP.
- CHOOSE A LEVEL SITE TO SET UP THE TENT, AWAY FROM OVERHANGING BRANCHES AND LOW-LYING AREAS THAT MAY FLOOD.

Care Instructions -

- DRY COMPLETELY BEFORE STORING: PACKING THE TENT WHILE DAMP MAY LEAD TO MILDEW, ODOUR, OR FABRIC DAMAGE.
- CLEAN ONLY WITH MILD SOAP AND WATER. DO NOT MACHINE WASH OR USE HARSH CHEMICALS.
- STORE THE TENT IN A COOL, DRY PLACE AWAY FROM DIRECT SUNLIGHT TO PROLONG FABRIC LIFE.
- REGULARLY INSPECT ZIPPERS, SEAMS, AND GUY LINES FOR WEAR OR DAMAGE.
- AVOID DRAGGING THE TENT ON ROUGH GROUND TO PREVENT TEARS OR ABRASION TO THE GROUND SHEET OR CANVAS.
- WIPE CLEAN WITH A DAMP CLOTH.
- DO NOT USE ABRASIVE MATERIALS AND SOLVENTS.
- ENSURE TENT IS CLEAN & DRY BEFORE PACKING OR STORING TO PREVENT DAMAGE FROM MOULD & MILDEW.

Made In China