

Instruction Manual

Anko 8 Person Bell Tent Flat Pack

(Keycode: 43567058)

Product Image-



Parts list-


No.	Part name	Quantity	Image
1	Tent body	X1	
2	Steel pole A	X1	
3	Steel pole B	X1	
4	Pole holder	X1	
5	Support ropes	X7	
6	Pegs	X13	

Please read all instructions carefully and make sure you have all parts before starting to assemble.

Assembly steps-


Step 1,

Spread out the tent body. Secure each corner to the ground with pegs where you want to set up your campsite. Take out the steel poles and connect them together.

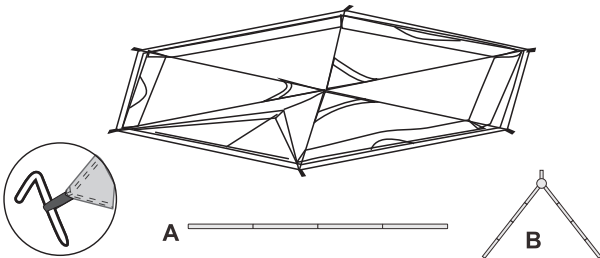


Step 2,

Peg down the tent where you want set up your camp site. Open the door zip, take the Pole A into the tent, erect the tent with pole A supported.

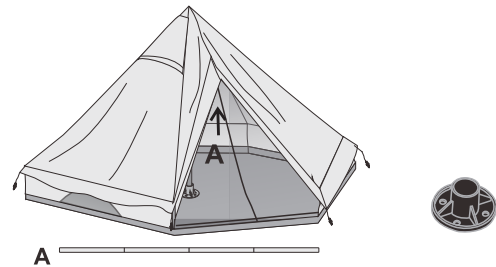


Step 3,

Take pole B into the tent, erect the front door with insert the 3 pole end into the plastic cap around the front door.

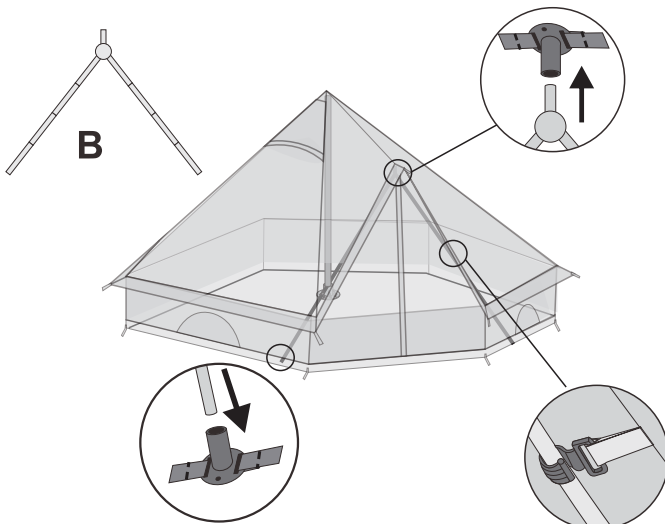

Step 4,

Pull out the support ropes that are already pre-tied to the tent and peg them down. Your tent is now ready to use.

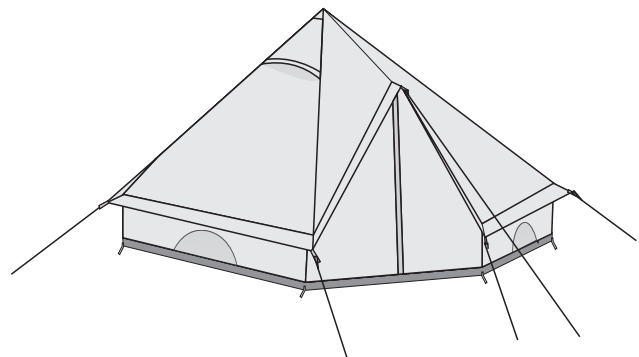

Warnings -

- THIS PRODUCT IS INTENDED FOR OUTDOOR RECREATIONAL USE ONLY.
- ADULT ASSEMBLY REQUIRED. KEEP CHILDREN AWAY DURING SETUP TO AVOID INJURY.
- DO NOT USE OPEN FLAMES, STOVES, OR HEATERS INSIDE OR NEAR THE TENT — RISK OF FIRE AND SUFFOCATION.
- ALWAYS SECURE THE TENT WITH ALL INCLUDED PEGS, GUY LINES, AND POLES TO PREVENT COLLAPSE OR WIND-RELATED DAMAGE.
- DO NOT PITCH THE TENT UNDER TREES WITH LOOSE BRANCHES OR IN FLOOD-PRONE AREAS.
- IN CASE OF EXTREME WEATHER (HEAVY WIND, RAIN, SNOW, OR LIGHTNING), EVACUATE THE TENT AND SEEK PROPER SHELTER.
- KEEP ALL FLAMES AND HEAT SOURCES AWAY FROM THE TENT FABRIC.
- DO NOT USE CANDLES, MATCHES, OR ANY OPEN FLAME IN OR NEAR THE TENT.
- DO NOT COOK INSIDE THE TENT.
- DO NOT SMOKE IN THE TENT.
- DO NOT STORE FLAMMABLE LIQUIDS INSIDE THE TENT.
- EXTINGUISH OR TURN OFF ALL LANTERNS BEFORE GOING TO SLEEP.
- CHOOSE A LEVEL SITE TO SET UP THE TENT, AWAY FROM OVERHANGING BRANCHES AND LOW-LYING AREAS THAT MAY FLOOD.

Care Instructions -

- DRY COMPLETELY BEFORE STORING: PACKING THE TENT WHILE DAMP MAY LEAD TO MILDEW, ODOUR, OR FABRIC DAMAGE.
- CLEAN ONLY WITH MILD SOAP AND WATER. DO NOT MACHINE WASH OR USE HARSH CHEMICALS.
- STORE THE TENT IN A COOL, DRY PLACE AWAY FROM DIRECT SUNLIGHT TO PROLONG FABRIC LIFE.
- REGULARLY INSPECT ZIPPERS, SEAMS, AND GUY LINES FOR WEAR OR DAMAGE.
- AVOID DRAGGING THE TENT ON ROUGH GROUND TO PREVENT TEARS OR ABRASION TO THE GROUND SHEET OR CANVAS.
- WIPE CLEAN WITH A DAMP CLOTH.
- DO NOT USE ABRASIVE MATERIALS AND SOLVENTS.
- ENSURE TENT IS CLEAN & DRY BEFORE PACKING OR STORING TO PREVENT DAMAGE FROM MOULD & MILDEW.

Made In China