

118 mm

 
anko

Instruction manual

K: 43567416 | T: 71052830

Model: JLR-80722

Water Ripple Light

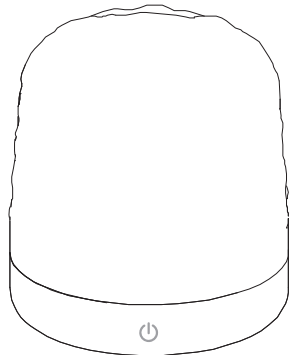

84 mm

Safety Instructions

Please read this instruction manual before using this product and follow all the safety instruction to avoid damage caused by improper use.

- Keep product and accessories away from rain or moisture, as this may result in fire or electric shock.
- Do not place this product and accessories in areas that are too high or too low in temperature, otherwise it may cause the product failure, fire or explosion.
- Do not disassemble or modify this product (including replacement of the built-in battery) and accessories without authorization.
- Do not allow children or pets to swallow the battery to avoid injury or explosion of the battery.
- Ensure the battery is installed correctly. Failing to do so could result in fire or explosion. Replace only with the same or equivalent type.
- The battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type can result in an explosion or the leakage of flammable liquid or gas.
- Do not use harsh chemicals, cleaning agents, or strong detergents to clean the product or accessories. Please use a clean, dry soft cloth to wipe the product or its accessories.
- Using unapproved or incompatible power supplies, chargers, or power supplies may cause fire, explosion, or other hazards.
- If the product malfunction due to electrostatic discharge or a brief power surge, turn off or disconnect power then turn on or reconnect it.
- The light source of this product is not replaceable, when the light source reaches its end of life, the whole luminaire shall be replaced.
- Use 5VDC 1A 5W SELV power source to charging the product.
- Use provide USB cable to charge the product only.
- For indoor use only.
- This appliance contains rechargeable batteries that are non-replaceable.


Package Contents:

- 1 x Water Ripple Light
- 1 x 30cm USB-C Cable (Type A to Type C)
- 1 x Remote Control (2 x 1.5 V AAA batteries are not included)
- 1 x Instruction Manual


Product Specification

Physical Size:	ø110*105mm
Battery type:	Rechargeable Li-ion battery
Battery Capacity:	1200mAh
Input:	DC 5V-1A
Continuous operation time:	Up to 5 hours
Charging time:	Approx. 2 hours

 
Product Specification

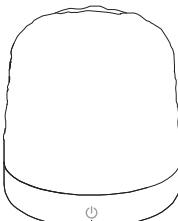

Switch sign

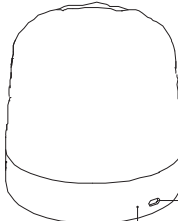 

Charging indicator light

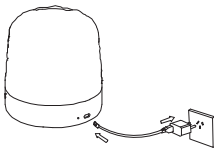 


How to charge

Connect the USBC cable to the DC5V/1A charger for charging, the indicator light displays red when charging, and turns green when fully charged.

How to use

1. Please fully charged the water ripple light before the first use.
2. Long press about 3 seconds of the switch sign button or use the remote control to turn on/off.
3. After turn on, short press the switch sign button or use the remote control to change the colors you want.

 - ① Reduce brightness
- ② Turn off the light
- ③ Turn on the light
- ④ Flash effect
- ⑤ Strobe effect
- ⑥ Fade effect
- ⑦ Smooth effect
- ⑧ Sixteen corresponding color Light
- ⑨ Increase brightness

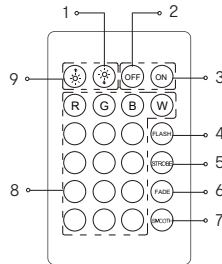

Remote Control Effects Description

1. Flash: Quickly switches between different colors in a flashing effect. The color changes instantly without any gradual transition.
2. Strobe: Activates and deactivates the motor.
3. Fade: Smoothly transitions from one color to another without abrupt changes, ensuring a seamless effect.
4. Smooth: Produces a soft warm white light. You can add other colors besides yellow and white by pressing the button.

Note:

When the Smooth mode is activated, the Flash, Strobe, and Fade effects will be temporarily disabled. To enable these effects again, please exit the Smooth mode by pressing the white or yellow light button, or press the Smooth button again.

Battery Installation (For Remote Control):

1. Battery installation by an adult is required.
2. Remove the battery compartment covers of the remote control, and insert 2 x 1.5 V AAA batteries (Not included).
3. Please notice the battery place of anode and cathode of the remote control.
4. Caution! Danger of explosion if the batteries are incorrectly replaced.

BATTERY WARNING:

- Batteries are to be inserted with correct polarity.
- Do not mix different types of batteries or new and used batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged.
- The supply terminals are not to be short-circuited.
- Remove batteries from the product when not in use for extended time or when batteries become exhausted.
- Dispose of batteries responsibly.
- Do not dispose of in fire.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA
CUSTOMER SERVICE:
KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567