


140mm

85mm

anko

Instruction Manual



STREAMING MIC

K: 43-567-638 | T: 71-054-506

Model No: EB400843

MADE IN CHINA

Features:

- 1 Microphone net
- 2 Volume knob (Rotate clockwise to increase volume, anti-clockwise to reduce the volume)
 - Normal working mode: indicator light gradually changes from red to rainbow
 - Mute mode: press the switch, pink indicator light
 - Noise reduction mode: Continuously clicking the switch twice, will hear the prompt tone
 - Long press to turn off the light color
- 3 3.5mm Earphone Jack
- 4 USB-A cable

RGB dynamic lighting effects:

3 mode

- Turn off lighting effect (Normal working mode/ Noise reduction mode)
- Pink lighting effect (Mute mode)
- Gradient lighting effect (Normal working mode/ Noise reduction mode)

Connection:

Product specifications:

Sensitivity: $-42 \pm 2\text{dB}$ (1.5V, 680K Ω ; 0dB = 1V/Pa, 1KHz)
Output Impedance: 2.2K Ω
Polar Pattern: Cardioid
Frequency Range: 40Hz-18,000Hz
Max SPL: 125dB
S/N: >66dB
Sampling Rate: 48kHz/16-bit
Input Rating: 5V $\overline{\text{---}}$ 180mA
Connection: USB-A plug

Settings:

• MAC OS

- Insert the free end of the included USB cable into the USB port on the computer. The light of the microphone will light up, indicating that the microphone is working. Your computer will automatically recognize the USB device and install the driver. But there may be no pop-up windows or messages.
- Click on the Apple symbol at the top left of your screen, and select System Preferences.

- Next, click Sound to display the Sound preference pane.

- Click the Input tab and select the "USB Microphone" as the device for sound input, and adjust the input volume.

- Click the output tab and make certain "USB Microphone" is selected as the default output device. (This should have happened automatically.) Then adjust the output volume.

Windows

- Input settings
Plug the USB cable into your computer. The mic's light will illuminate, mic come to the working status.
(1) Right-click the speaker icon at the bottom right of the screen and Click "Open sound settings".

- Select the recording tab, and then select "USB Microphone" As the default device. If there is no change, please reset the computer and reinsert the USB port.

- Adjust input volume-Double click the "USB Microphone" to open the Microphone Properties window.(Note:Make sure that the microphone gain and headphone volume knob is not on the zero position.

- Output settings
Output computer audio from the microphone headphone jack
(1) Please insert the earphone (the earphone not included) into the earphone jack on the base, in the "Sound" menu, Select the "Playback" tab and set "USB Microphone" as the default device.

- Double click the speaker ("USB Microphone") is being used>>Properties>>levels>>drag progress bar to adjust volume of output.

12 Month Warranty:

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions were provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3007 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us