

Tri-mode
Gaming Wireless
Keyboard

Instruction Manual



The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.
IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Safety Instructions:

- Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper use.
- › Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
 - › Use this device solely for its intended purpose.
 - › Only use this appliance indoors.
 - › Keep away from all hot surfaces and naked flames.
 - › Always use on a level, stable, clean, dry surface. Keep away from heat and cold, dust, direct sunlight, humidity and drops or jets of water.
 - › Do not immerse the appliance in water or in other liquids.
 - › Do not open the housing under any circumstances.
 - › Do not introduce any objects into the interior of the housing.
 - › Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

Package Contents

- 1 × Keyboard
- 1 × User manual
- 1 × USB-C cable
- 1 × USB receiver

Product specification

Physical size:	313*102*40mm
Wireless specification:	2.4G/BT5.0
Cable:	1.5m USB-C cable
Input rating:	5V≈1A (Wired mode)
Battery:	Built-in 3.7V 2000mAh lithium battery
Charging time:	Approx. 2-2.5 hours
Operation time:	Approx. 10 hours
Operating distance:	10 meters (Wireless mode)
Support:	Windows/macOS systems

Tri- Mode Connection

Bluetooth mode:

- Turn the power switch to the ON position.
- To enter Bluetooth mode: Short press fn + E/R/T.
- To start pairing: Long press fn + E/R/T for 3 seconds. The corresponding key light will flash rapidly, indicating pairing mode.
- On your device, discover the Bluetooth keyboard name: Anko BT1 3.0 / Anko BT2 3.0 / Anko BT3 3.0 (for Bluetooth 3.0) Anko BT1 5.0 / Anko BT2 5.0 / Anko BT3 5.0 (for Bluetooth 5.0)
- Select either BT 3.0 or BT 5.0, and the keyboard will connect automatically.
- If you have used Bluetooth mode to connect several equipment, the keyboard will work for the latest device connected, when the device is found, the system will re-connect automatically.
- If the device not connected, the light goes out and the keyboard goes to sleep.

2.4GHz wireless mode:

- Turn on the keyboard, short press fn + Q to enter 2.4G mode, and then long press fn + Q key combination for 3 seconds to enter pairing mode.
- Insert the USB receiver into a free USB port on PC, Laptop or Tablet, the indicator flashes quickly, exit the pairing after successful pairing.
- If the pairing device cannot be found for 30 seconds, the pairing mode is exited, the light goes out and the keyboard goes to sleep.

Wired mode:

- Plug the USB-A head of cable into a free computer's USB interface, and plug USB-C head into the keyboard.
- The computer will recognize the receiver and install the driver automatically.
- Turn on the keyboard and connect the USBC cable, short press fn + W to enter wired mode.
- If the keyboard is pairing in wireless mode and plug the USB-C cable to power source at the same time, the USB-C cable will be worked as charging cable.

Product Overview



fn Combination Keys Function

- fn

+

Q

2.4Ghz
- fn

+

I

prtsc
- fn

+

A

mac
- fn

+

W

Wired
- fn

+

O

scroll
- fn

+

S

win
- fn

+

E

Bluetooth
- fn

+

P

pause
- fn

+

X

Turn on/off the light
- fn

+

R

Bluetooth
- fn

+

J

home
- fn

+

[

Light flash slow
- fn

+

T

Bluetooth
- fn

+

K

end
- fn

+

]

Light flash speed up

- fn

+

[

Change the lighting 19 mode
- fn

+

^

Lighting brightness up
- fn

+

]

Lighting brightness down
- fn

+

>

Light flashing direction change
- fn

+

<

Light flashing direction change

fn + left ctrl:	Switch between the number pad function and F1-F12 function key mode (default is number pad function).
fn + right ctrl	Swap functions between the main key area and the editing key area (default is main key function). For example, the "I" key outputs the character "I" by default. After pressing fn + I, it outputs the "prtsc" function. Once fn + right ctrl is activated, pressing the "I" key alone will output the "prtsc" function. The same applies to the J/K/O/P keys.
fn + spacebar	Press and hold for 3-5 seconds. The keyboard backlight will flash three times to indicate that lighting effects have been cleared and factory settings have been restored.

Sleep Mode (working under 2.4GHz and Bluetooth mode)

The keyboard will enter sleep mode if it is no used for 2 minutes. Please press any key to wake it up.

Before first use

- Unpack the device and check if all parts are there and not damaged.
Should this not be the case, return the product to store for replacement.
- Danger of suffocation! Keep all packaging materials away from children.

- Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
- Remove all protective foils and packaging material prior to use.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you

purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567