


Bluetooth® Portable Pro Speaker Operating Instructions

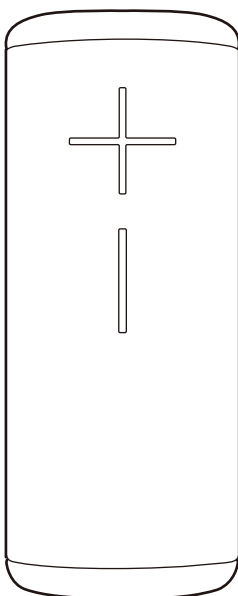


Includes:

- › Bluetooth® waterproof portable speaker
- › charging cable (micro USB cable)
- › audio cable (3.5mm AUX cable)
- › hand strap
- › user manual



This product shall be supplied by a power source not exceeding PS1 only. › This Bluetooth Speaker shall be charged by the supplied charging unit only.
CAUTION › The batteries in this product are not replaceable. › During Use, Storage or Transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. › If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. › Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could result in the battery exploding.

Function overview

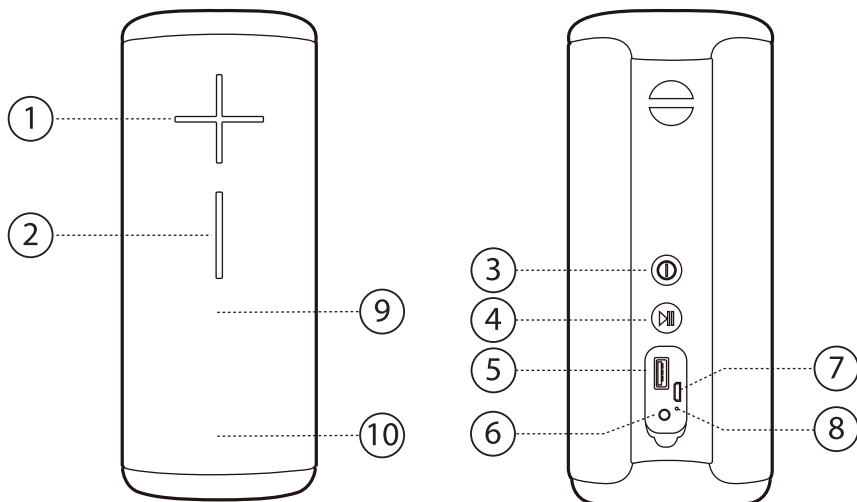

1. Volume Up/Next Song
2. Volume Down/Previous Song
3. Power ON/OFF or TWS Mode
4. Play/Pause
5. USB Port

6. AUX-IN Port
7. Micro USB Charging Port
8. Charging Indicator
9. Microphone
10. LED Indicator

How to use this speaker:

Function Operation

Pause Press ►|| button

Play Press ►|| button

Next Song Press and hold + button to skip the track

Previous Song Press and hold - button to skip the track

Volume Up Press + button to increase the volume

Volume Down Press - button to decrease the volume

Power ON/OFF Press and hold ⏻ button

TWS Pairing Double press ⏻ button

Bluetooth® Pairing

- › Press and hold the Power button until the LED indicator flashes rapidly, indicating it is ready to pair with a Bluetooth® device.
- › In the Bluetooth® menu on your device, search for **anko42976608**, **anko43567751** and connect.
- › Once the speaker is successfully connected, the indicator will remain ON and you can now play music through the speaker. When playing music, the indicator will flash slowly.

AUX-IN Function

- › Use a 3.5mm audio cable to connect your device through the AUX-IN port. Choose the music from your media device and play.

TWS Pairing

TWS pairing will not work if either speaker is already connected to a Bluetooth® device. Please disconnect all speakers first before TWS pairing.

- › Two speakers of the same model can be coupled to make a TWS pair, double press the Power ON/OFF button of either speaker and you will hear a prompt sound once paired successfully. Then connect the speakers to a Bluetooth® device and enjoy the music.

USB Operation

- › Insert a USB drive into the USB port. You will hear an alert and the speaker will play the music automatically from the USB drive.

Receiving and Ending Calls

- › When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer/hang up the call, press the Play/Pause button. To reject the call, press and hold the Play/Pause button. Press the Play/Pause button twice to dial last call.

Charging

- › Please use provided USB cable for charging. Plug one end to USB port of the unit and the other end to a USB port, wall charger or other 5V charging device.

IPX7

- › Designed to stop powerful water splashes, such as heavy rainfall, showers or strong jets of water from damaging internal components. Waterproof for outdoor use with cover closed securely.

Specifications:

Bluetooth Verson:

5.3

Working distance:

10m

Output:

2 x 15W

Music time:

3 Hours at 100% volume

6 Hours at 50% volume

Talk time:

4 Hours

Charging voltage:

5V d.c.

Battery capacity:

7.4V/2000mAh

Charge time:

2 – 3 Hours

Waterproof:

IPX7

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations for instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Services Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



WARNING Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

MADE IN CHINA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567