

Starlight Secret Journal

 
6+
years



CONTENTS


- Secret Diary x 1
- Notebook x 1
- Marker x 1

SECRET DIARY

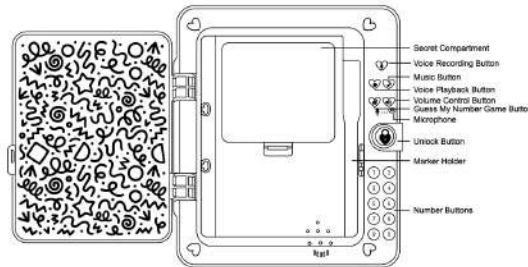

BATTERY INSTALLATION

 1. Unscrew to open battery cover, insert 3 x 1.5V AA batteries.
2. Replace battery cover.
Attention: remove batteries during long periods of non-use.



PASSCODE SETTING AND UNLOCKING INSTRUCTIONS

The passcode for the diary consists of four digits. The diary will be opened automatically when the battery is loaded. In the unlocking state, press the unlock button and input the passcode twice according to the prompt to complete the passcode setting.

NOTE: If you forget password, it can be reset by removing and reinstalling the batteries.

1

HOW TO CHANGE YOUR PASSWORD

Press and hold the unlock button for 1.5 seconds in the unlocking state to reset the passcode. Then wait for the prompt to input the new passcode twice to set your passcode.
If you forget the passcode, please remove the batteries and re-install them. The diary will be automatically unlock and clear the old passcode.

FUNCTION INSTRUCTIONS

1. Unlock Button

Press this button and then enter your 4-digits passcode to open the cover.

2. Voice Recoding Button

Press the voice recording button to enter the recording mode, then press a 'number' button to record your voice. Each number button can only store about 40-second recording. The Secret Diary will prompt you to press the number button again to clear the old recording if the number button has already been recorded on. After recording, press the recording button again to end the recording. You can press the voice playback button to start the voice playback mode and then press the number button to play back the recording.

Note: The recording and voice playback recording functions can only be used in the unlocked state.

3. Voice Playback Button

Press this button to enter voice playback mode, then press a number button to playback the voice input assigned to that number. You have to enter your passcode before entering this mode if the diary is locked.

2

4. Music Button

Press this button to enter the music mode. There are 10 built-in melodies in total, each number button corresponds to a melody.

5. Volume Control Button

Press this button to adjust the volume.

6. Guess My Number Game Button

Press this button to enter the game mode. Listen to the instruction and answer the question by pressing the correct number button.
Example 1: "What I am thinking the number should more than 0 but less than 10. Can you find out what my number is?" Press the number button to answer the question. You will be prompted "the number you entered is too big/too small" if your answer is incorrect.

Example 2: "How much is 5 minus 2?" Press the number key to answer it. It will switch to the next question if the answer is correct or incorrect for three times.

Note: It will automatically exit this mode if there is no answer after repeating the question two times.

7. Number Buttons

Press the buttons to enter your passcode or to input numbers in certain activities.



8. Microphone

The microphone is used for the voice activation feature.

The recommended distance between the microphone and your mouth is around 10-15 cm.



9. Secret Compartment

The compartment can be used to store small objects in to keep them a secret.



3

10. Notebook replacement

The included notebook can be replaced with other notebook in standard A6 size. It is recommended that the maximum page count of the replacement notebook is 100 pages (50 sheets).


Note: The replacement notebook can be secured with two included book holders of dairy.



11. Automatic Shut-Off

The diary will shut off automatically if it has not had any input after several minutes. It can be turned on again by pressing the unlock button or any functional buttons.

Note: The diary will automatically turn off if the batteries are low on power.

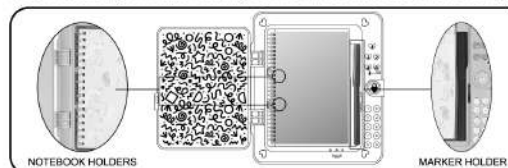

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

ADDITION: ALL ART MATERIALS LIKE MARKERS, MAY CAUSE STAINS. ALWAYS PROTECT CLOTHES, CARPETS, WORK SURFACES, FURNITURE AND OTHER OBJECTS. ALWAYS USE A PROTECTIVE COVER TO PREVENT STAINS. AVOID INGESTION AND EYE CONTACT. WASH HANDS AFTER USE.

PLEASE KEEP THE INCLUDING FOR FUTURE REFERENCE.
PRODUCT HAS BEEN ELIMINATED FROM RANGE DESIGN.
K: 43-573-035 | T: 71-215-013

WARNING: CHOKING HAZARD
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.



4