 




Bottle Brush Cleaner
MiMo-23
User Manual

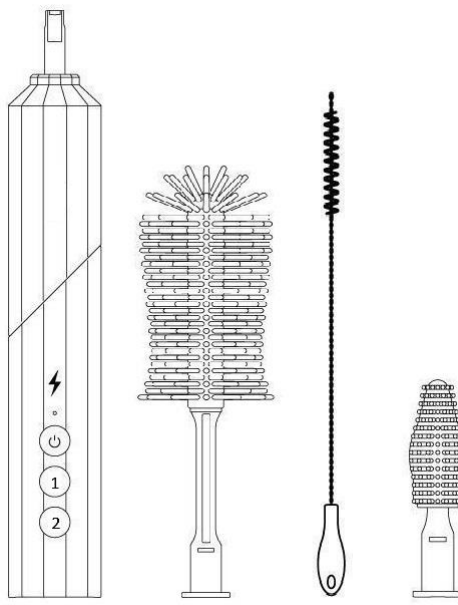

PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE

 
1. Please read all instructions carefully before using this product.
2. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
3. Do not immerse the main unit in water or other liquids to avoid damage to the motor.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. In the absence of supervision, the cleaning and maintenance work should not be done by a child.
7. Keep the appliance away from flammable and explosive substances.
8. Use of accessories not recommended or supplied with the product may cause fire, electric shock or personal injury.
9. For electrical safety, any repairs to the product should be carried out by a qualified electrical person only or the product must be disposed of.
10. This appliance must be always used in accordance with the user instructions supplied with the product and must not be used for other purposes.
11. Misuse may cause serious injury.
12. Switch OFF the appliance before changing accessories.
13. Do not operate the product near any explosive, flammable object or liquid.
14. Keep hair, loose clothing, and all parts of body away from moving parts.
15. Do not make the product wet except the brushes.
16. This appliance contains batteries that are non-replaceable.
17. This appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
18. Fix the brushes firmly before operation.
19. Always wear eye protection when using the scrubber with irritating substances. Rubber gloves are also recommended.
20. Do not insert attachments/accessories when the unit is running.
21. Do not operate without charging port cover in place.
22. For cleaning, please refer to CLEANING AND STORAGE section.

CAUTION!

23. The product has built-in lithium-ion batteries. Pay attention to the following:
 - a) Only use and store the product in an environment where the temperature is between -5°C and $+35^{\circ}\text{C}$.
 - b) If not used for a long time, re-charge every three months to prevent battery damage.
 - c) Charging time may be longer when the room temperature is below 10°C .
 - d) Charge the battery when the battery power goes low, avoid allowing the battery to go flat.
24. DO NOT squeeze, puncture, or short circuit the product or put it into water, fire or use in an environment where the temperature is higher than 60°C .
25. This product is for household use only and not designed for commercial use.
26. Do not expose the product to high temperatures (above $+35^{\circ}\text{C}$), strong magnetic fields, near flammable and explosive gases (such as natural gas, methane, etc.) to avoid accidents such as abnormal operation or fire.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

KNOW YOUR BOTTLE BRUSH CLEANER

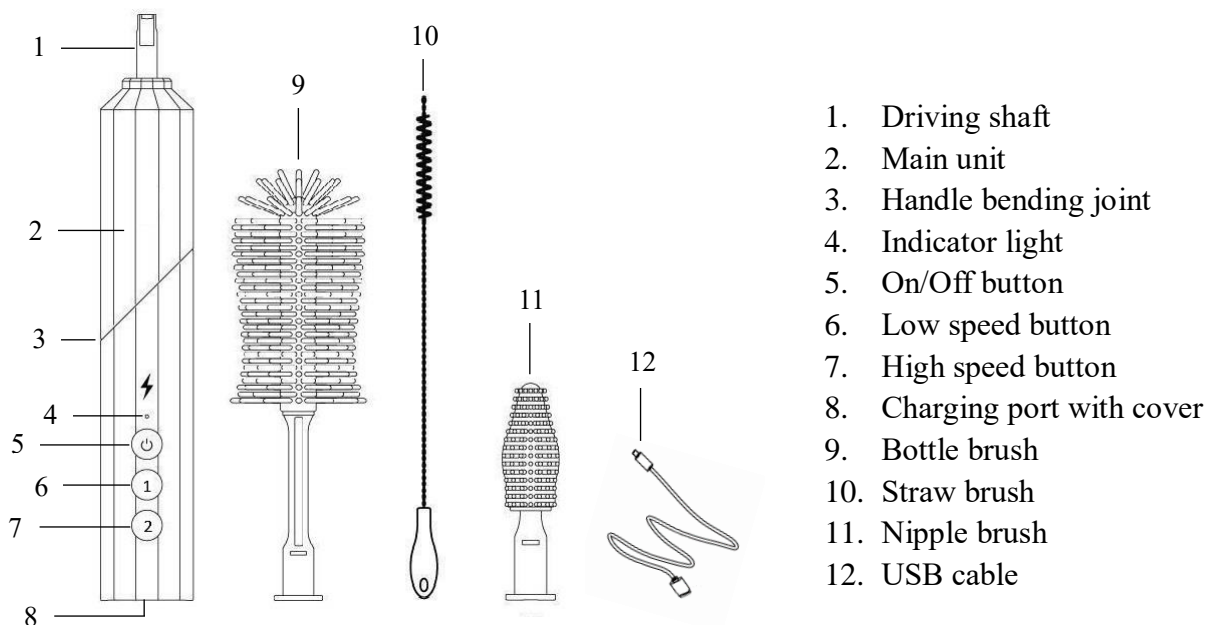

IMPORTANT!

Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, return the product to respective Customer Service Centre.

 
When using the appliance for the first time, carefully remove all internal and external packaging and dispose them responsibly.

BEFORE FIRST USE

- Fully charge the appliance before first use.
- Always power off the appliance before charging.
- The supplied USB charging cable should be inserted into the standard USB power source rated at 5Vd.c. 1A specification.
- Red indicator lights up when charging, and the light becomes green when fully charged.
- The charging time is around 2 hours.

USE YOUR BOTTLE BRUSH CLEANER

1. Select the appropriate brush according to your cleaning requirements, align with the driving shaft and push on until hear a click. To take off the brush, just pull it off. Make sure the charging port is properly sealed by the cover. Now the appliance is ready for use.
2. To choose a comfortable position to use the brush, rotate 180° until you hear a click sound.
3. Press On/Off button, the blue indicator flashes and the appliance is now standby. The appliance will automatically shut off if no more operation.
4. Press button 1 or 2 to choose the speed, the blue indicator lights up and the appliance start running.

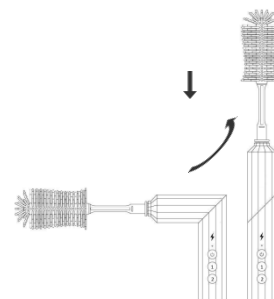

Notes:

The indicator will flash in red when the battery is low and will go out after 1 minute.

Excessive force may stop the motor, press On/Off button to restart.

5. Press On/Off button again to turn off the appliance, and the indicator light goes off.

Notes:

- Make sure the appliance is fully charged before each cleaning. The normal working time is around 1-1.5 hour after fully charged.
- This appliance can work with different kinds of cleaners such as spray, foam, gel, liquid. Frictional cleansers should not be used.

⚠ Warning! Please wear safety gloves and glasses for safety.

- Power off the appliance before removing from the cleaning surface to avoid spraying from the rotating brush.
- This appliance is a cleaning tool. Do not use on human or live body.

CLEANING AND STORAGE

- Clean the appliance and its accessories after each use.
- Do not use a steel ball, abrasive cleaner or corrosive liquid (such as gasoline, acetone) to clean the product.
- The main unit can be wiped with a slightly damp cloth. Do not rinse with soap or spray water or other liquids to avoid damage to the appliance.
- Soak the brushes in soapy water before rinsing.
- Ensure the product is clean and dry before storage.
- Store the product indoors.
- This product contains a Li-ion battery. It should be stored in a clean, dry, ventilated room with an ambient temperature range of -5°C to +35°C and a relative humidity of 25% to 75%.

TECHNICAL SPECIFICATION

Input: 5Vd.c. 1A

Battery: Li-ion 3.7V 1200mAh

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us